C01M-A

安装方法/
Installation method

(A)*4

① A A A

注意：柜体用于叠高搭配使用时不需安装五金A
Note: When the cabinet is used for stacking
height, hardware A is not required

注意：柜体用于叠高搭配使用时不需安装五金A
Note: When the cabinet is used for stacking
height, hardware A is not required

1

let me just write properly.

C01M-A

安装方法/
Installation method

(C)*1

墙体
Wall

步骤1
step1

步骤2
step2

C

C ①

注意：
安装防倒器前需先把其中一颗背板螺丝卸出
Attention:Before installing the anti
fall device, one of the back plate
screws needs to be removed first

2

注意：须安装防倒器
Note: An anti-tip device must be
installed

3

(B)*2

B

或者
or

B

B

注意：柜体叠高时不需安装五金A
Note: Hardware A is not required when
the cabinet stack is high

注意：1.当选购多个柜体组合摆放时需安装五金B
2.安装五金B前需先把背板螺丝卸下，再用卸下的背板螺丝锁紧五金B
Attention:
1. When selecting and using multiple cabinet combinations for
placement, hardware B needs to be installed
2. Before installing hardware B, remove the back plate screws
first, and then lock hardware B with the removed back plate screws

步骤1
step1

步骤2
step2

B

4

3/3

LINSY 林氏家居	五金表/Hardware list	部件表/Parts List			

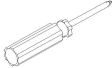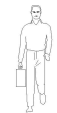## 安装示意图/Assembly Instruction

产品名称 Model NO.	C01M-A
产品规格 Specification	700*380*366mm
安装工具 Tool	安装人数 Installer

五金表/Hardware list

(A)* 4	(B)* 2	(C)* 1
脚钉 Foot nails	铁床条 Hardware piece	防倒器 Anti-fall device

部件表/Parts List

编号NO.	名称Name	规格（mm）Specification	数量QTY	材质Material
①	整装柜子 Packaged cabinet	700*380*360	1	实木 Wood
1-1	上柜 Upper cabinet	700*380*360	1	实木 Wood
1-2	层板 Shelf	319*354*20	2	实木 Wood
1-3	背板 Back board	684*342*9	1	实木 Wood

1-1

1-2

1-2

1-3