


林氏木业


安装示意图

产品名称 OI2E-A三斗柜 产品规格 450*394*668mm















安装工具

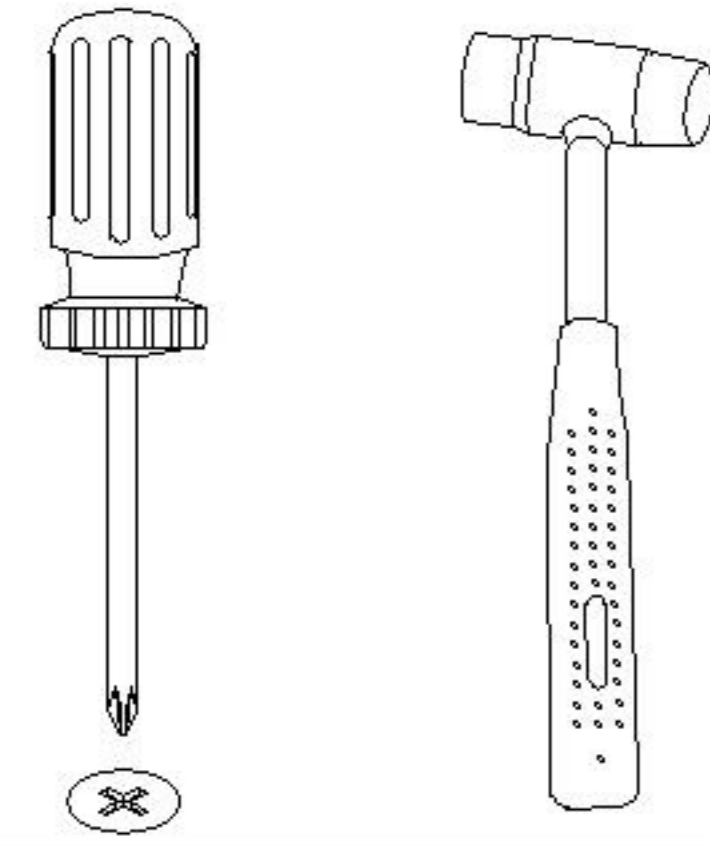

安装人员

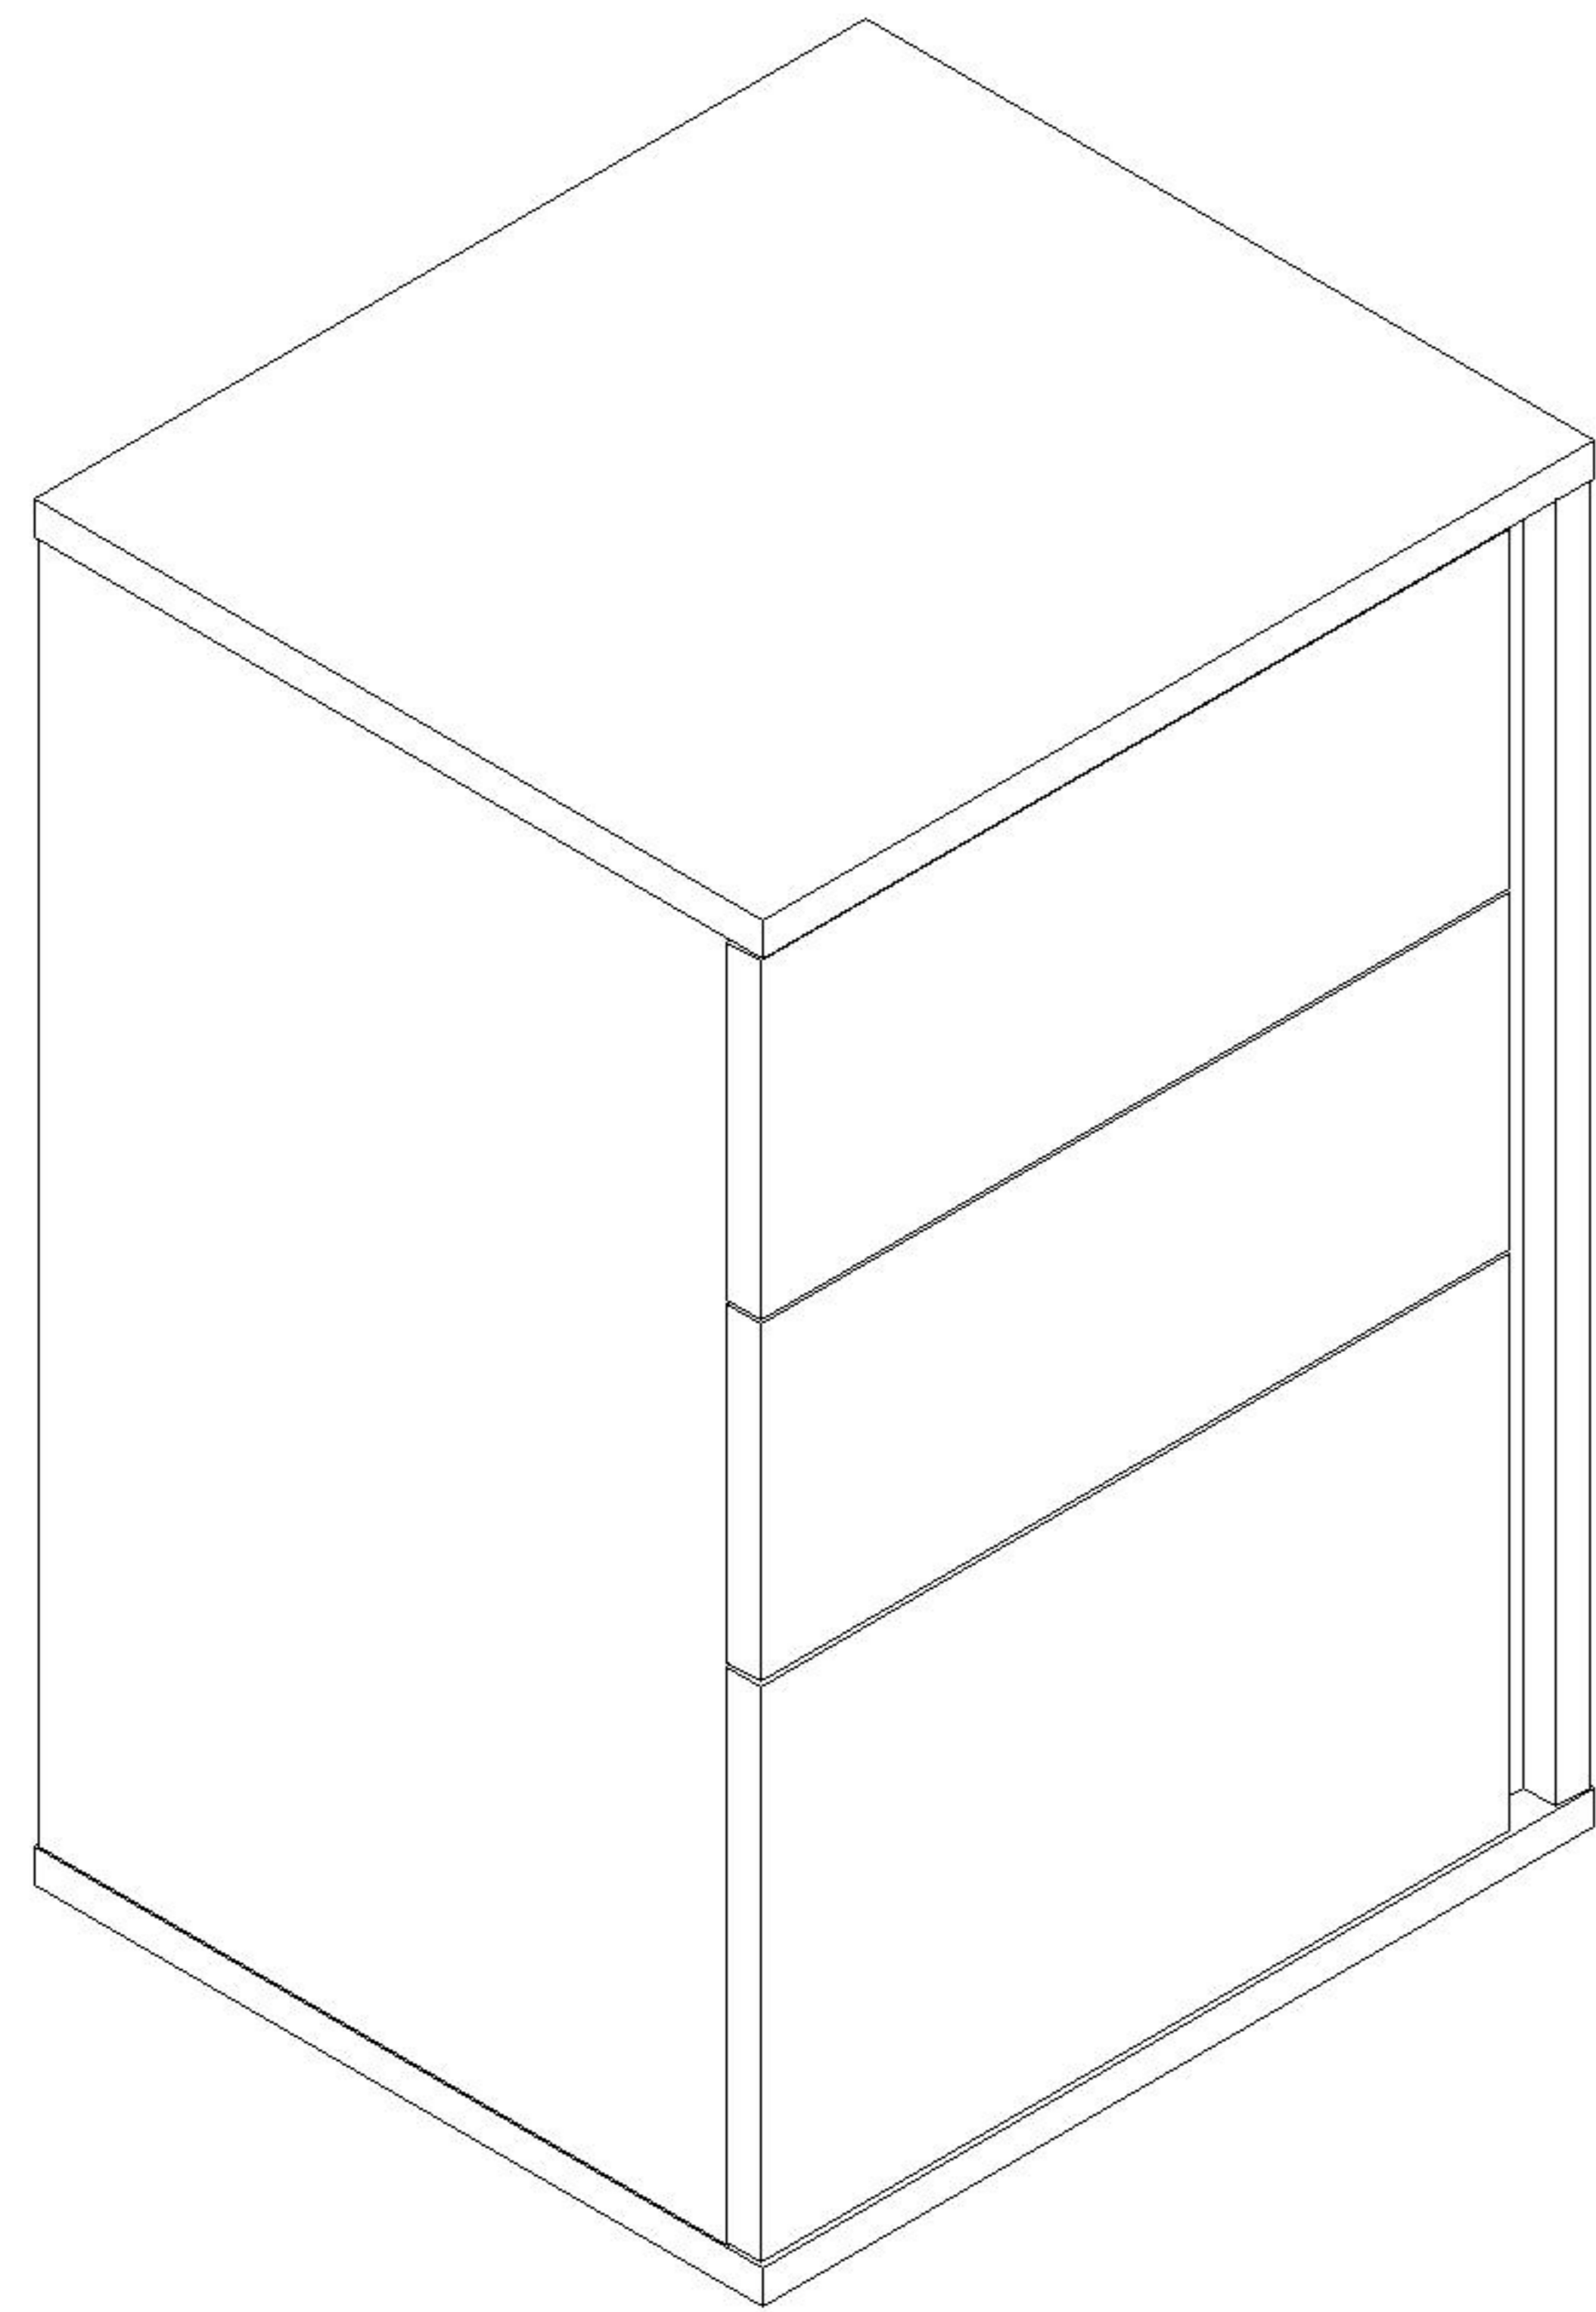

五金表

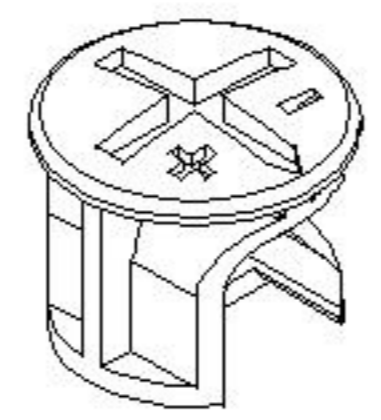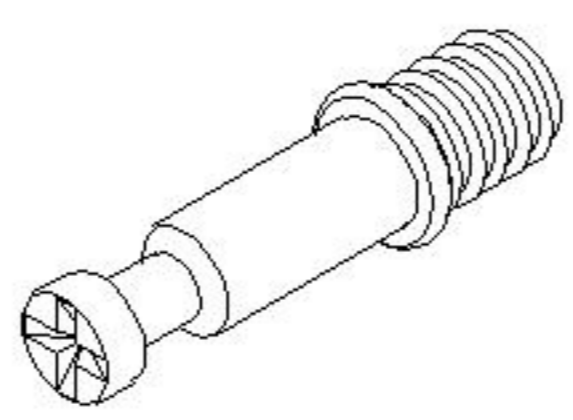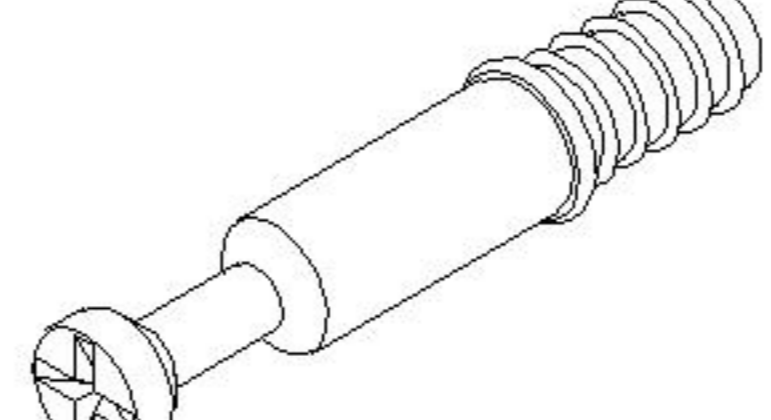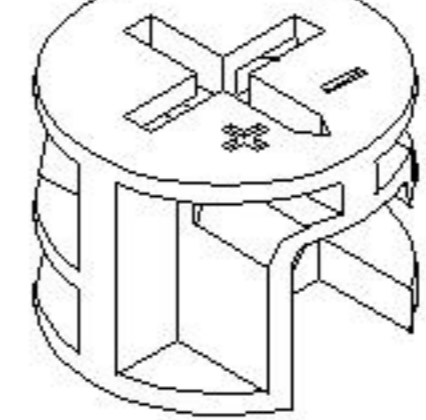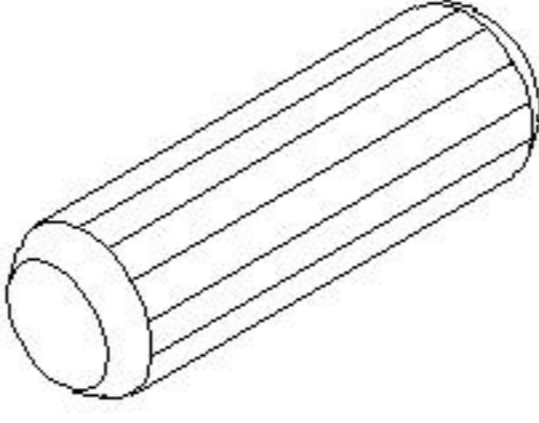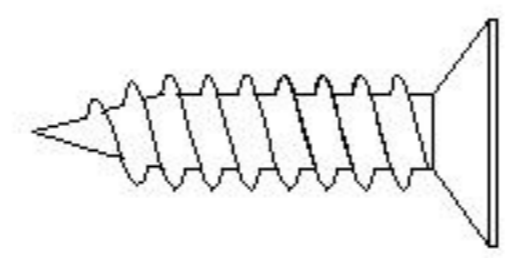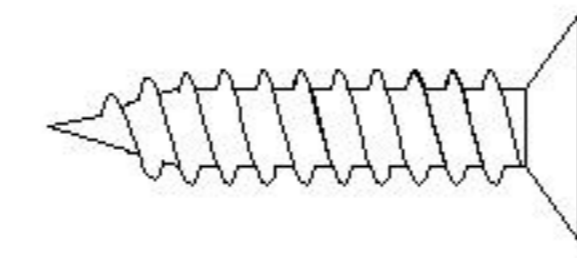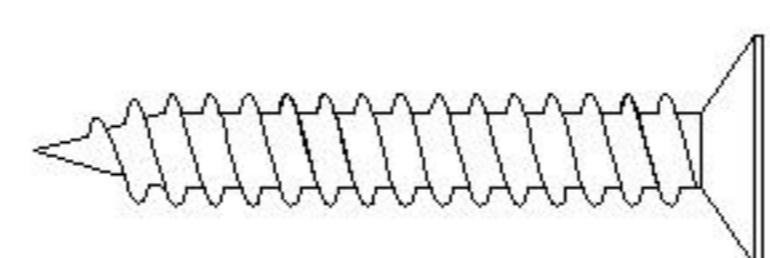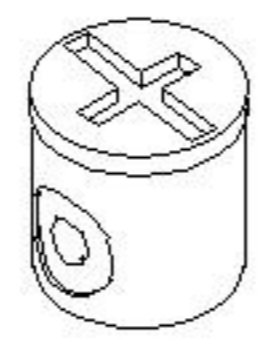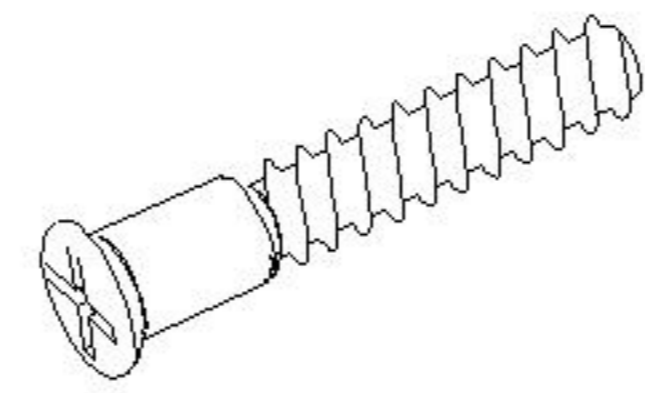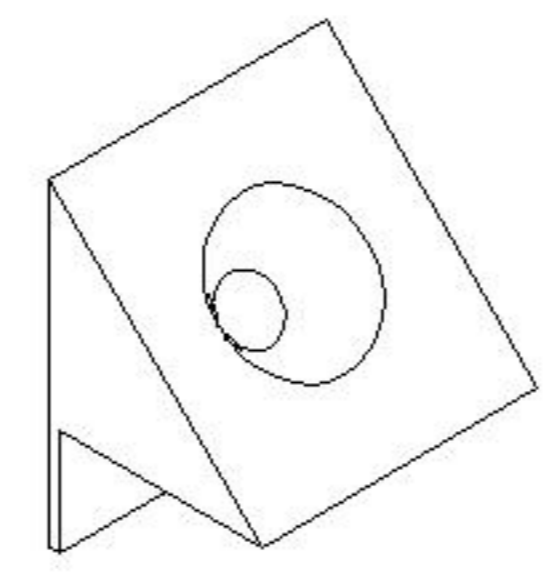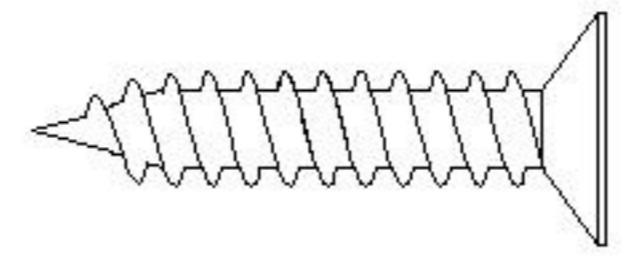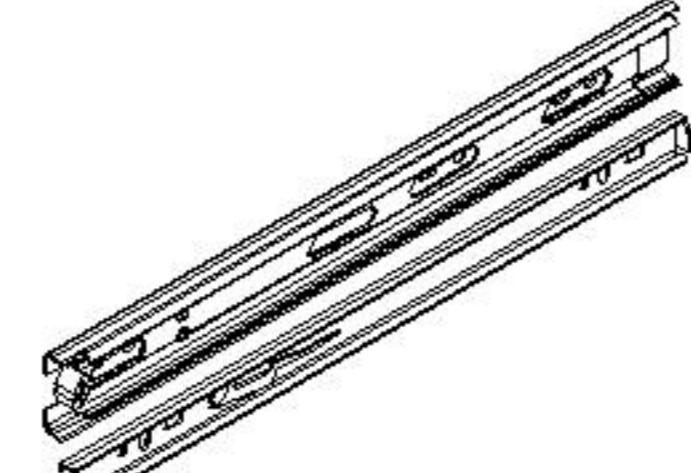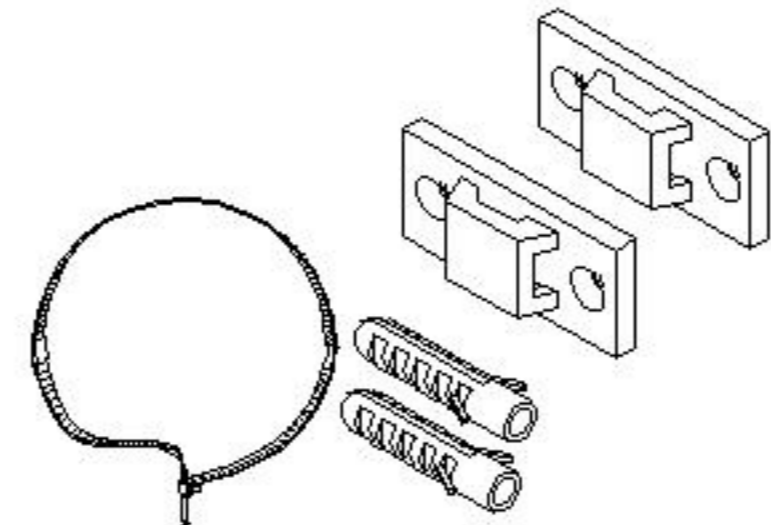
 (A)*13 小三合一锁饼	 (B)*13 小二合一杆	 (C)*8 二合一螺杆	 (D)*8 大三合一锁饼
 (E)*13 木榫Ø8x30mm	 (F)*38 自攻螺丝M3.5x12mm	 (G)*4 自攻螺丝M3.5x16mm	 (H)*13 自攻螺丝M4x40mm
 (I)*13 塑料螺母	 (J)*6 过山丝-M7x38mm	 (K)*4 背板扣	 (L)*6 自攻螺丝M4x30mm
 (M)*4 脚垫	 (N)*3 三节滚珠导轨-12"	 (O)*1 家具防倒器-白色	

部件表

编号	名称	规格	数量	材质
①	面板	450*394*18	1	三胺板
②	底板	450*394*18	1	三胺板
③	右侧板	614*392*18	1	三胺板
④	左侧板	614*374*18	1	三胺板
⑤	右中侧板	614*336*18	1	三胺板
⑥	竖条	614*58*18	1	三胺板
⑦	长垫条	389*58*18	1	三胺板
⑧	短垫条	286*58*18	2	三胺板
⑨	背板	624*422*5	1	三胺板
⑩	上抽屉面板	405*168*18	2	三胺板
⑪	上抽屉后板	304*142*12	2	三胺板
⑫	上抽屉右侧板	340*142*12	2	三胺板
⑬	上抽屉左侧板	340*142*12	2	三胺板
⑭	抽屉底板	314*336*5	3	三胺板
⑮	下抽屉面板	405*270*18	1	三胺板
⑯	下抽屉后板	304*174*12	1	三胺板
⑰	下抽屉右侧板	340*174*12	1	三胺板
⑱	下抽屉左侧板	340*174*12	1	三胺板


0I2E-A三斗柜

安装方法

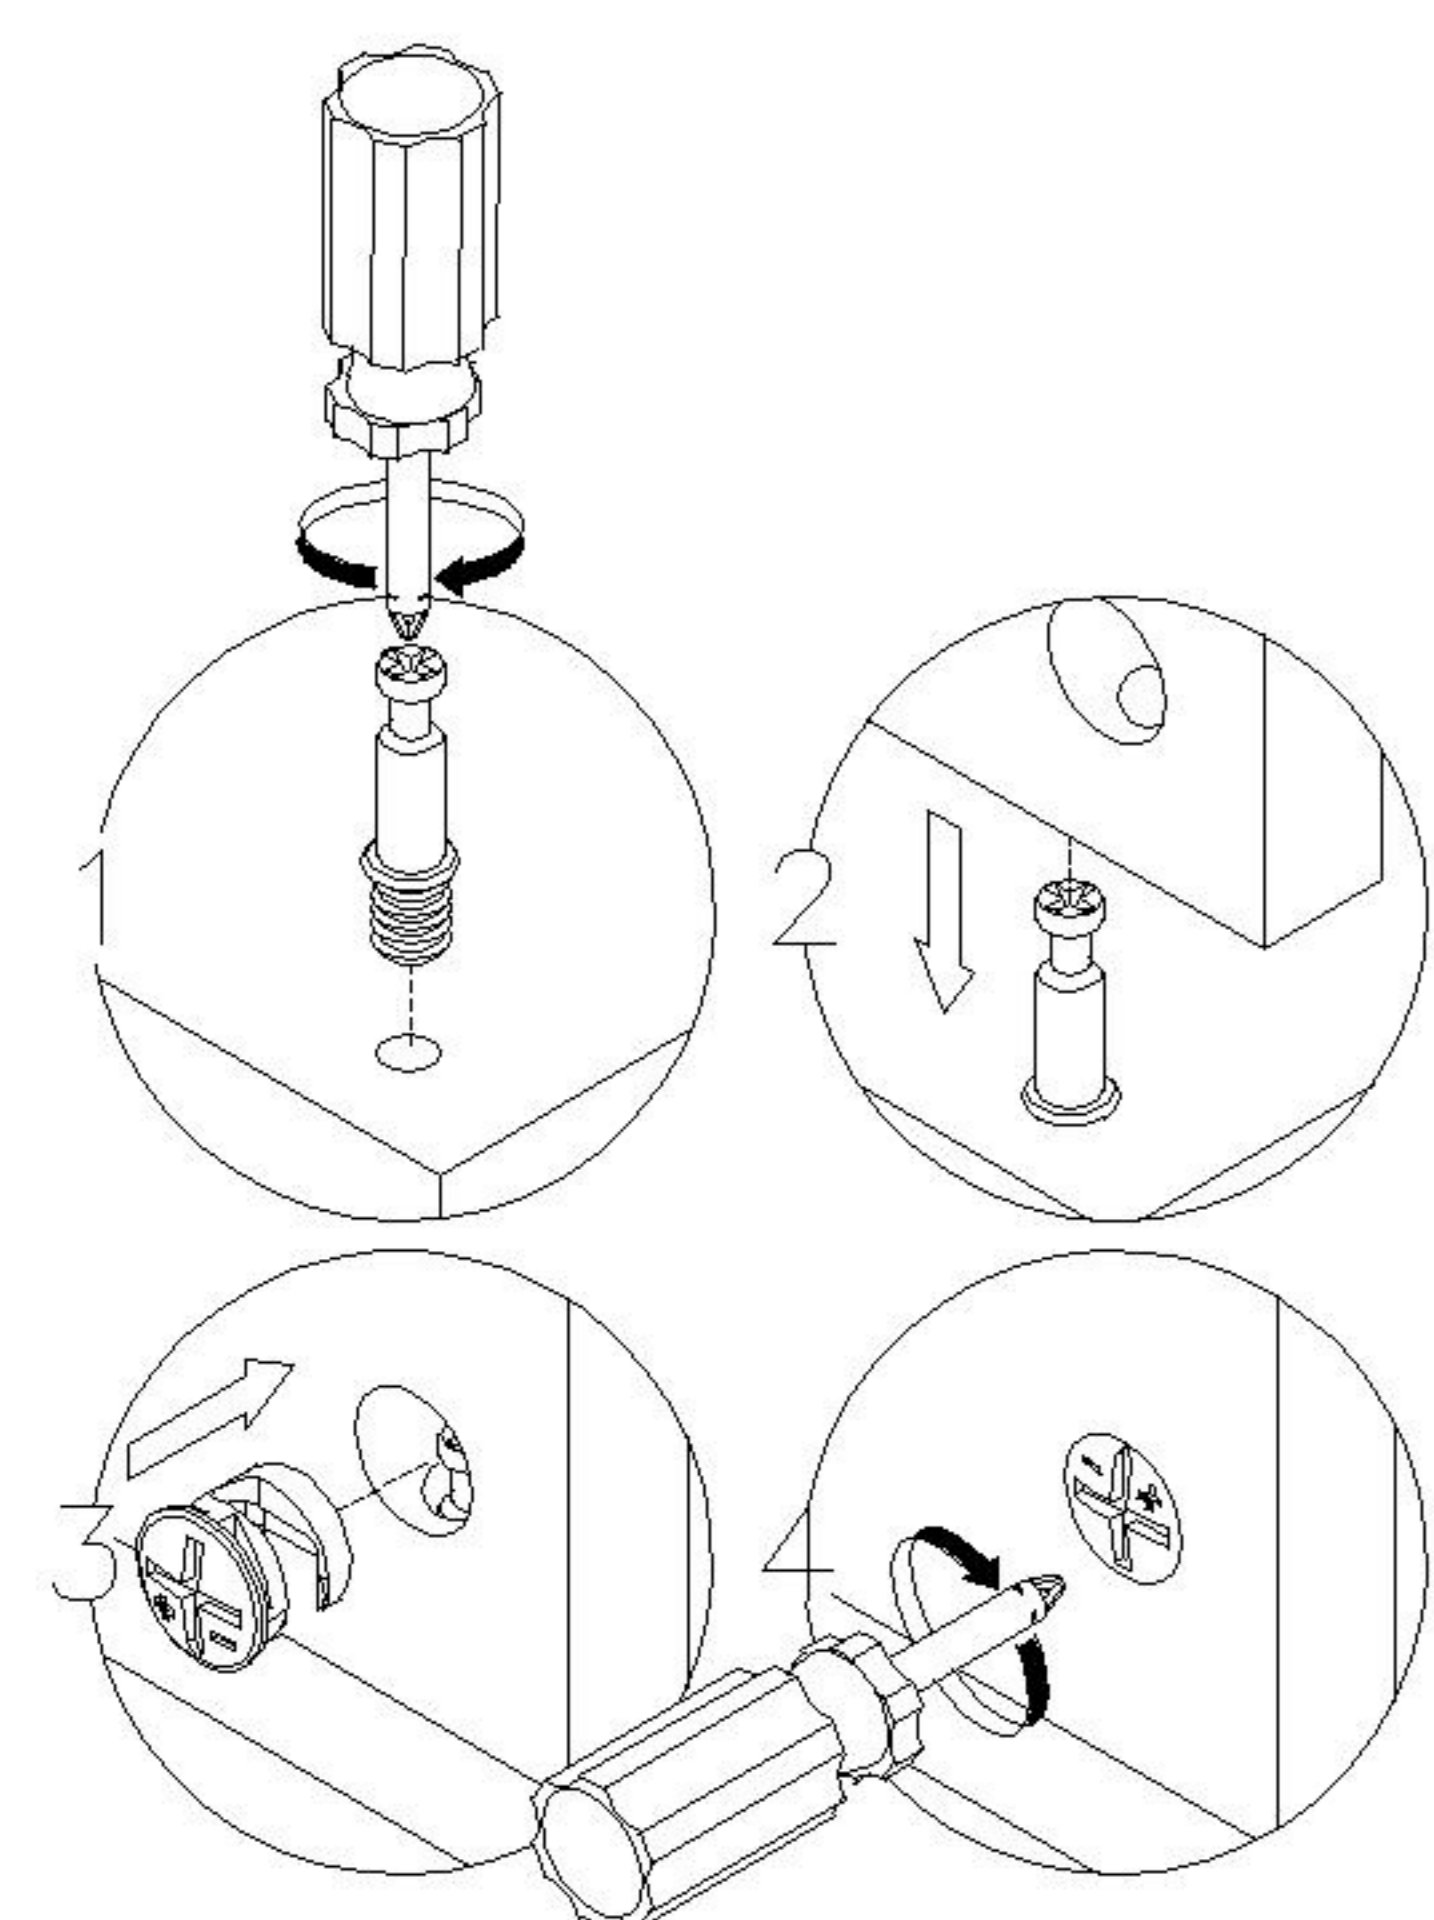


小二合一




- (A)*8
- (B)*8
- (I)*8
- (H)*8

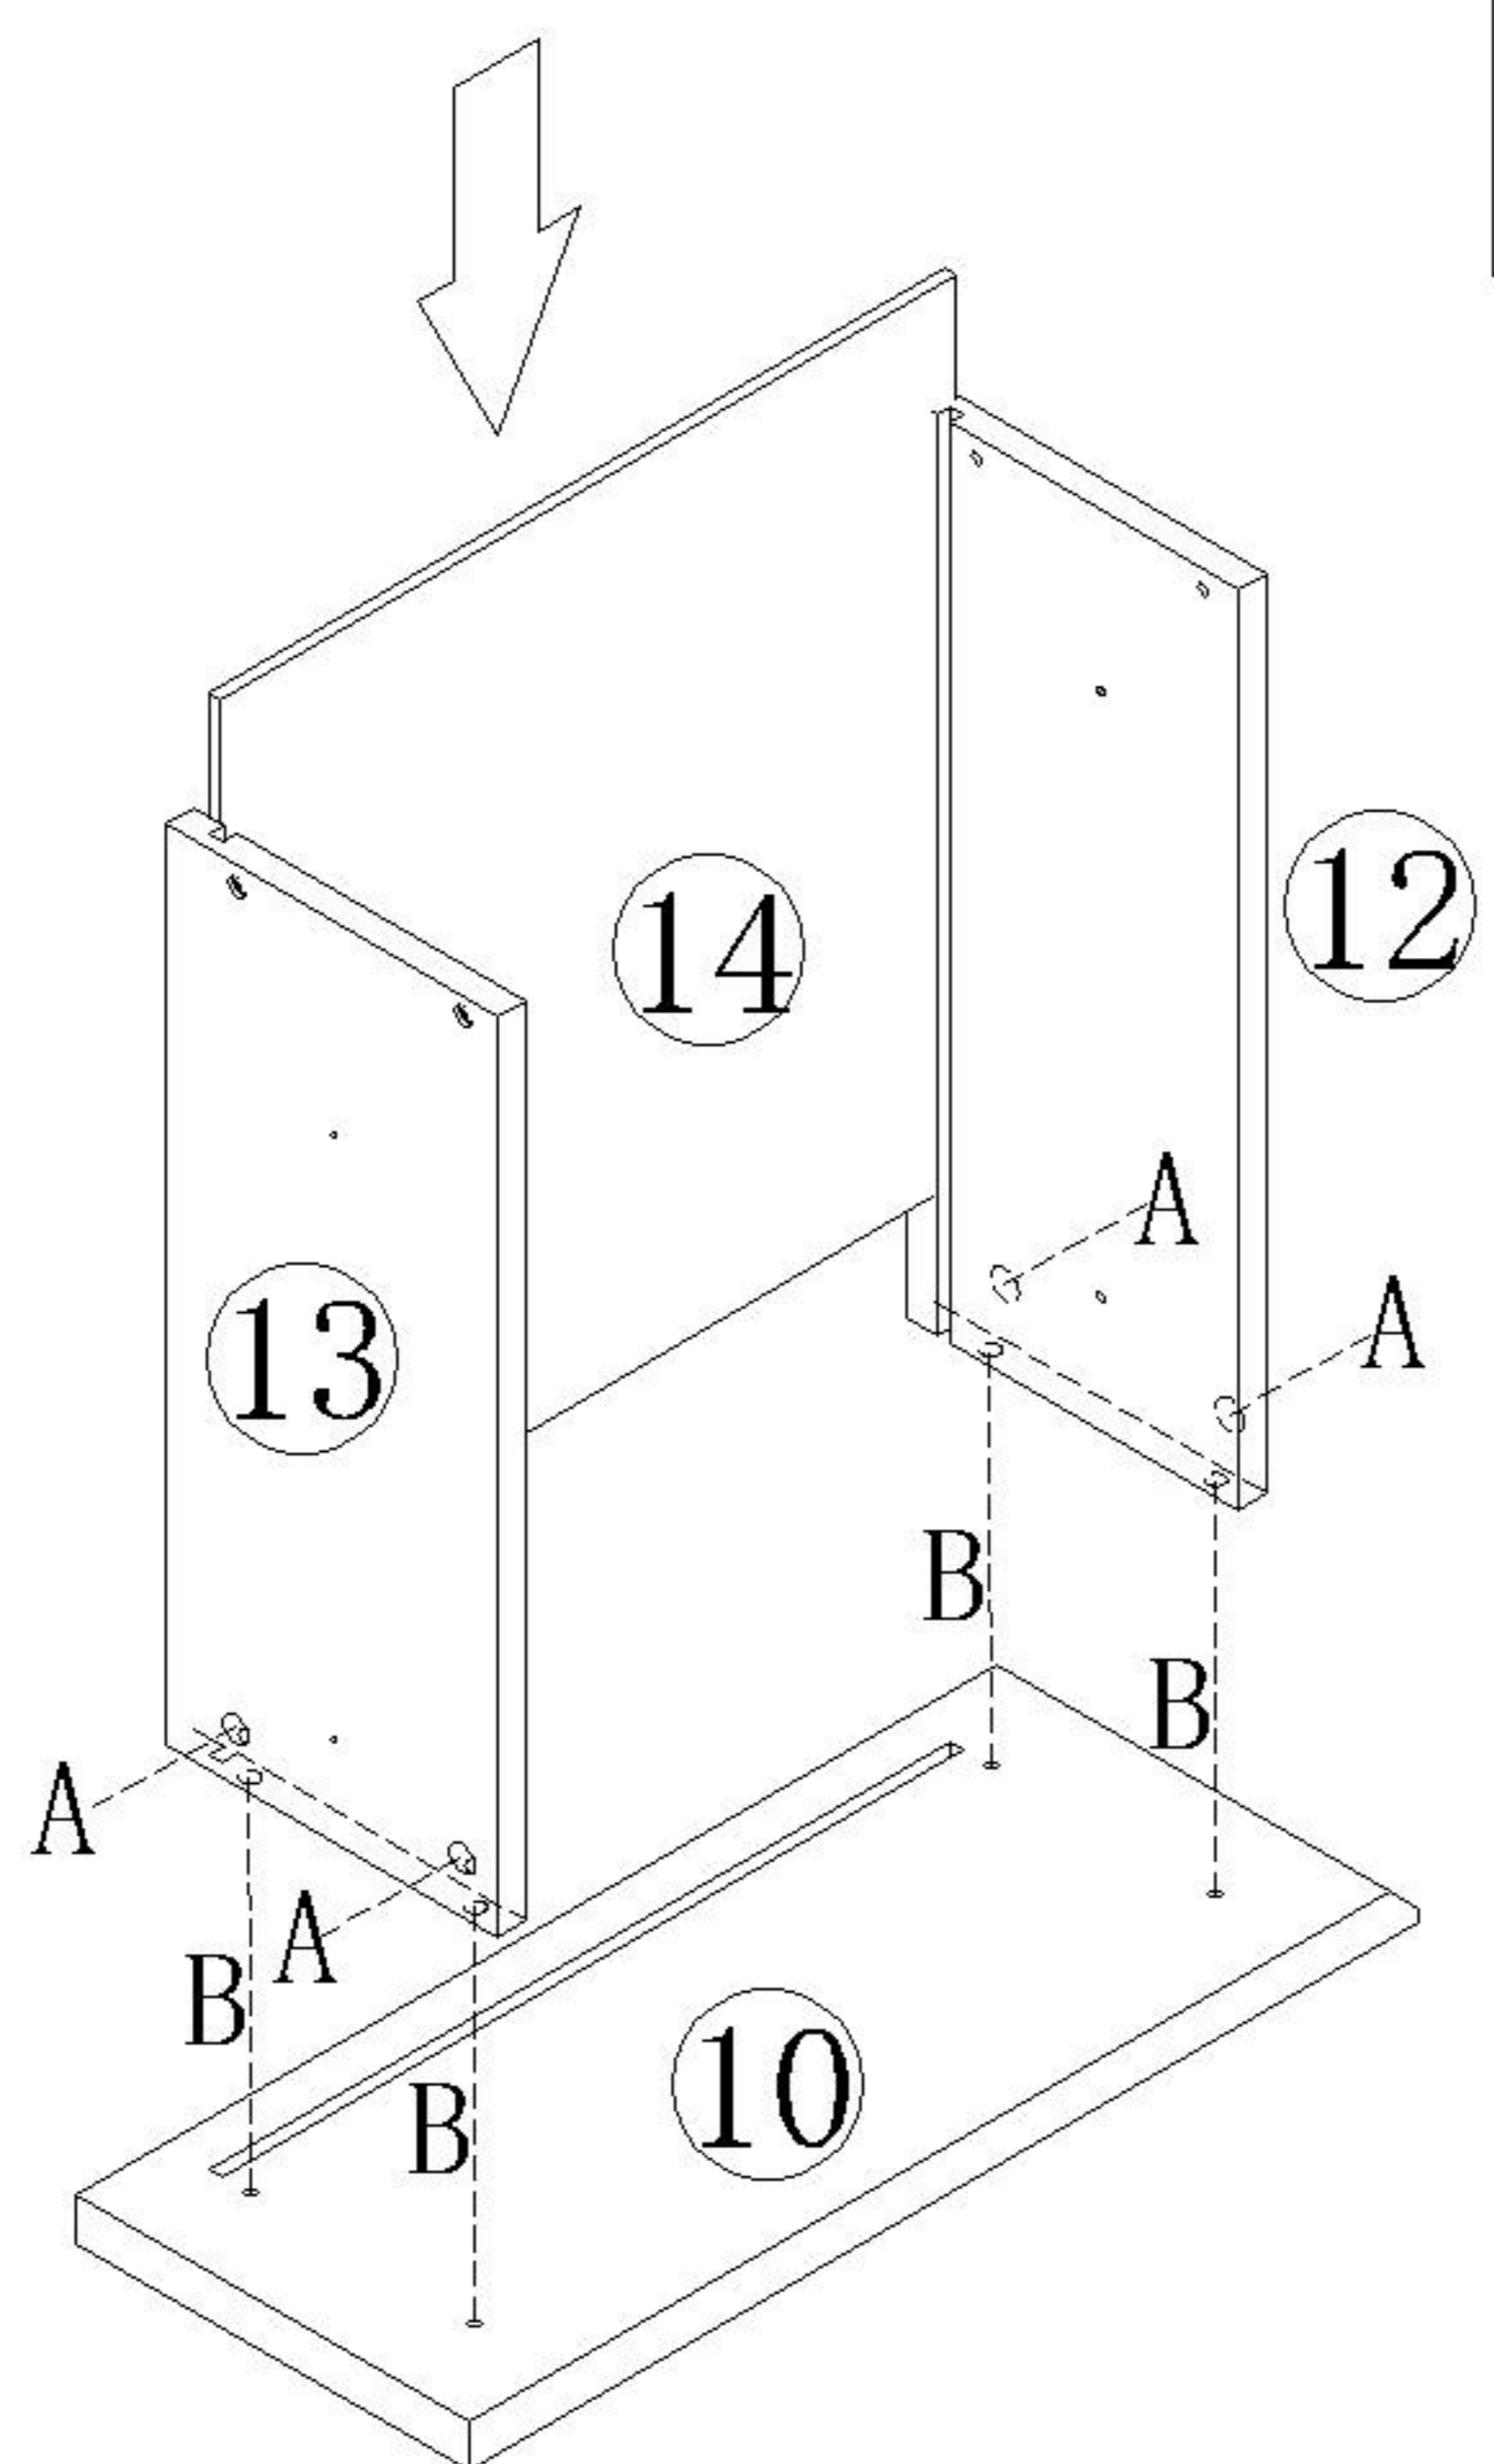


× 2

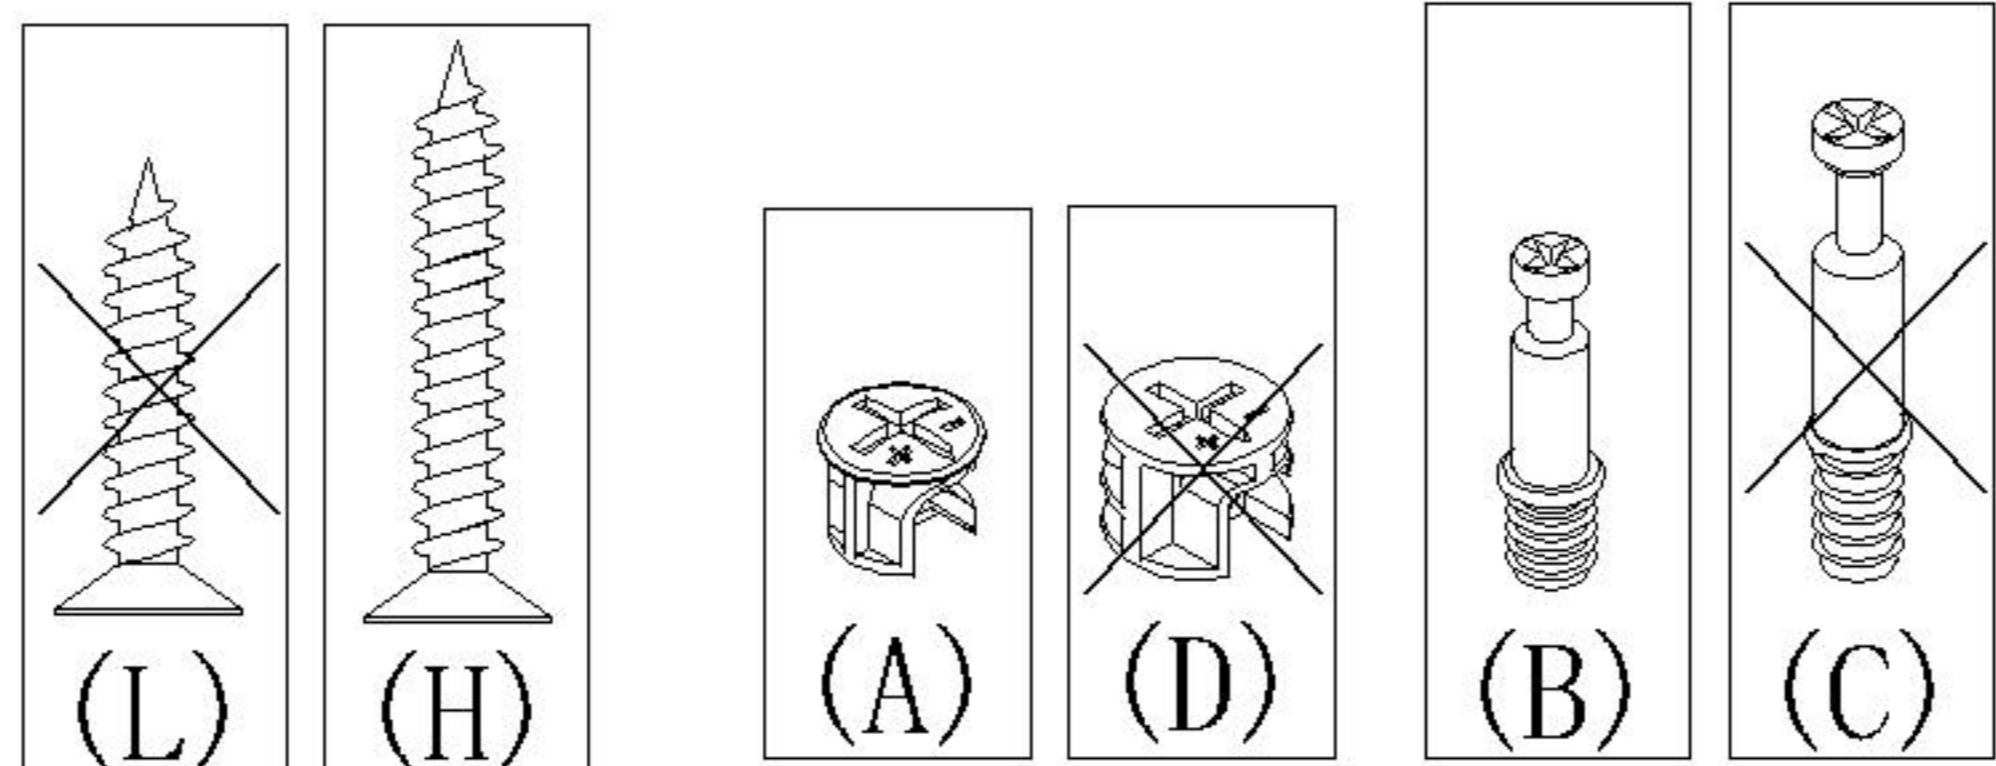

- (N)*2
- (F)*12

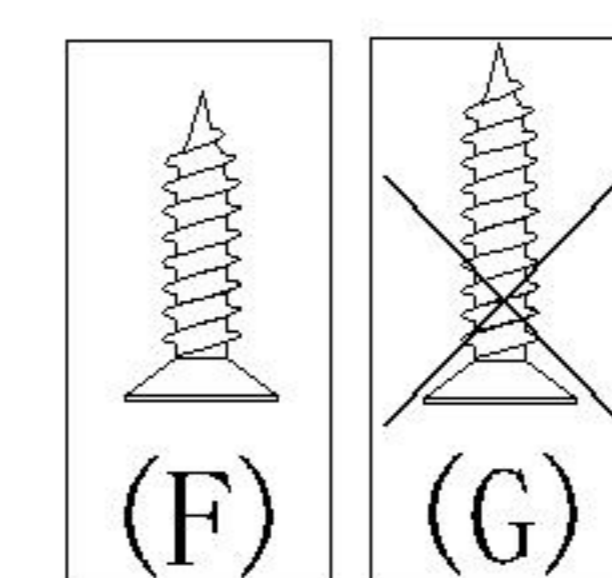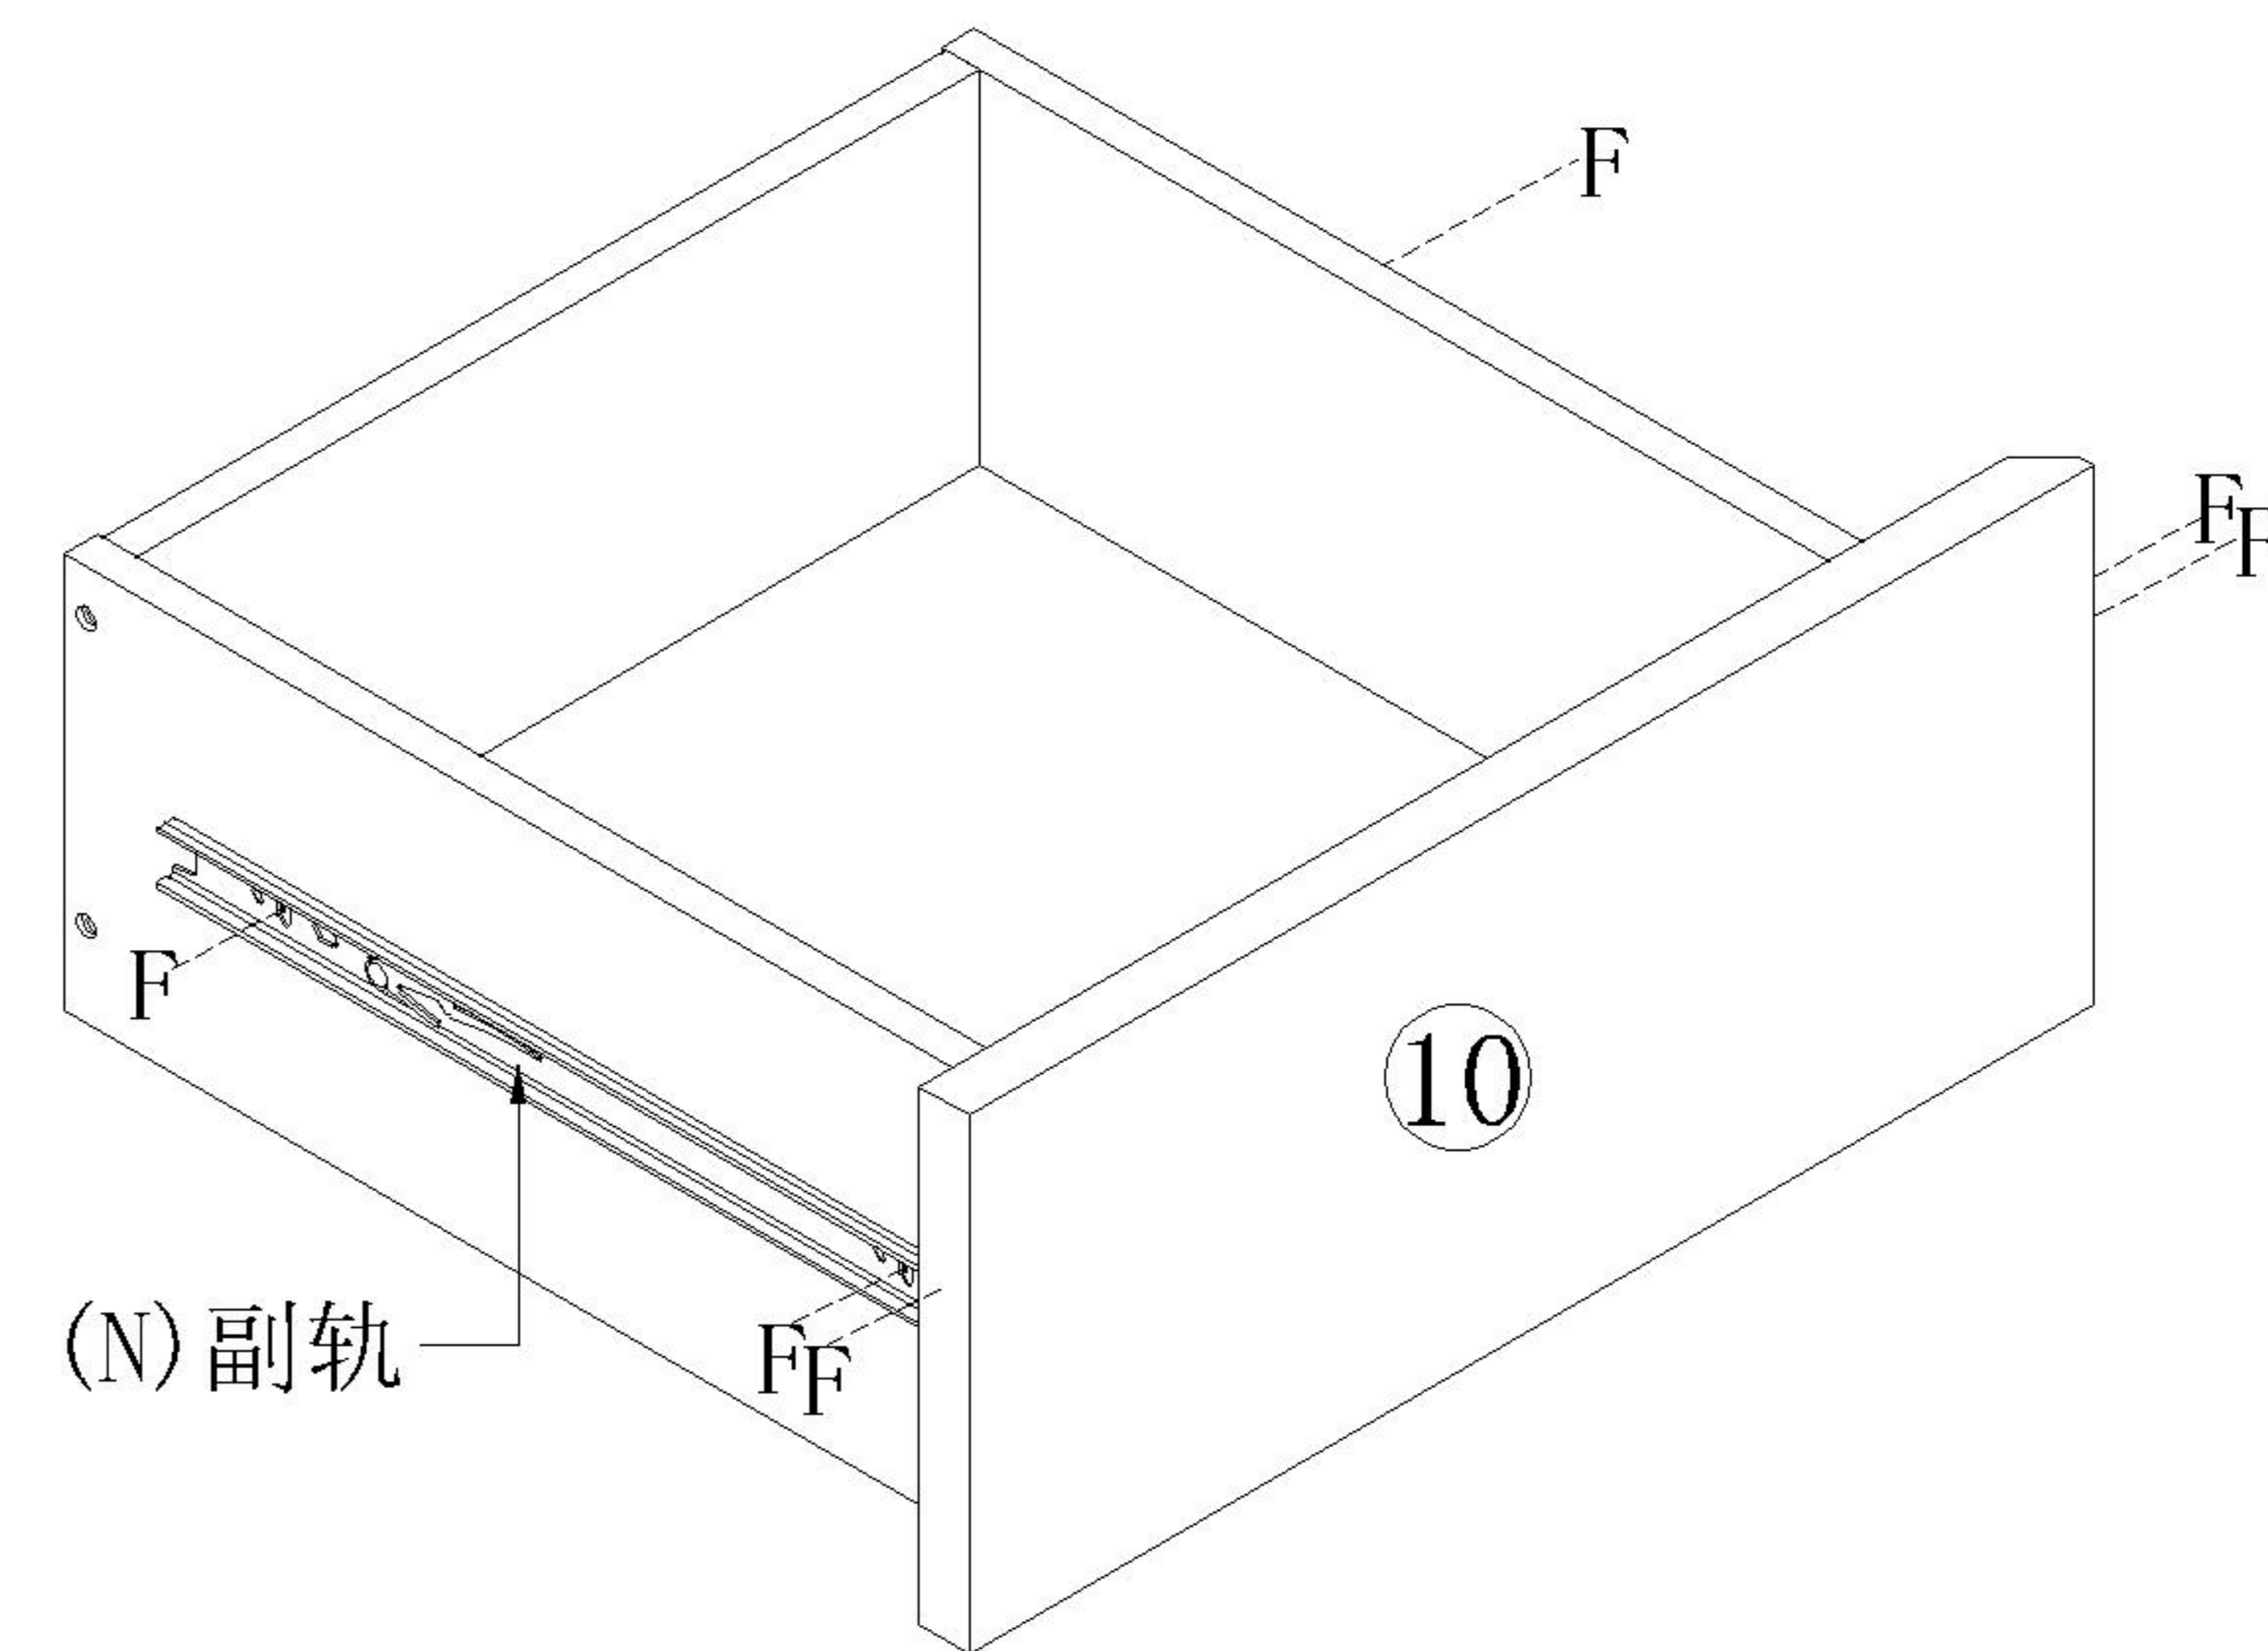
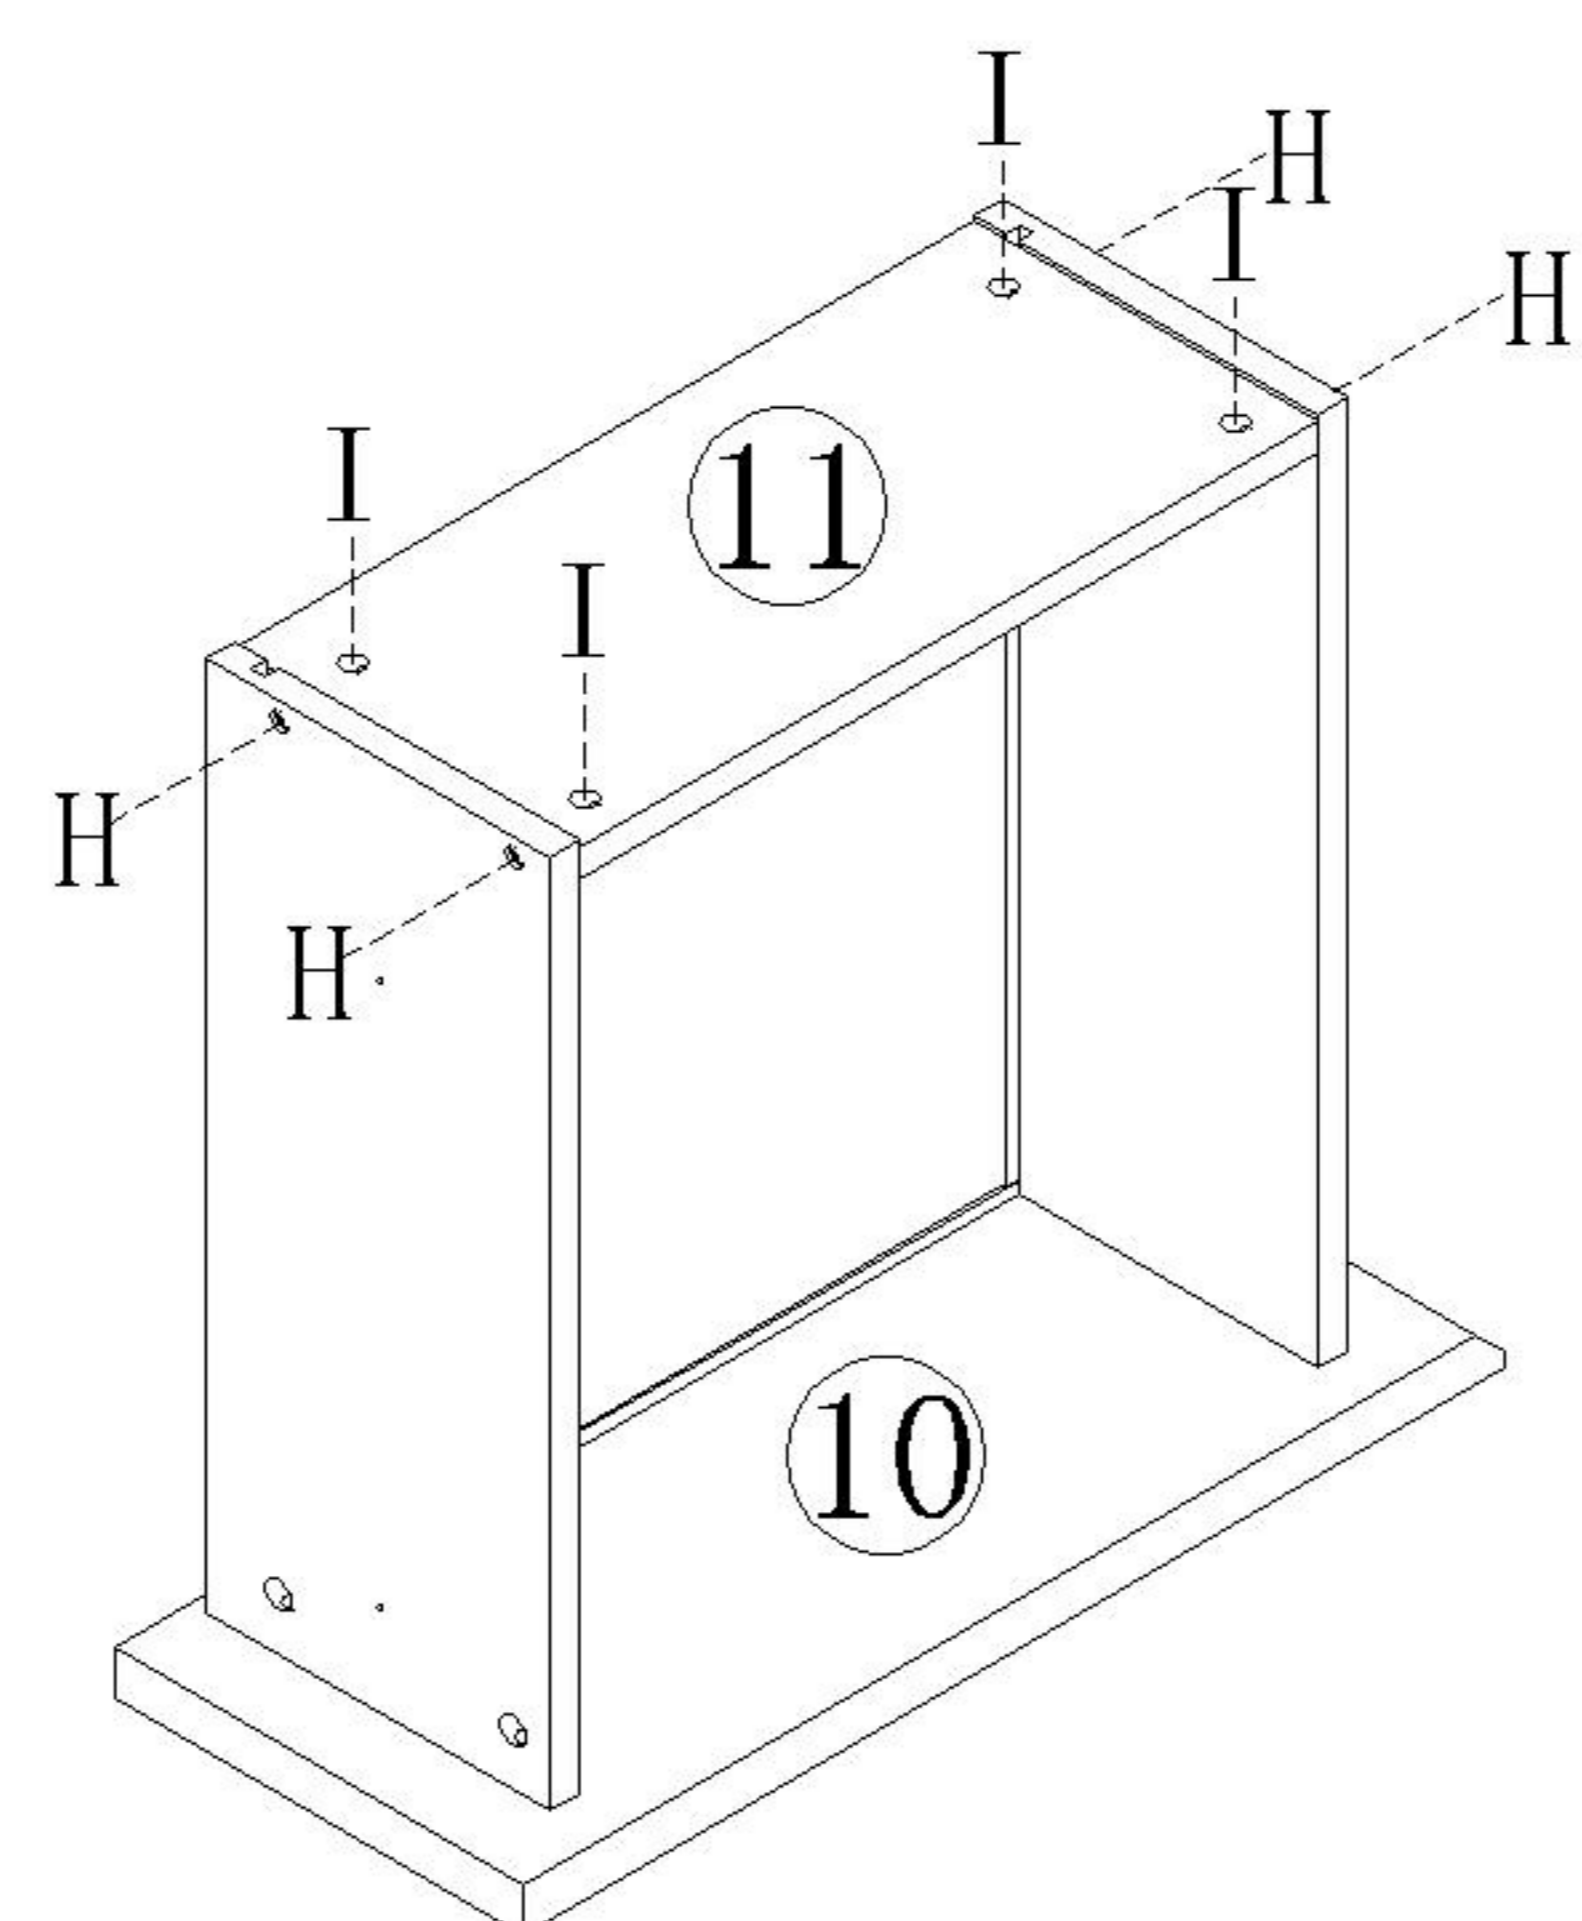


× 2




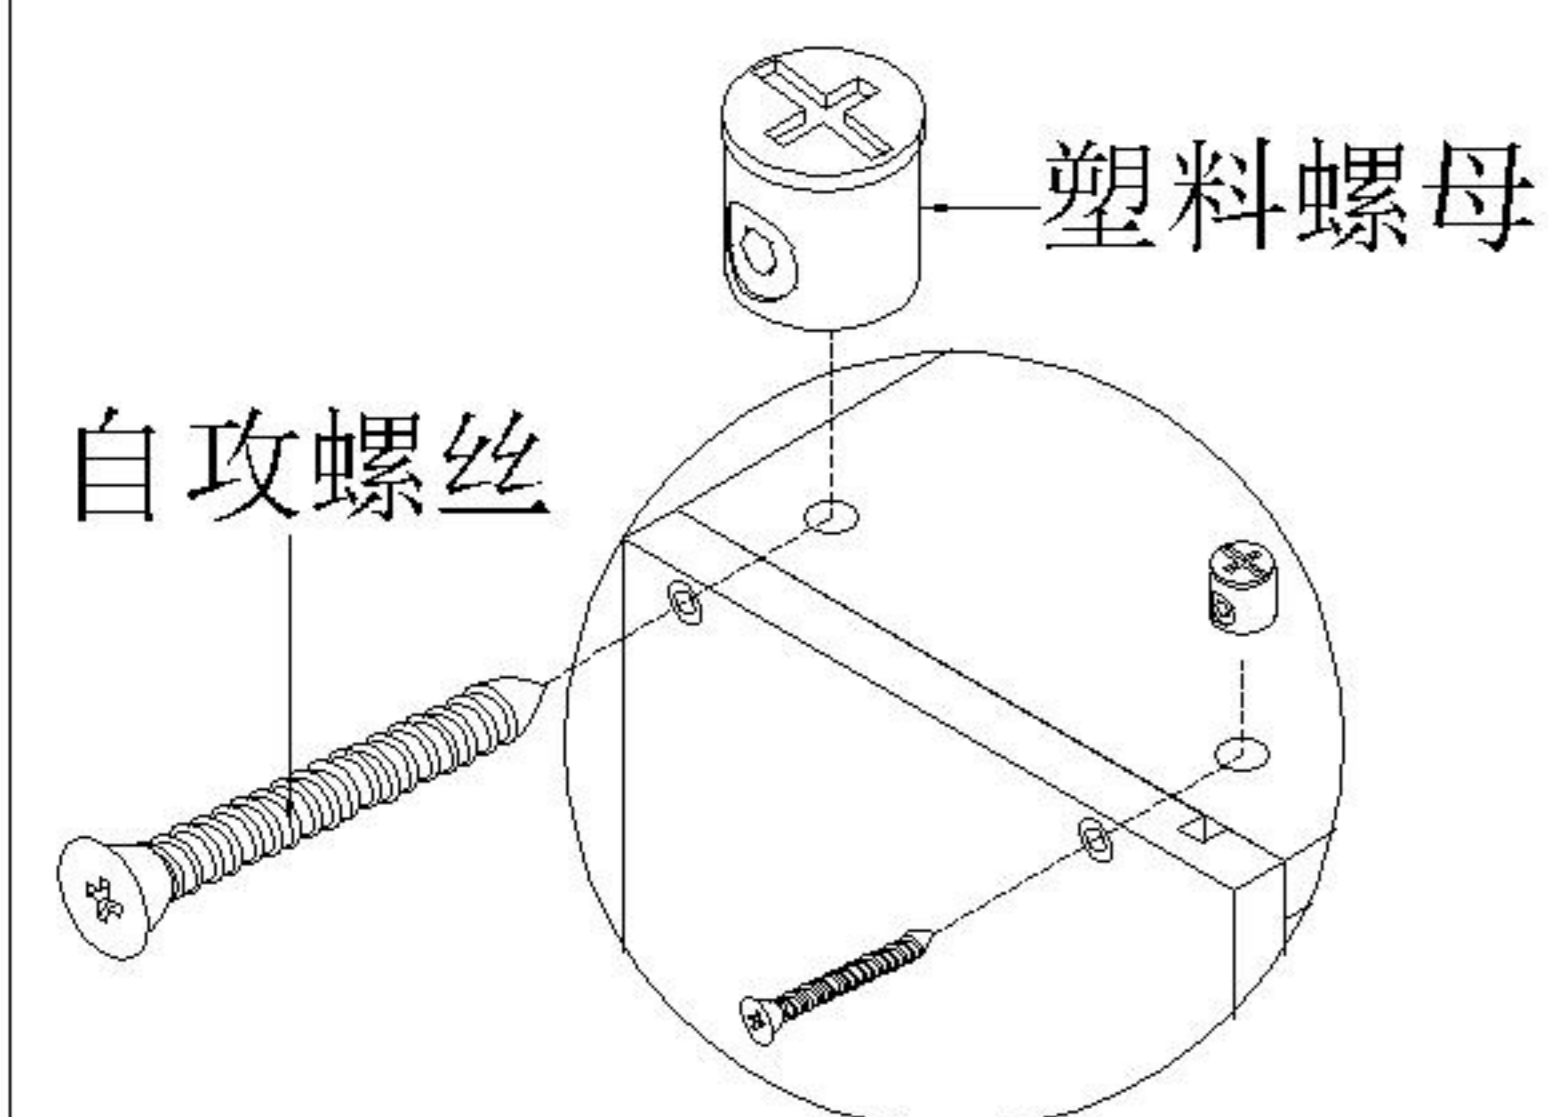


塑料螺母

- (A)*4
- (B)*4
- (I)*4
- (H)*4

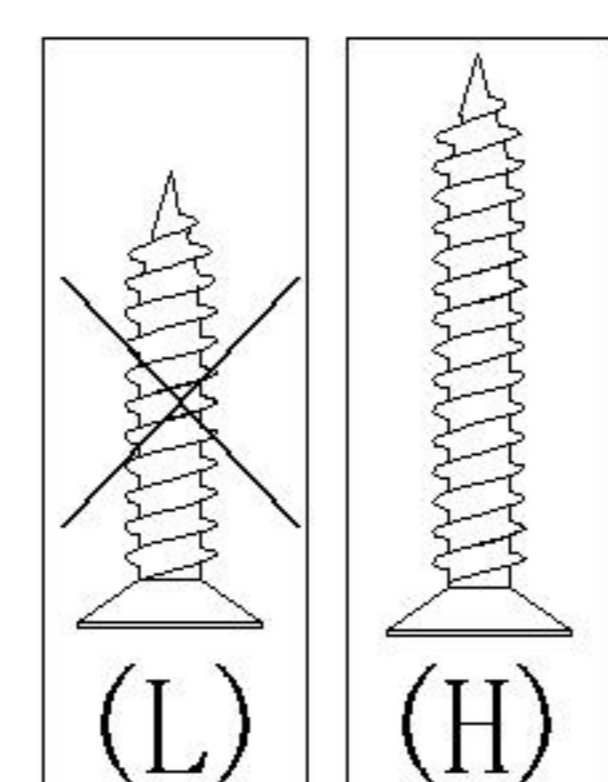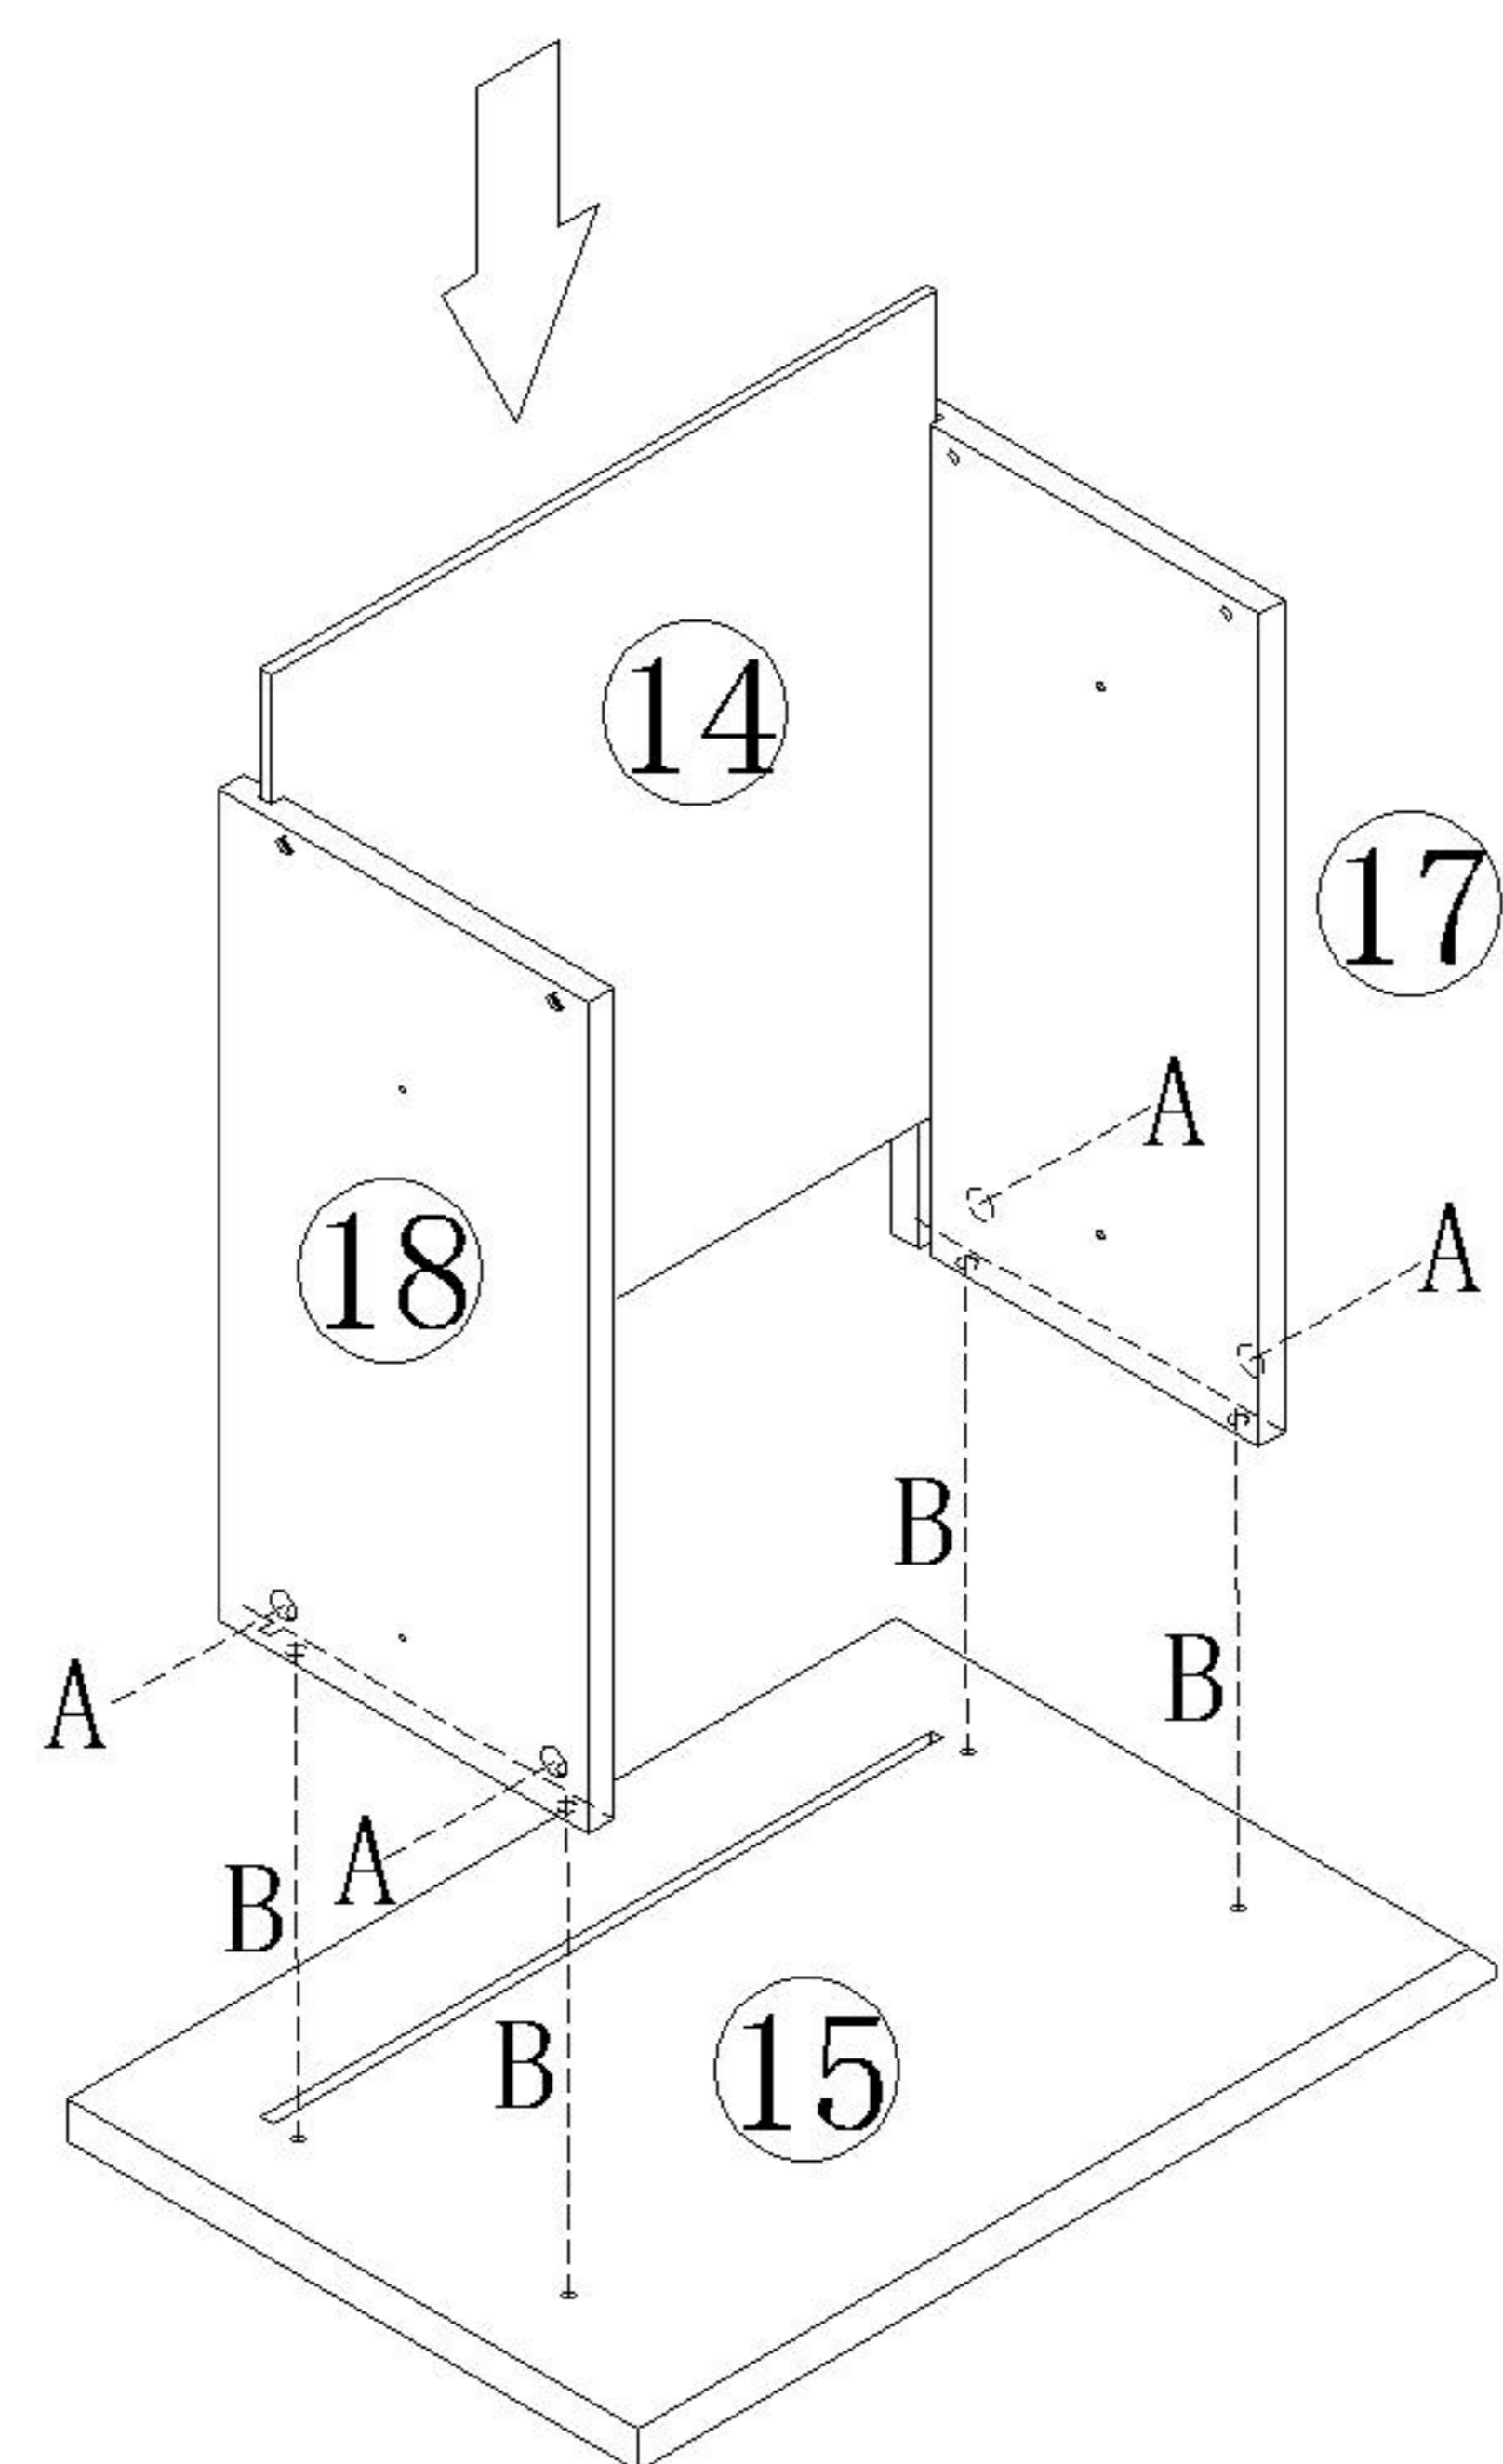


- (N)*1
- (F)*6

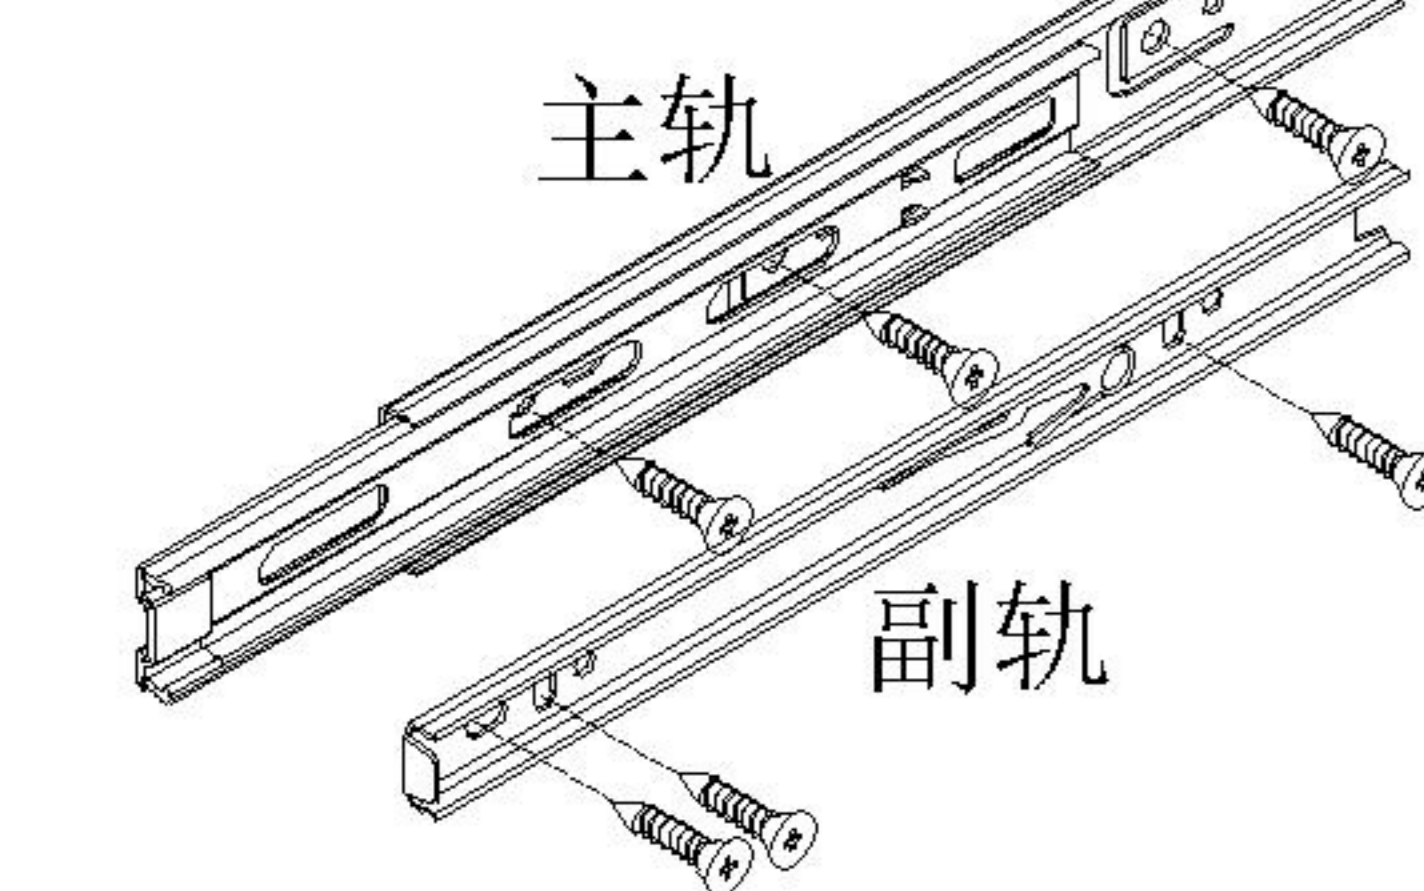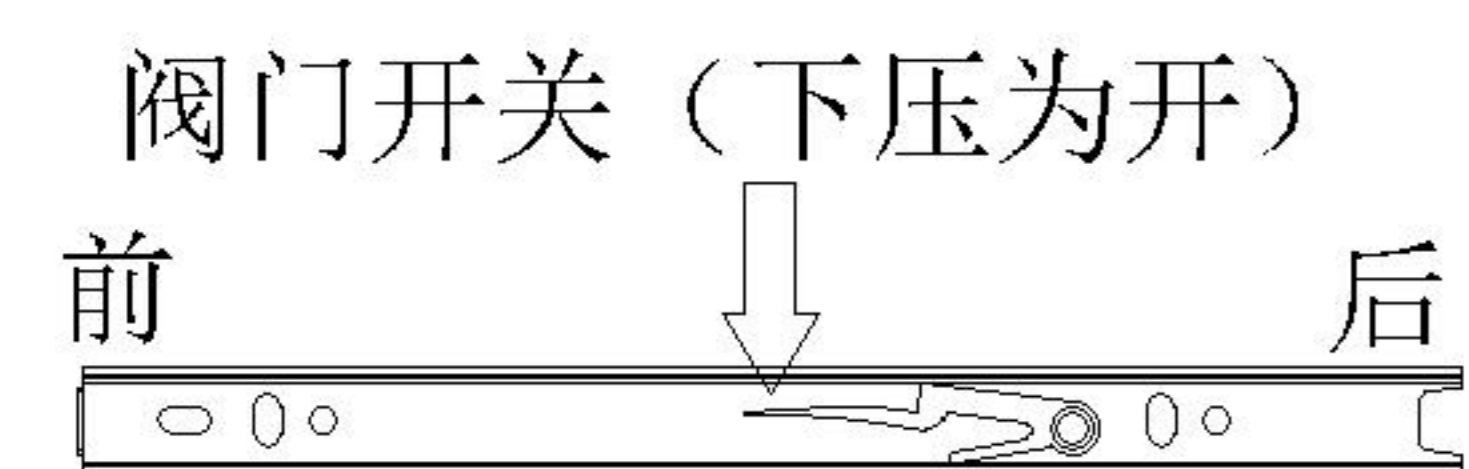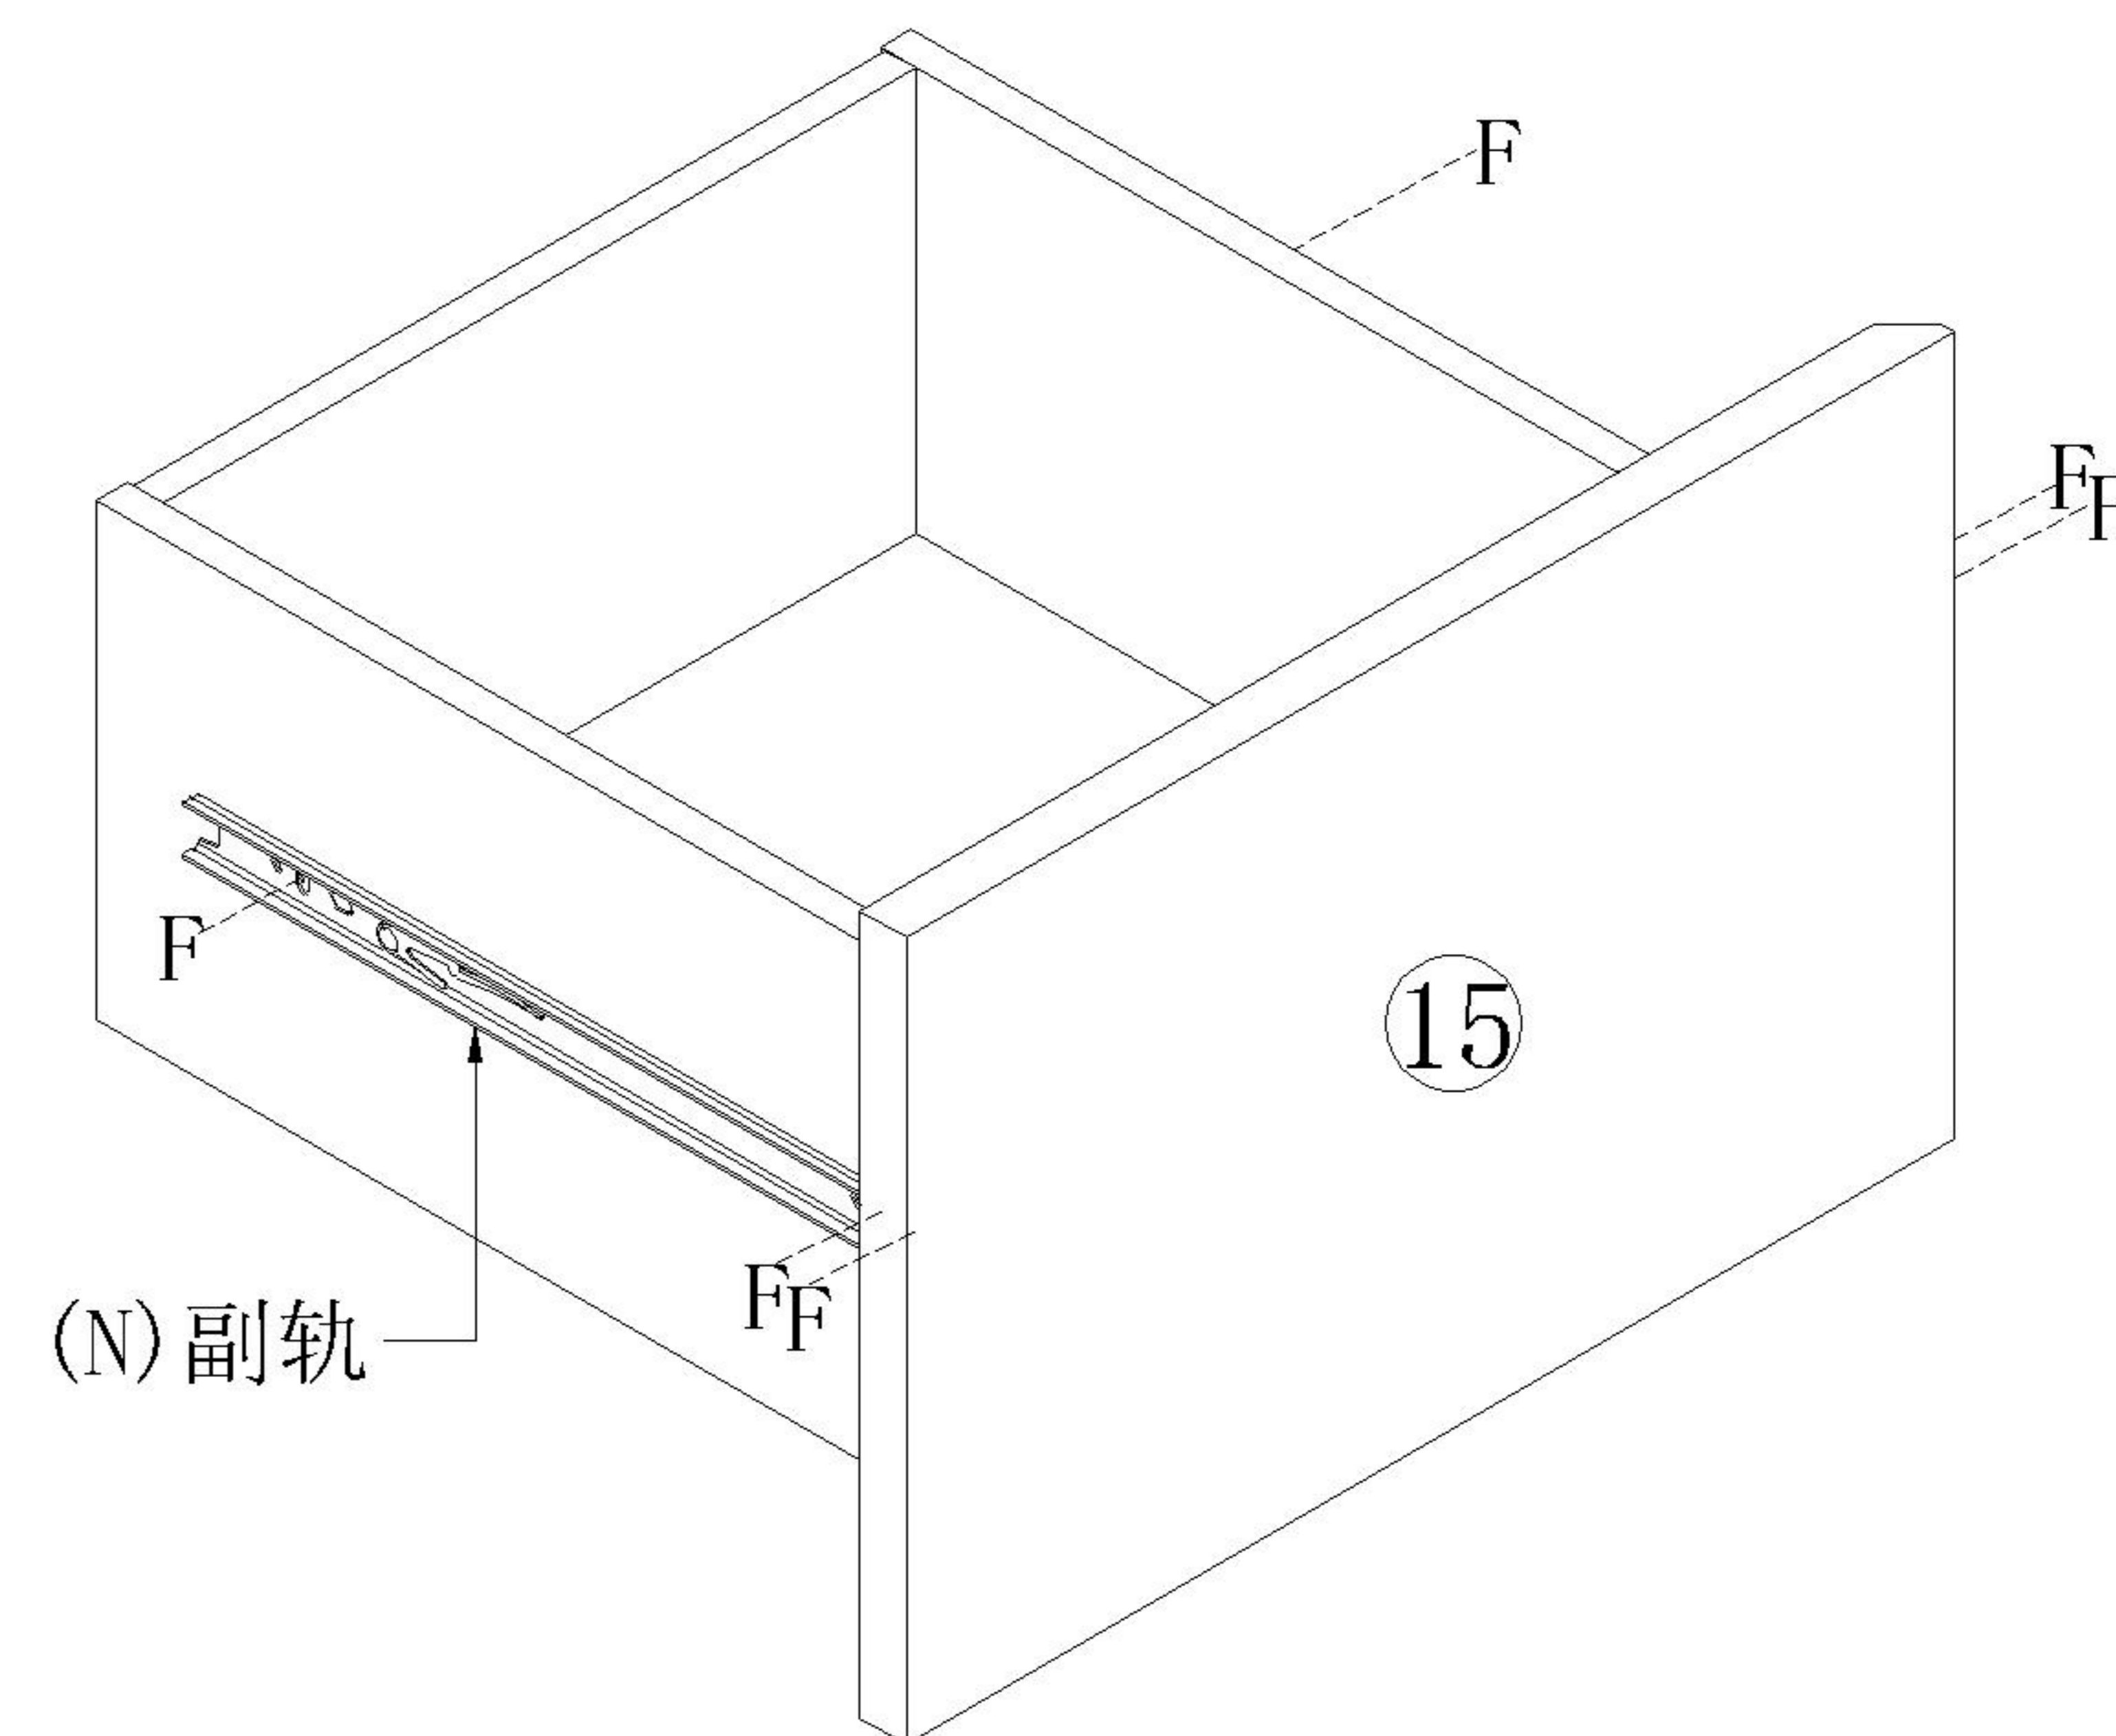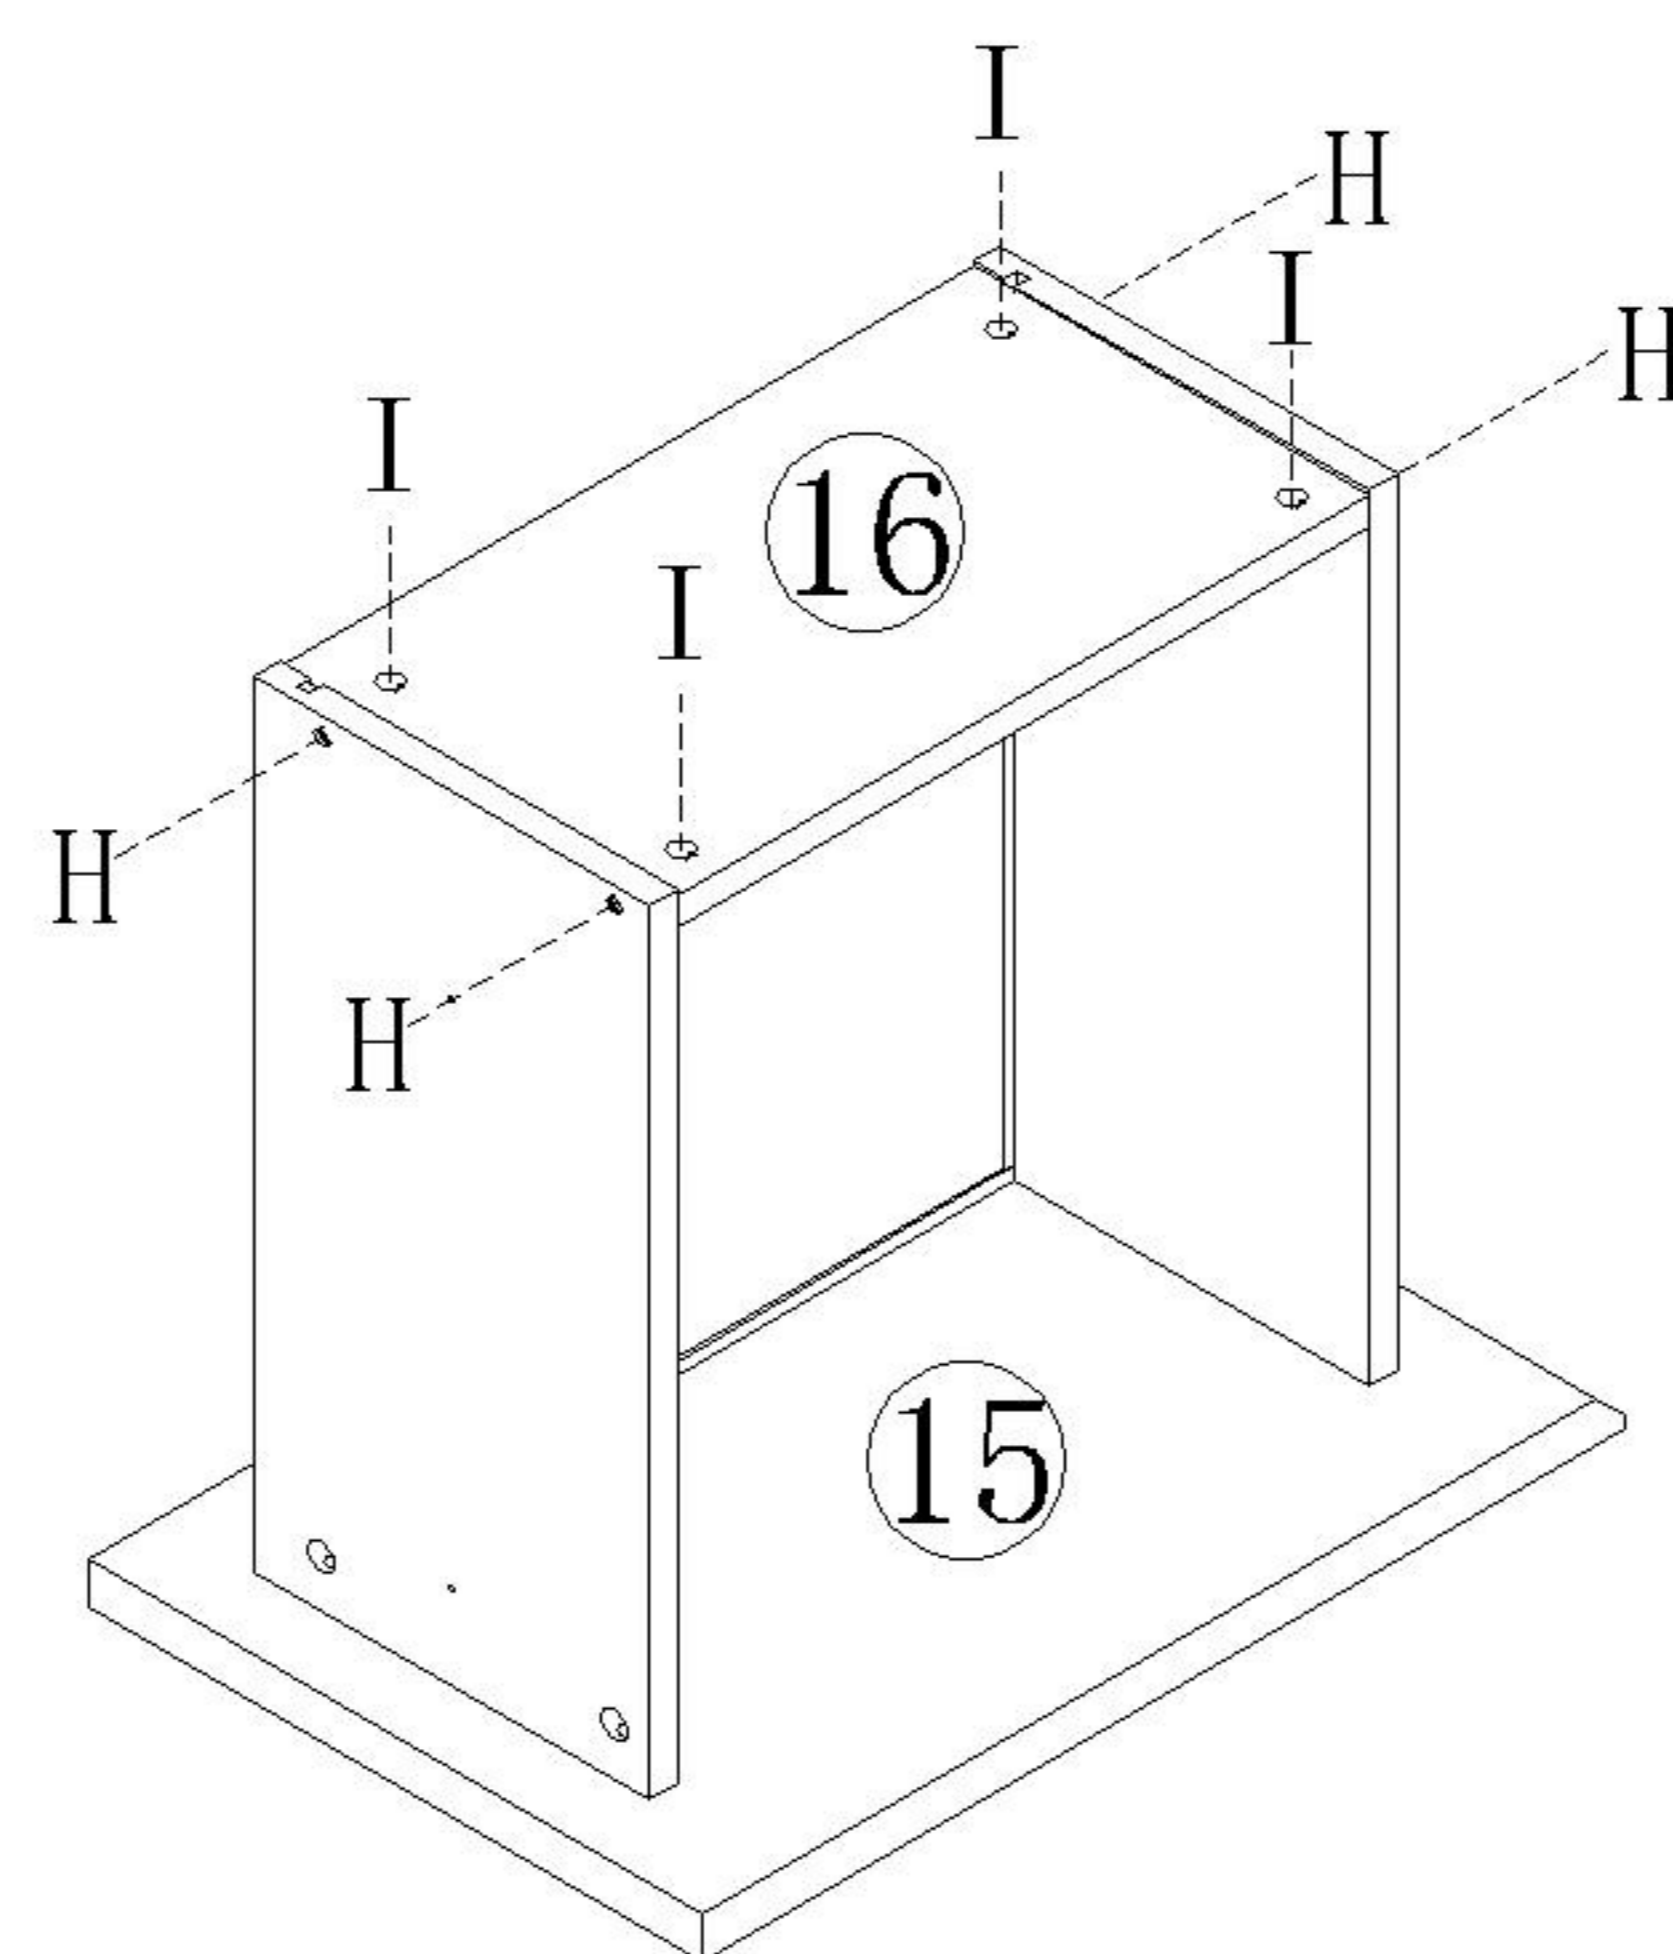









三节滚珠导轨-12"

0I2E-A三斗柜

安装方法

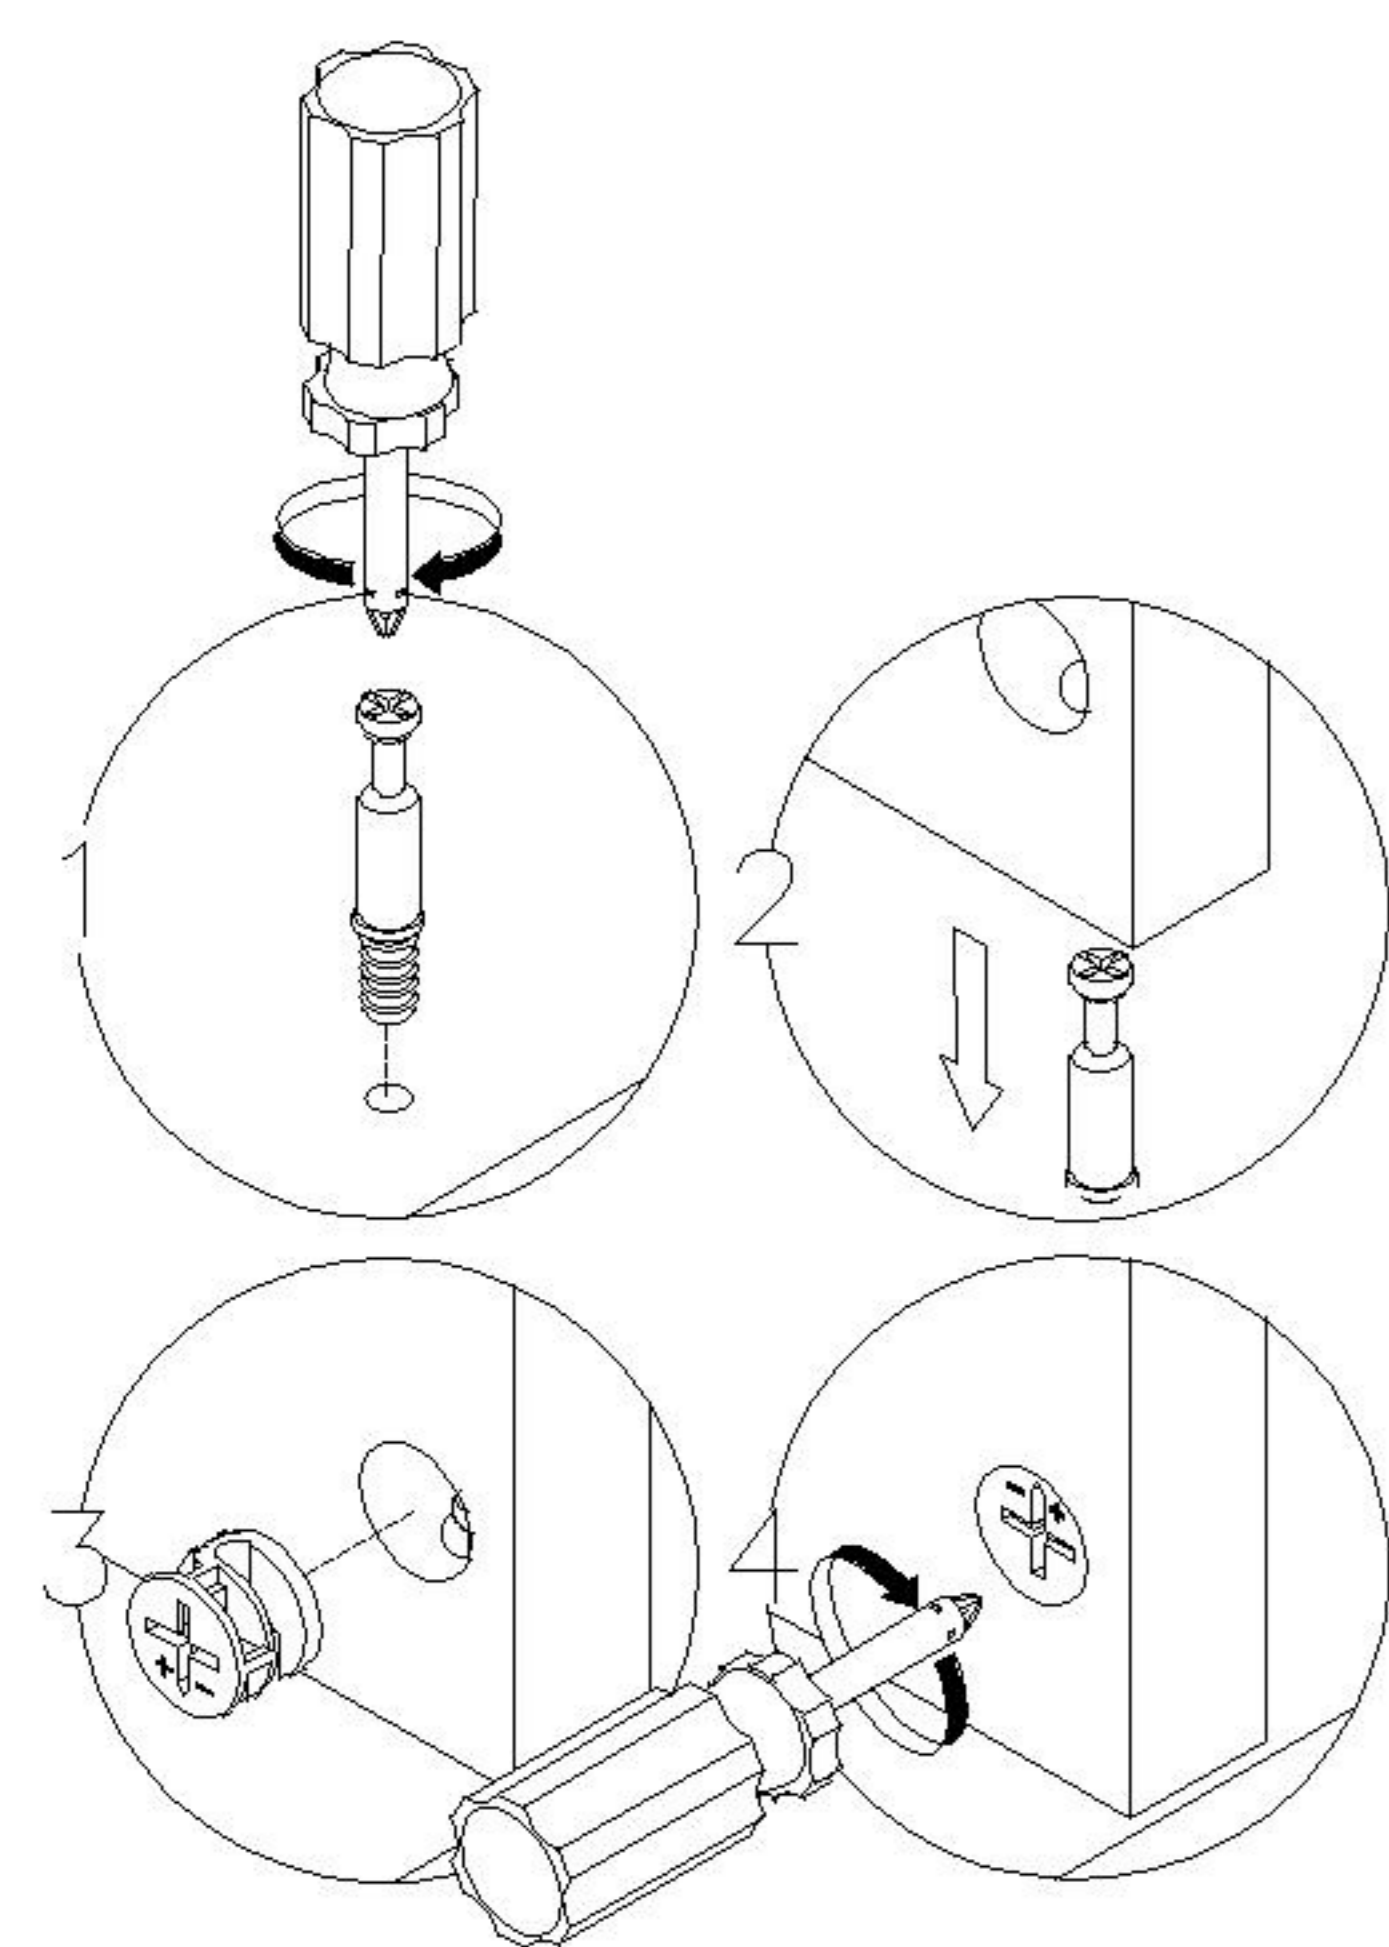


大二合一

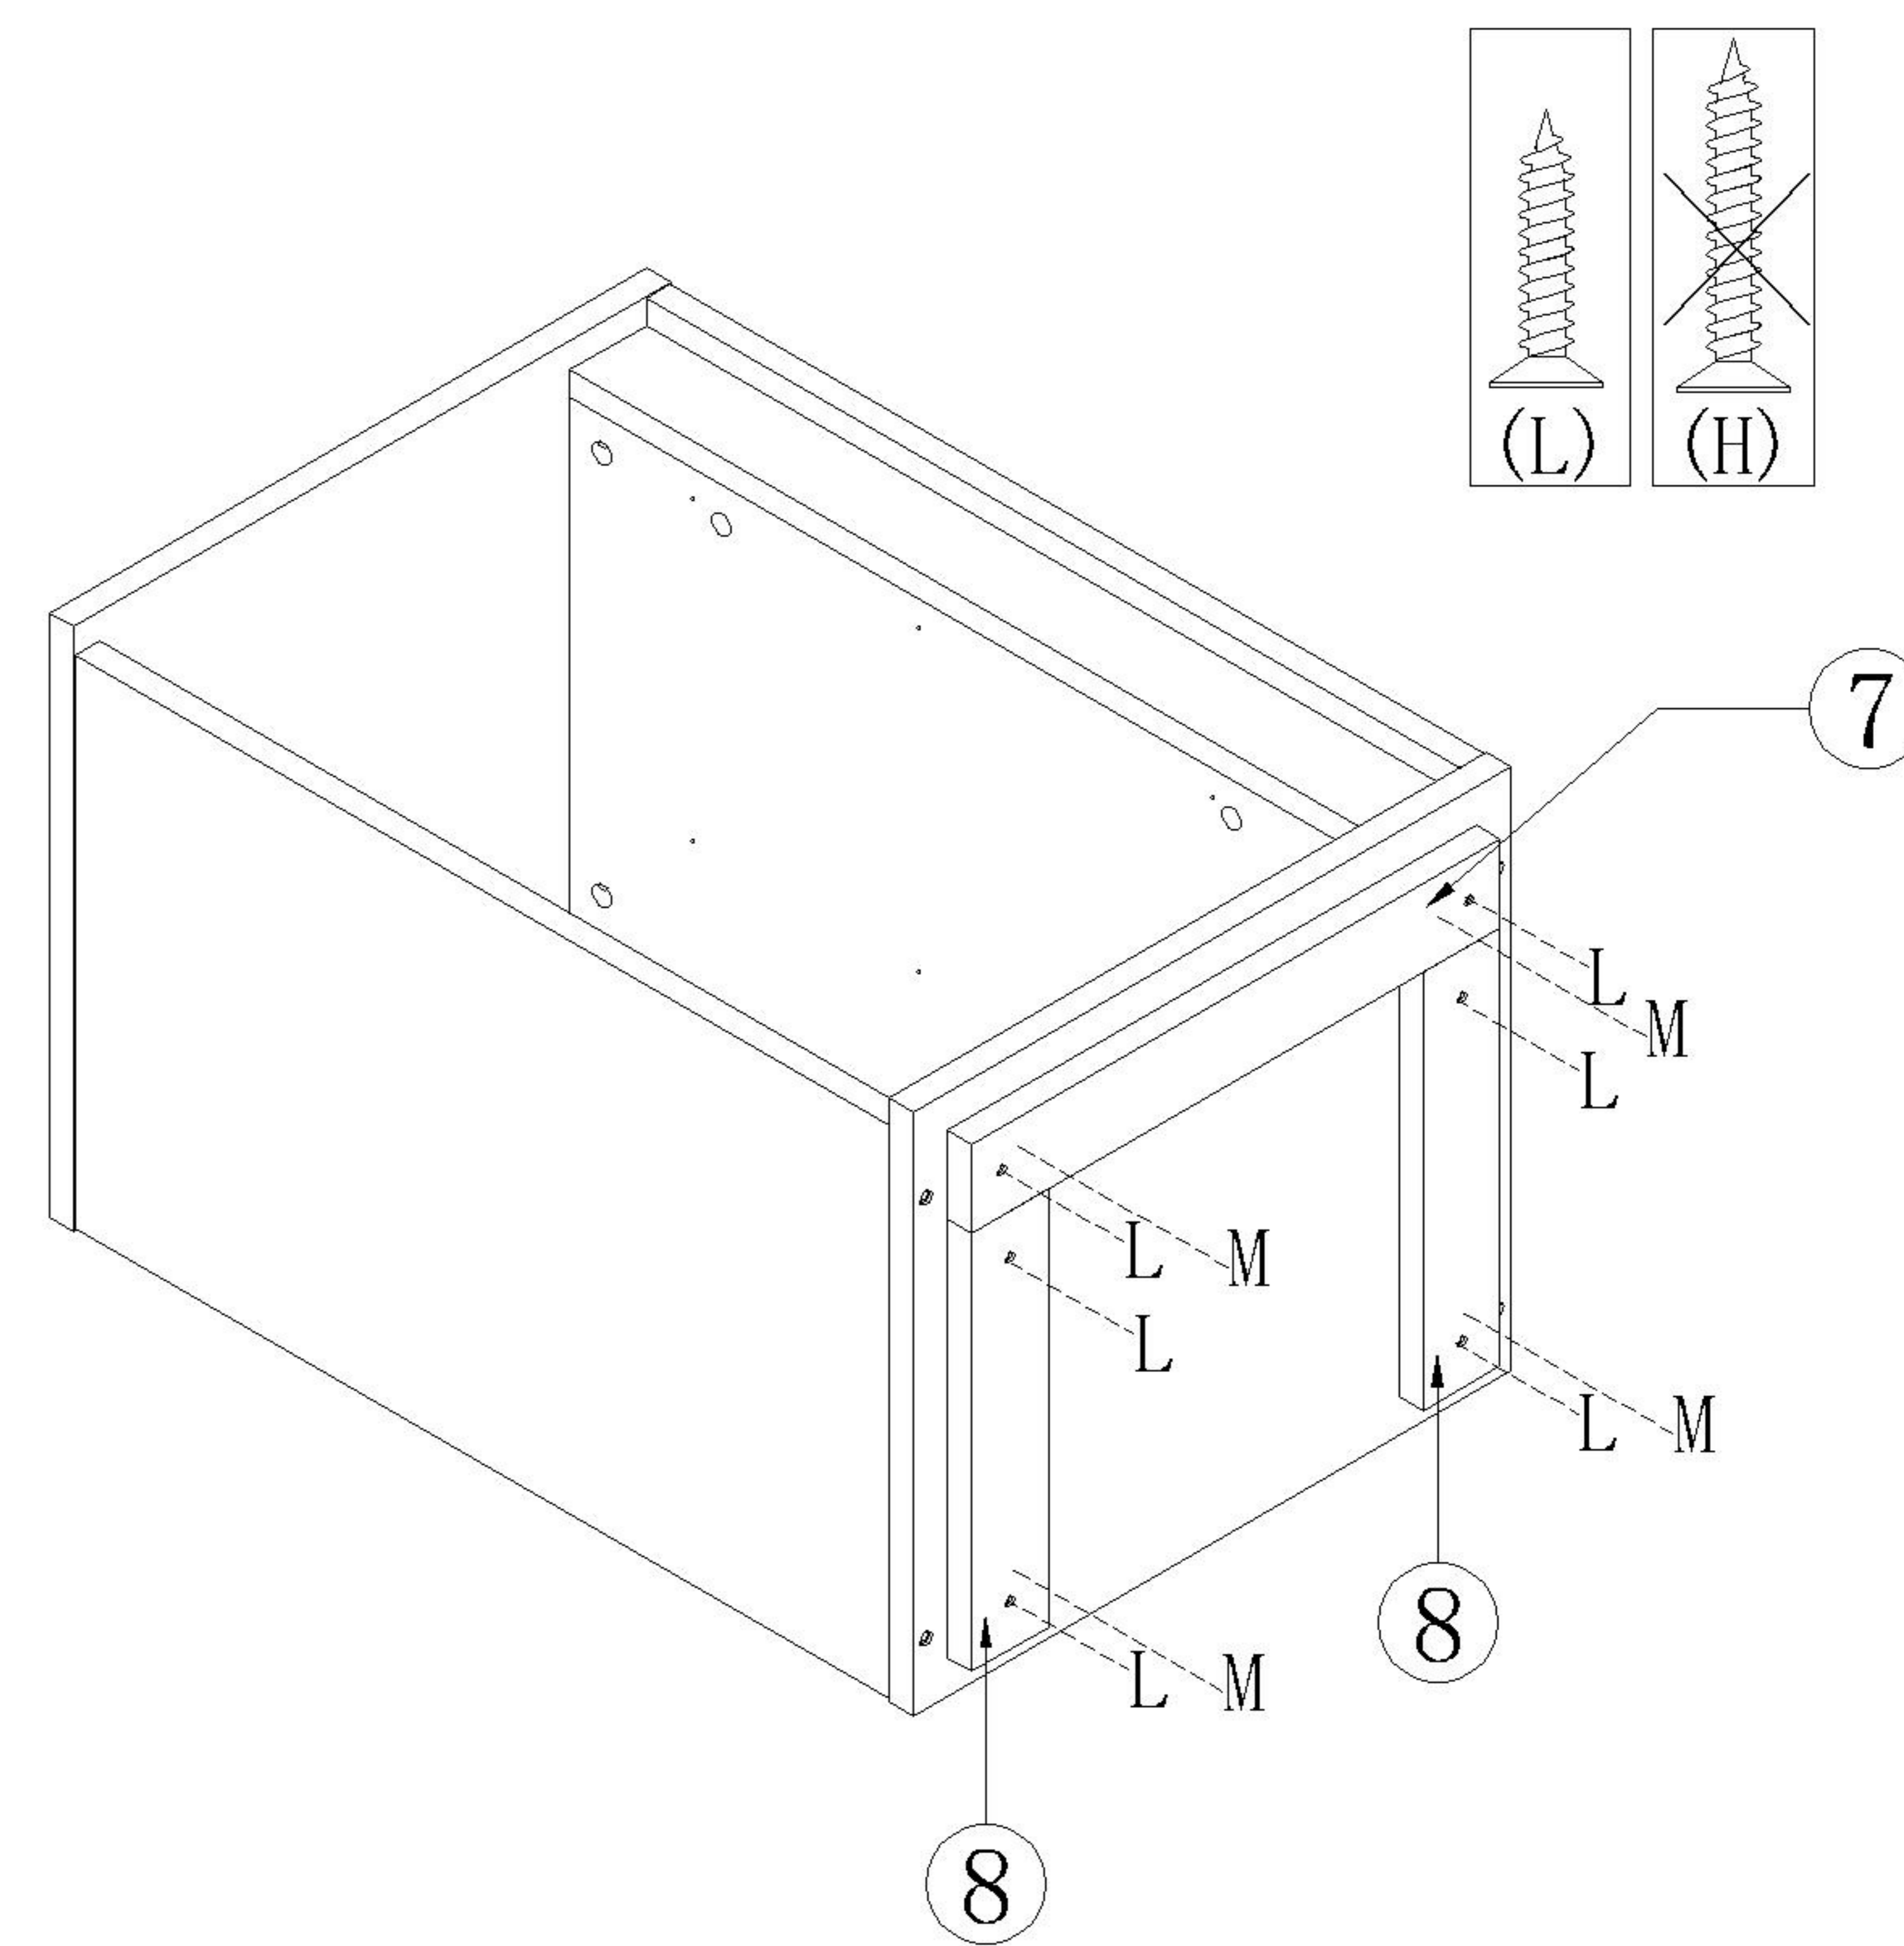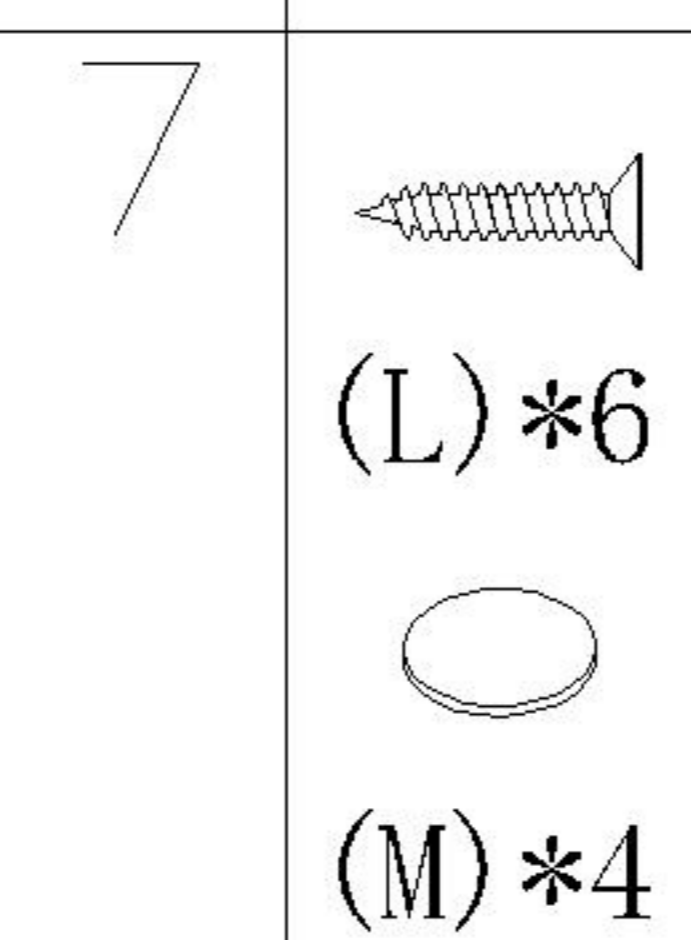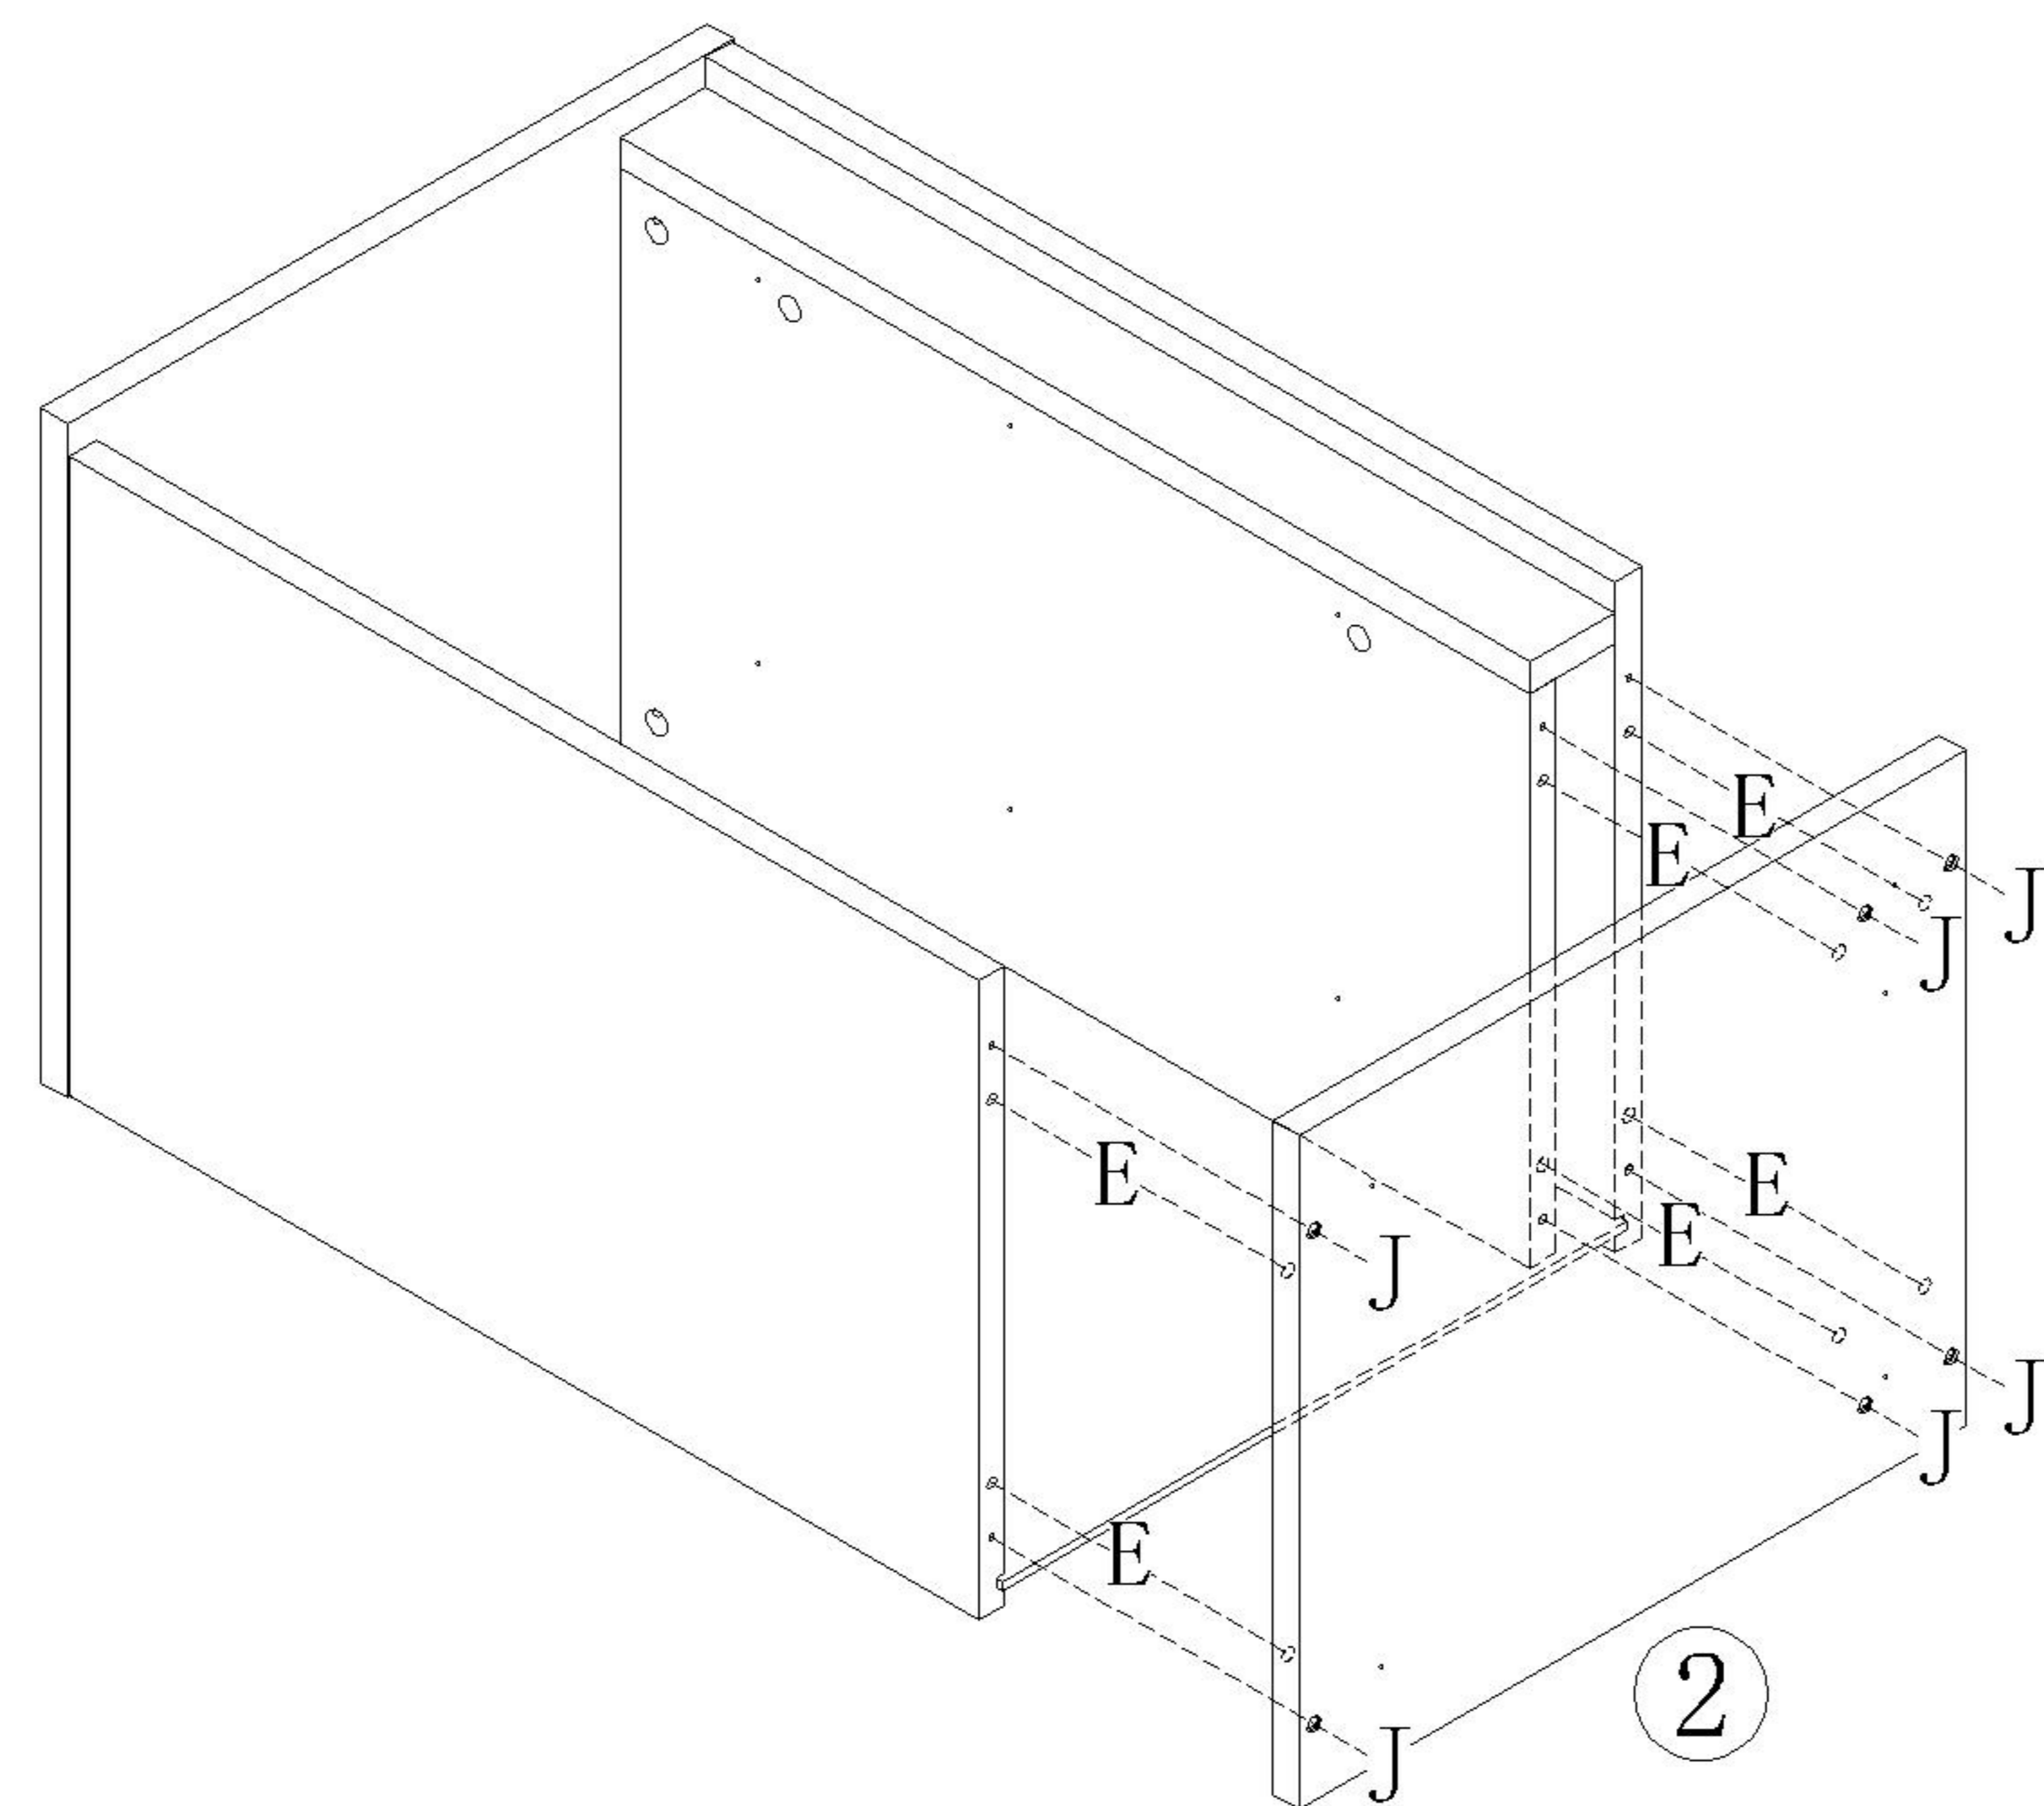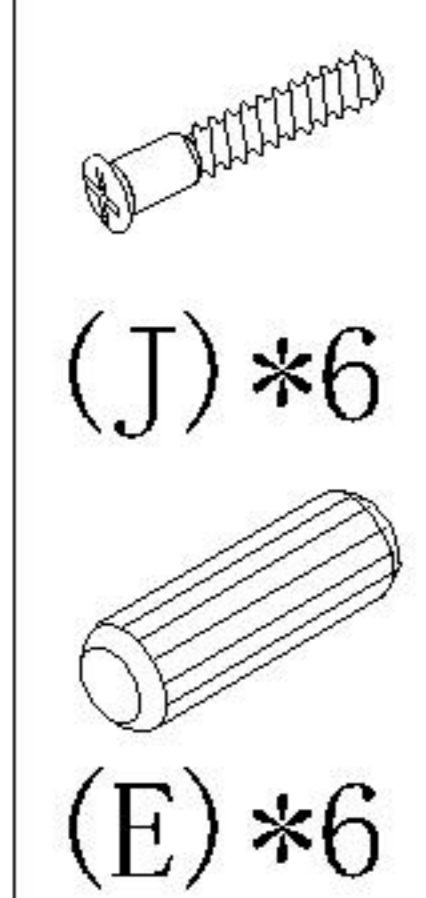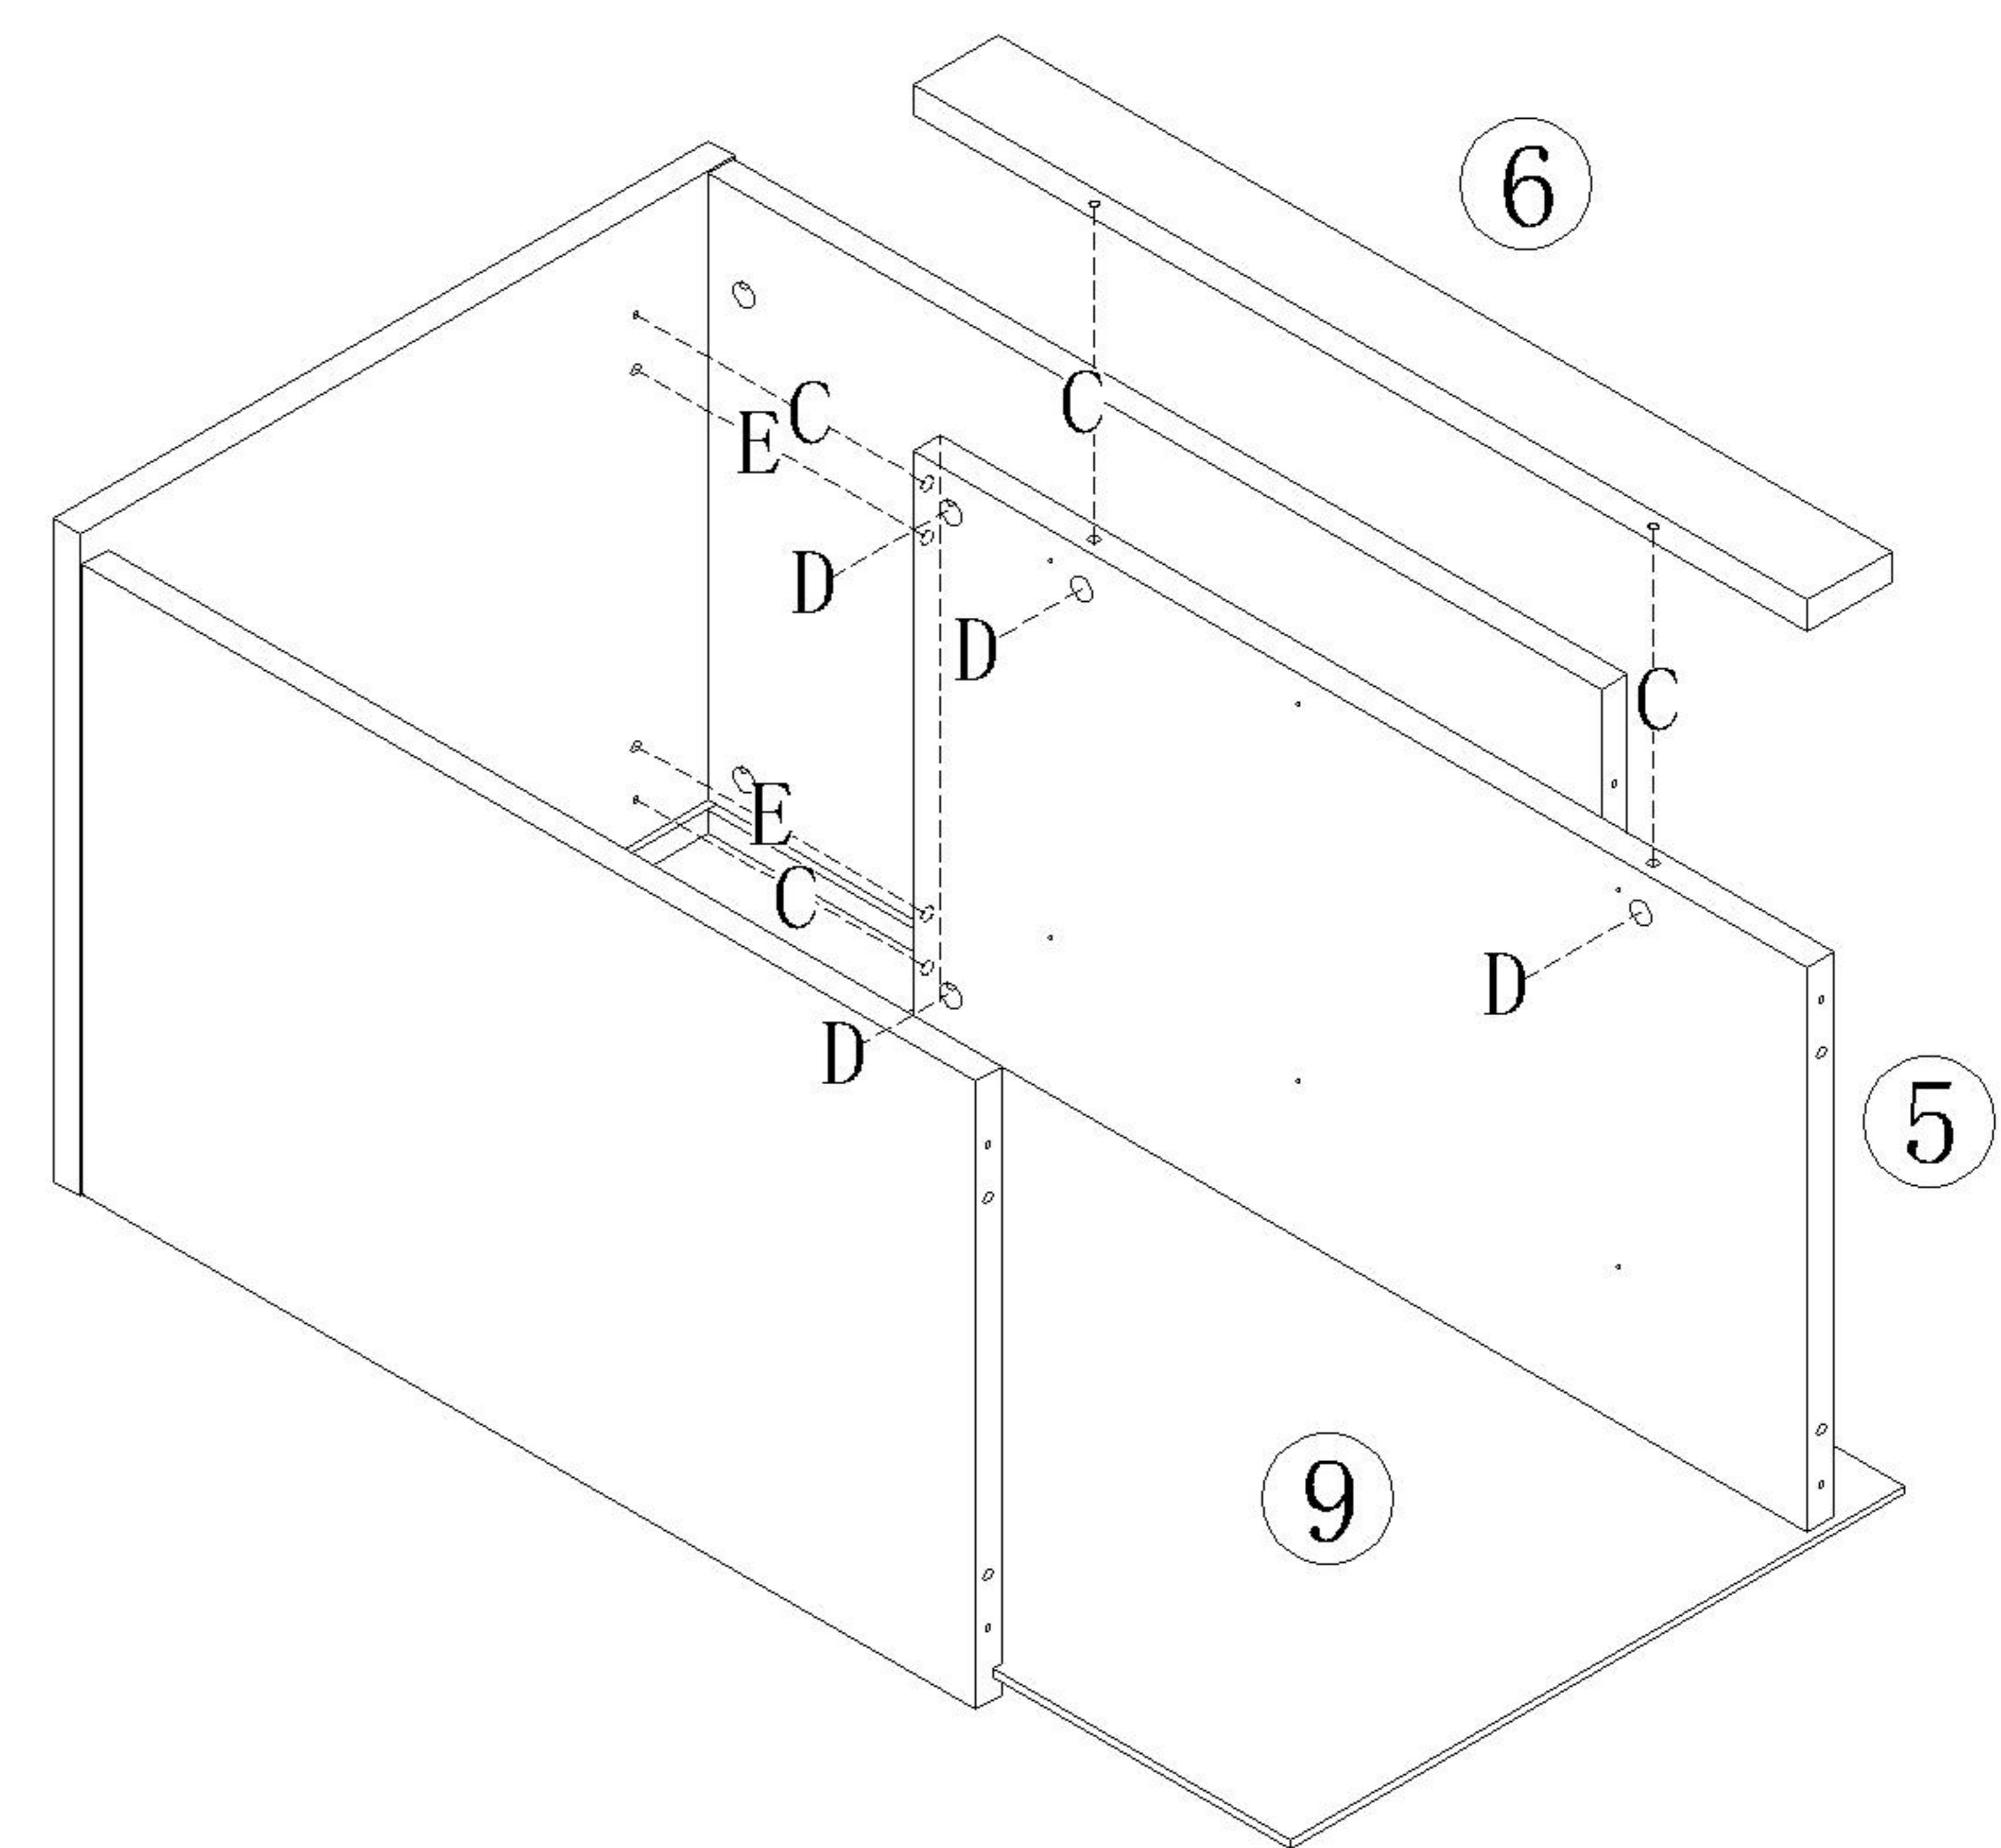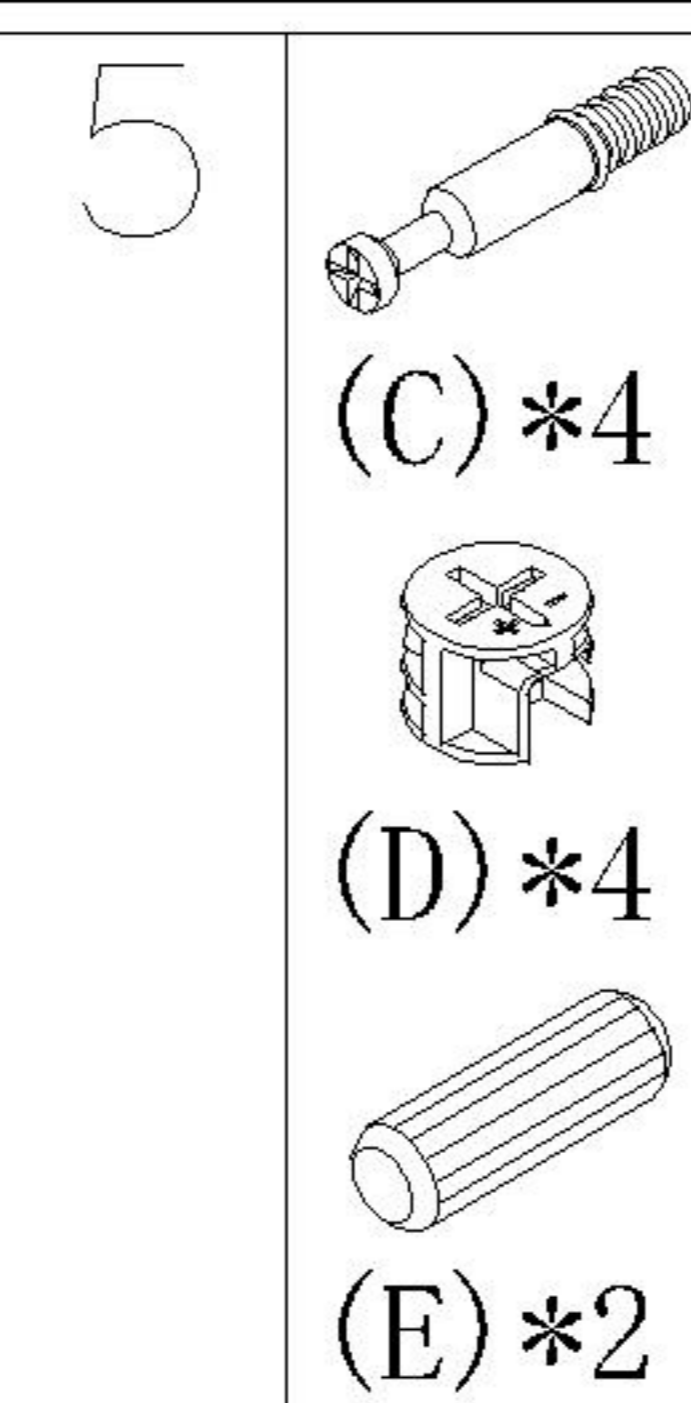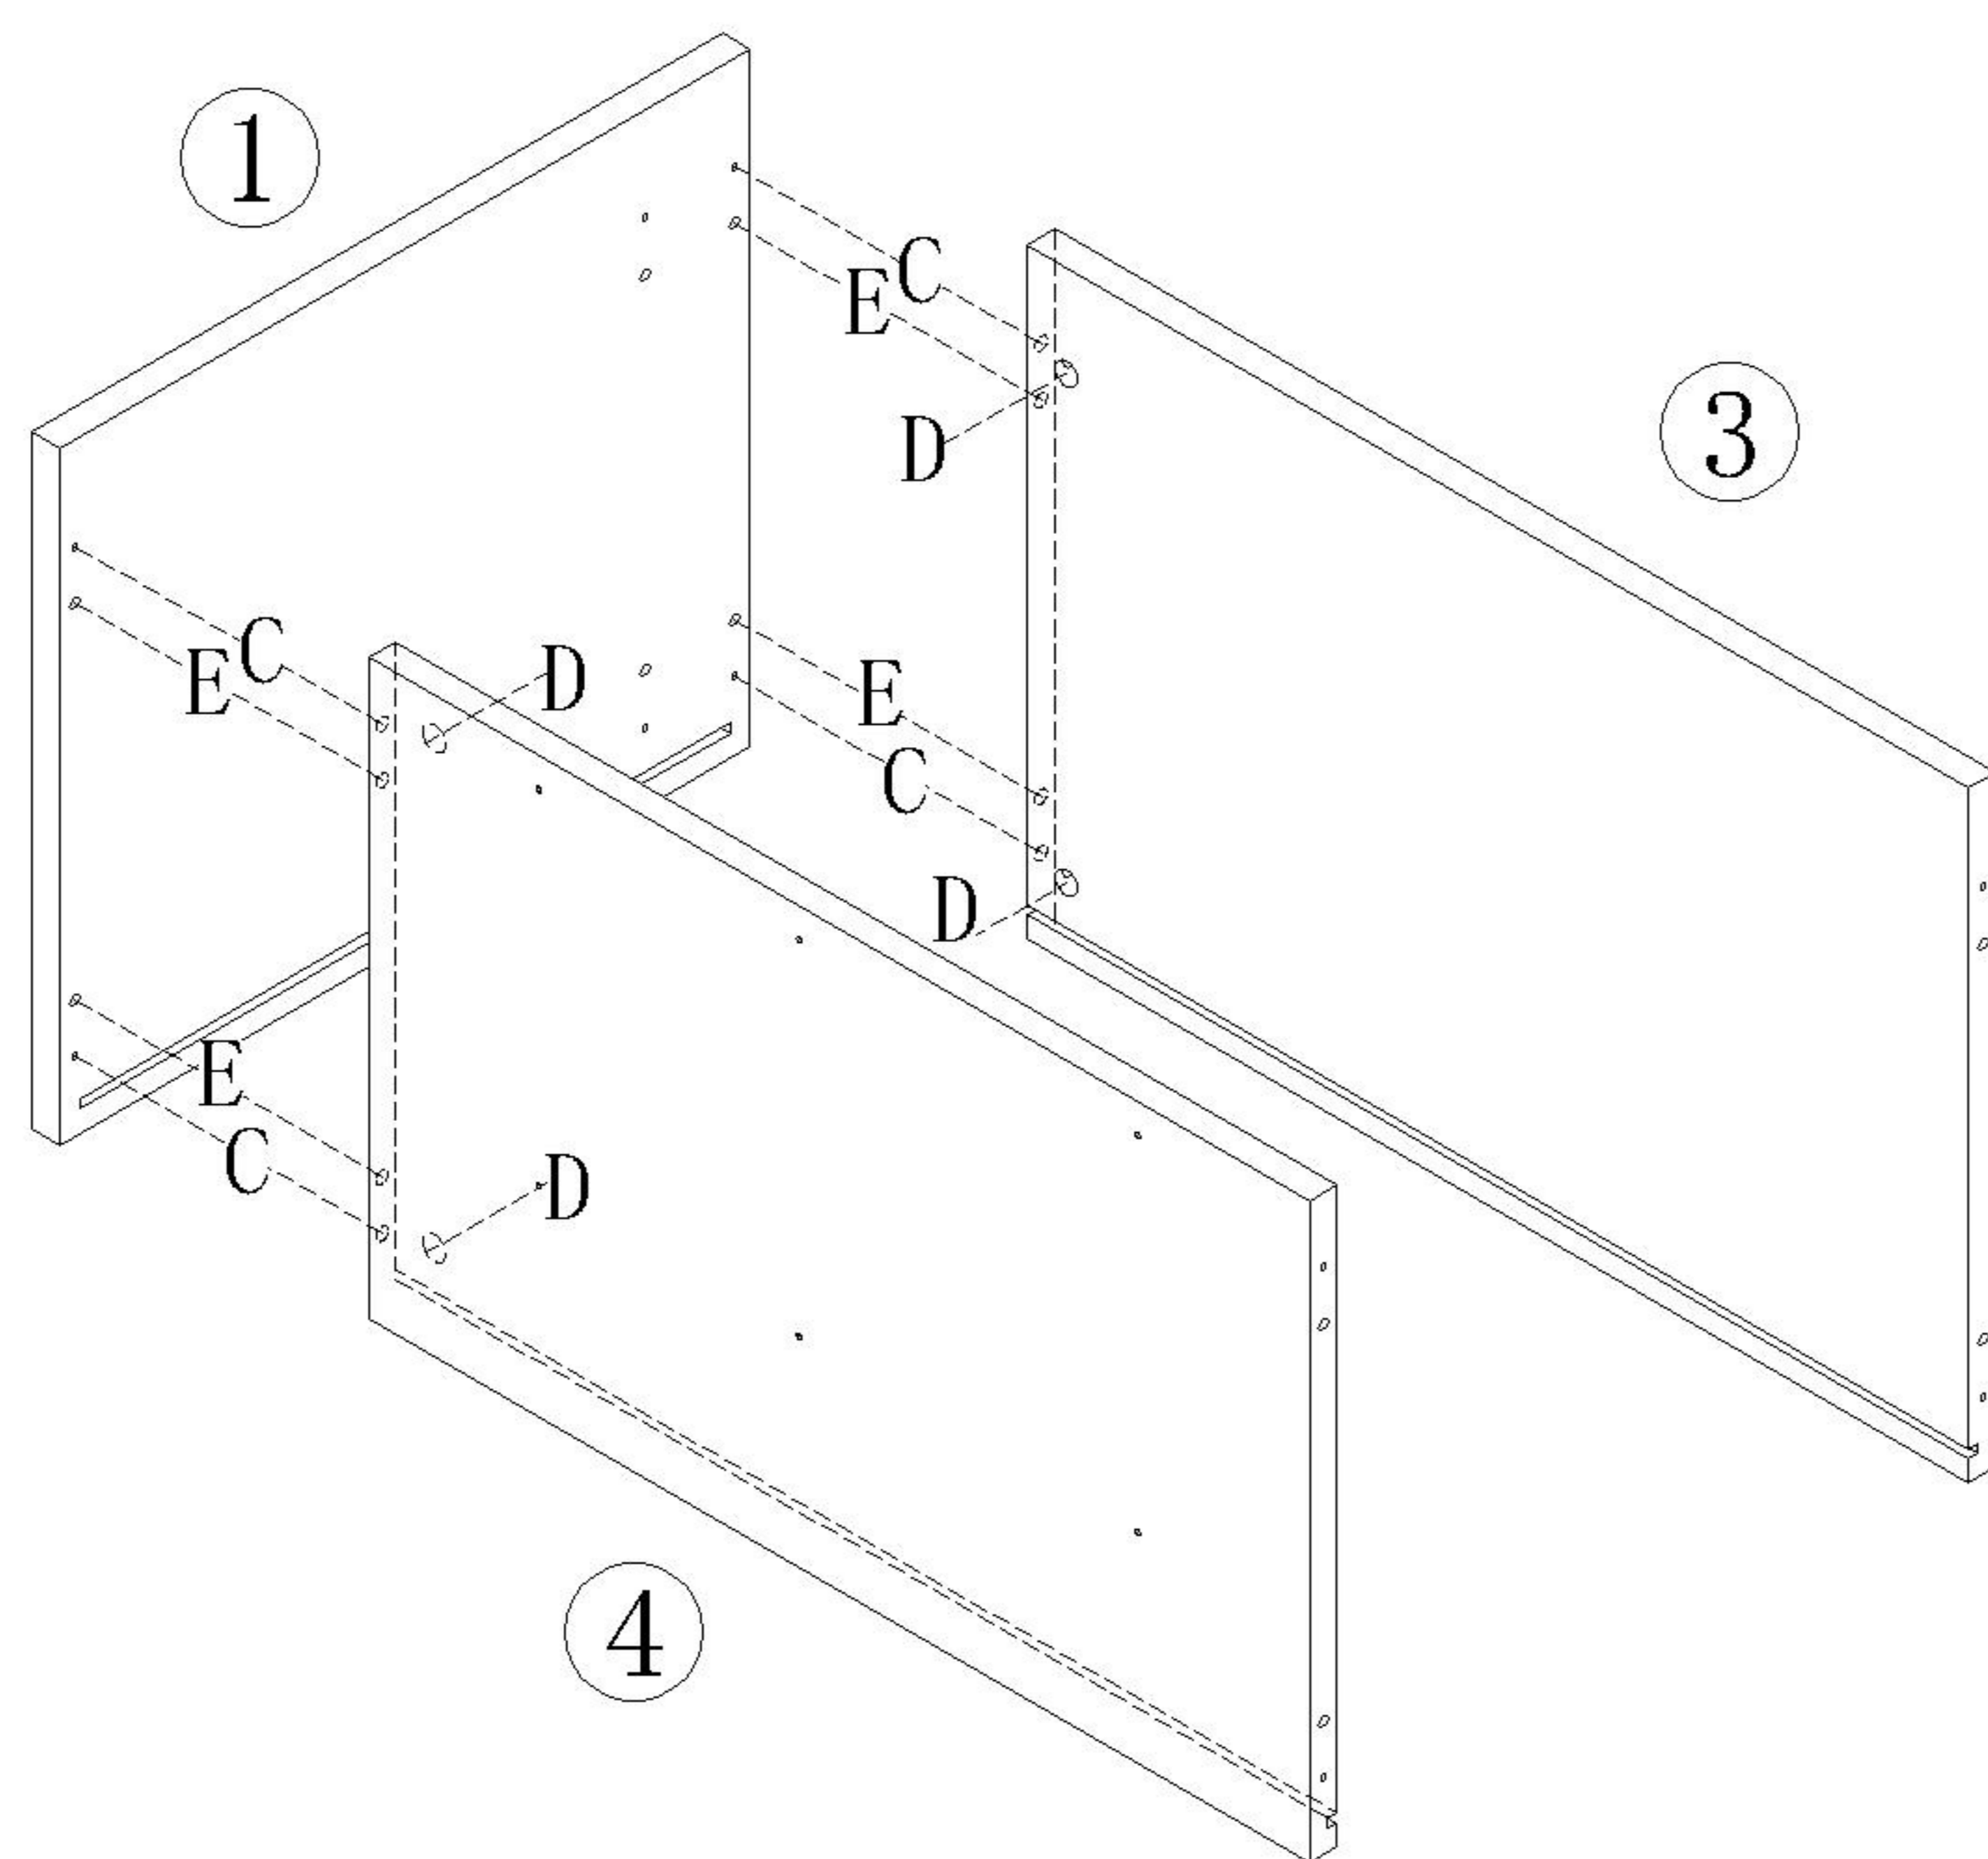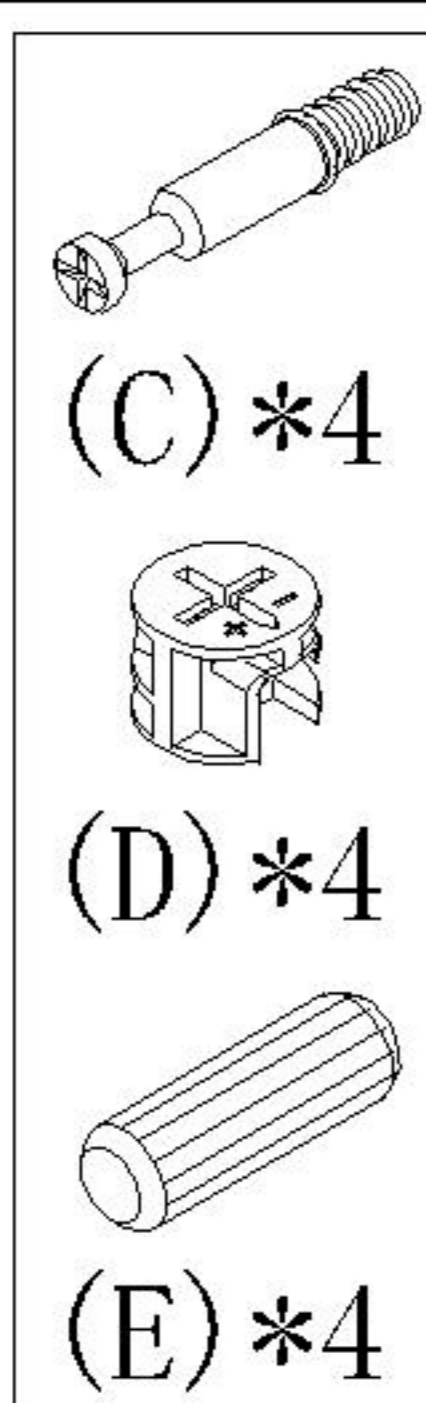


0I2E-A三斗柜



安装方法

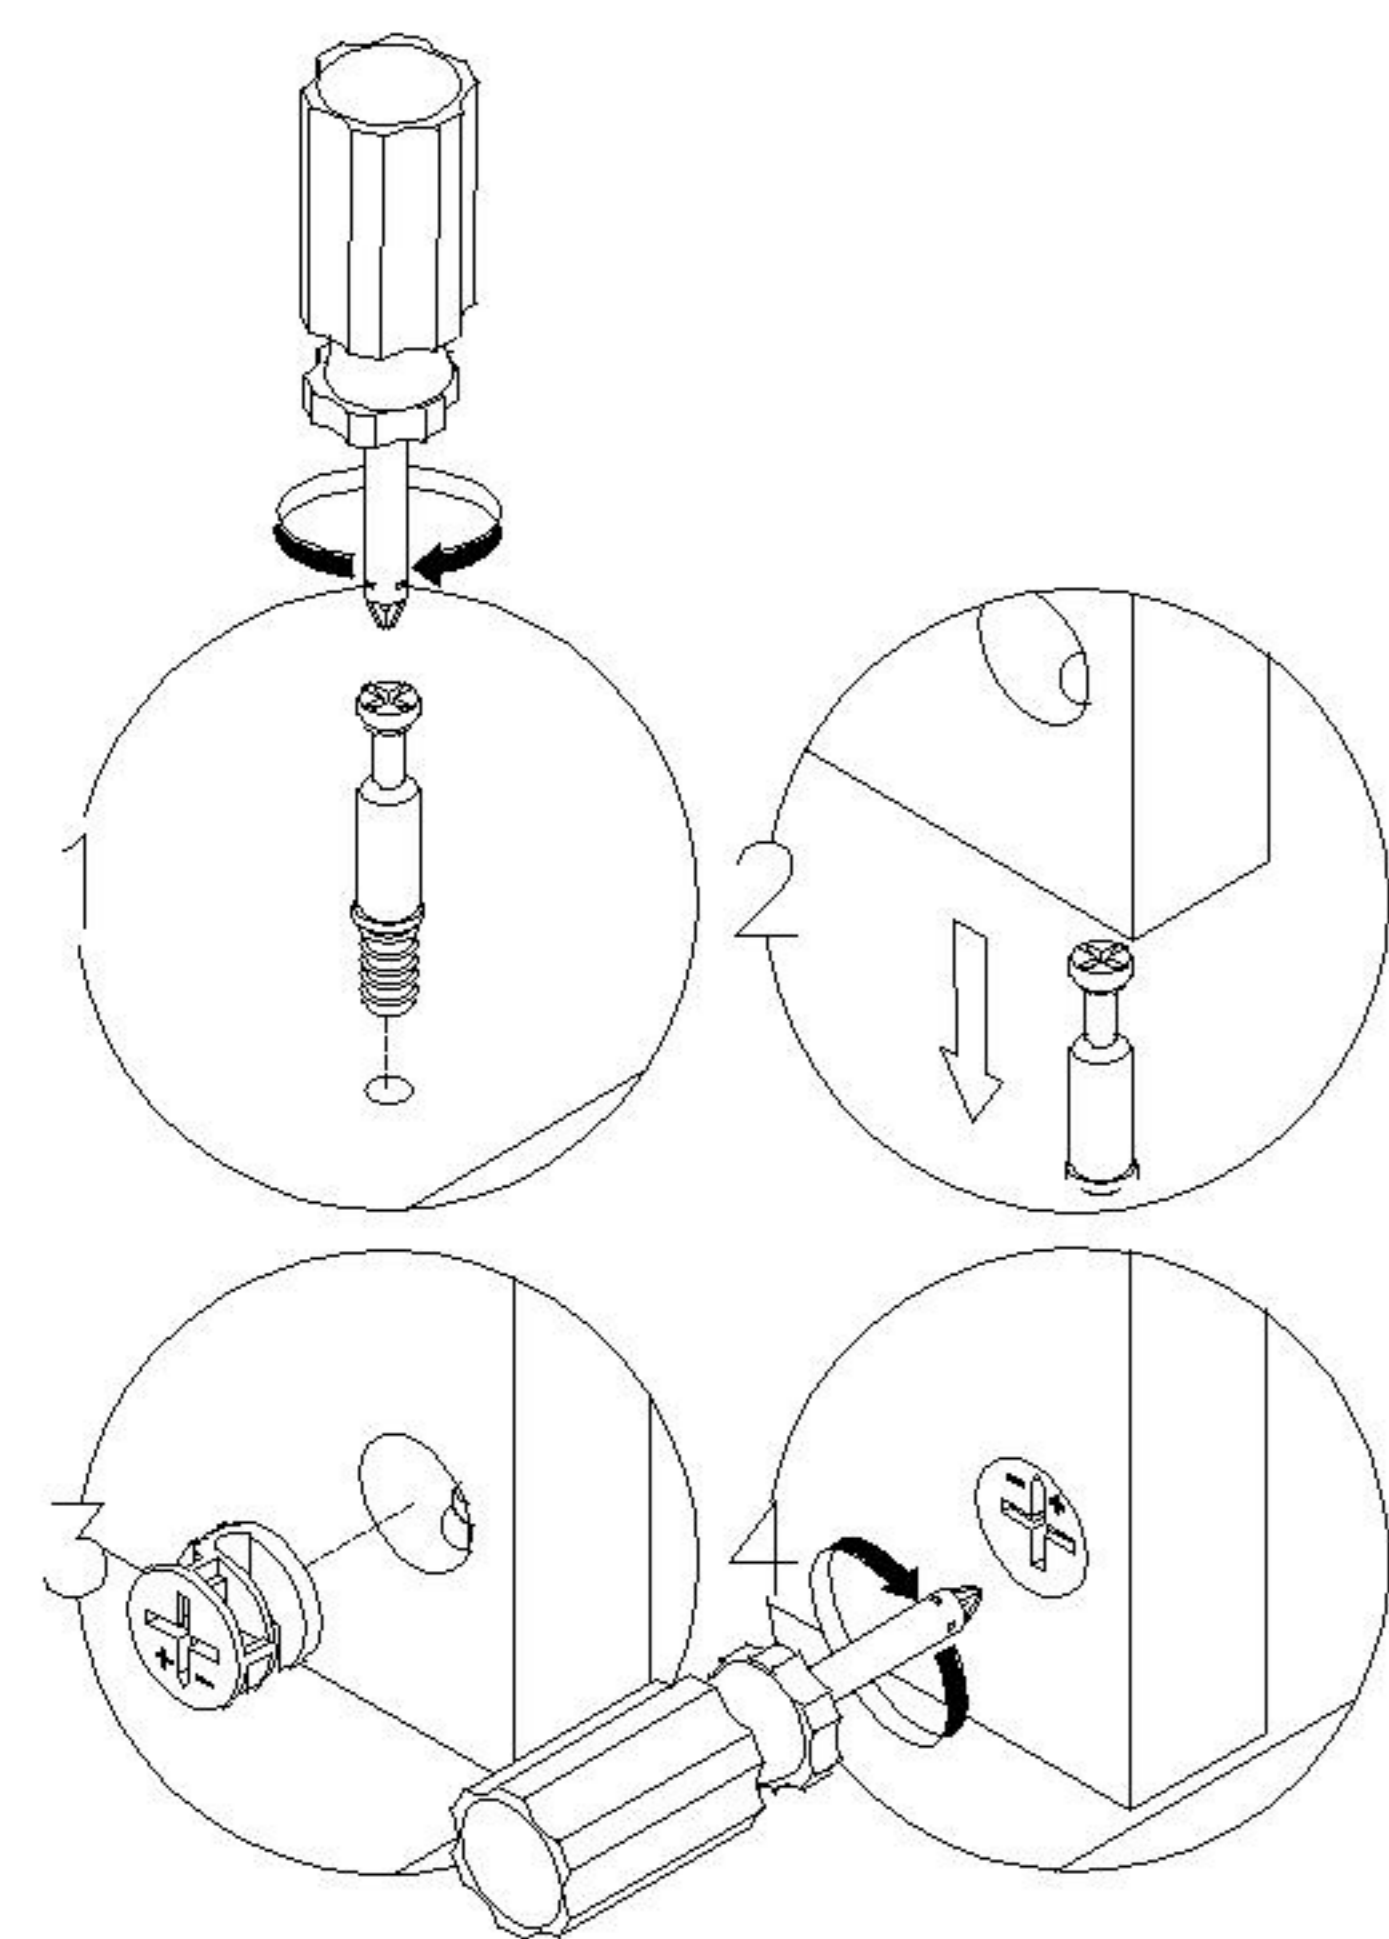


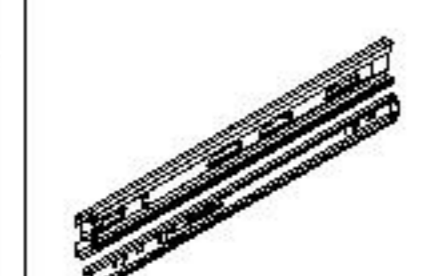
大二合一

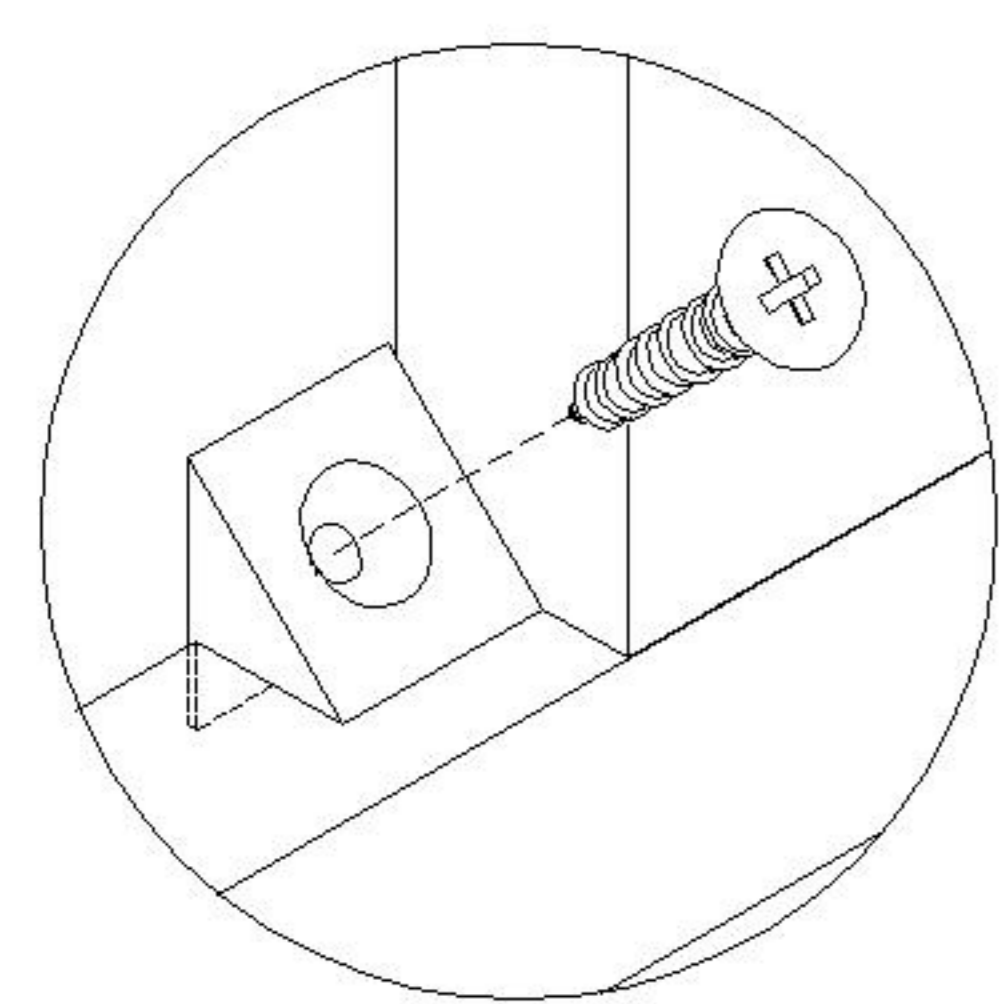



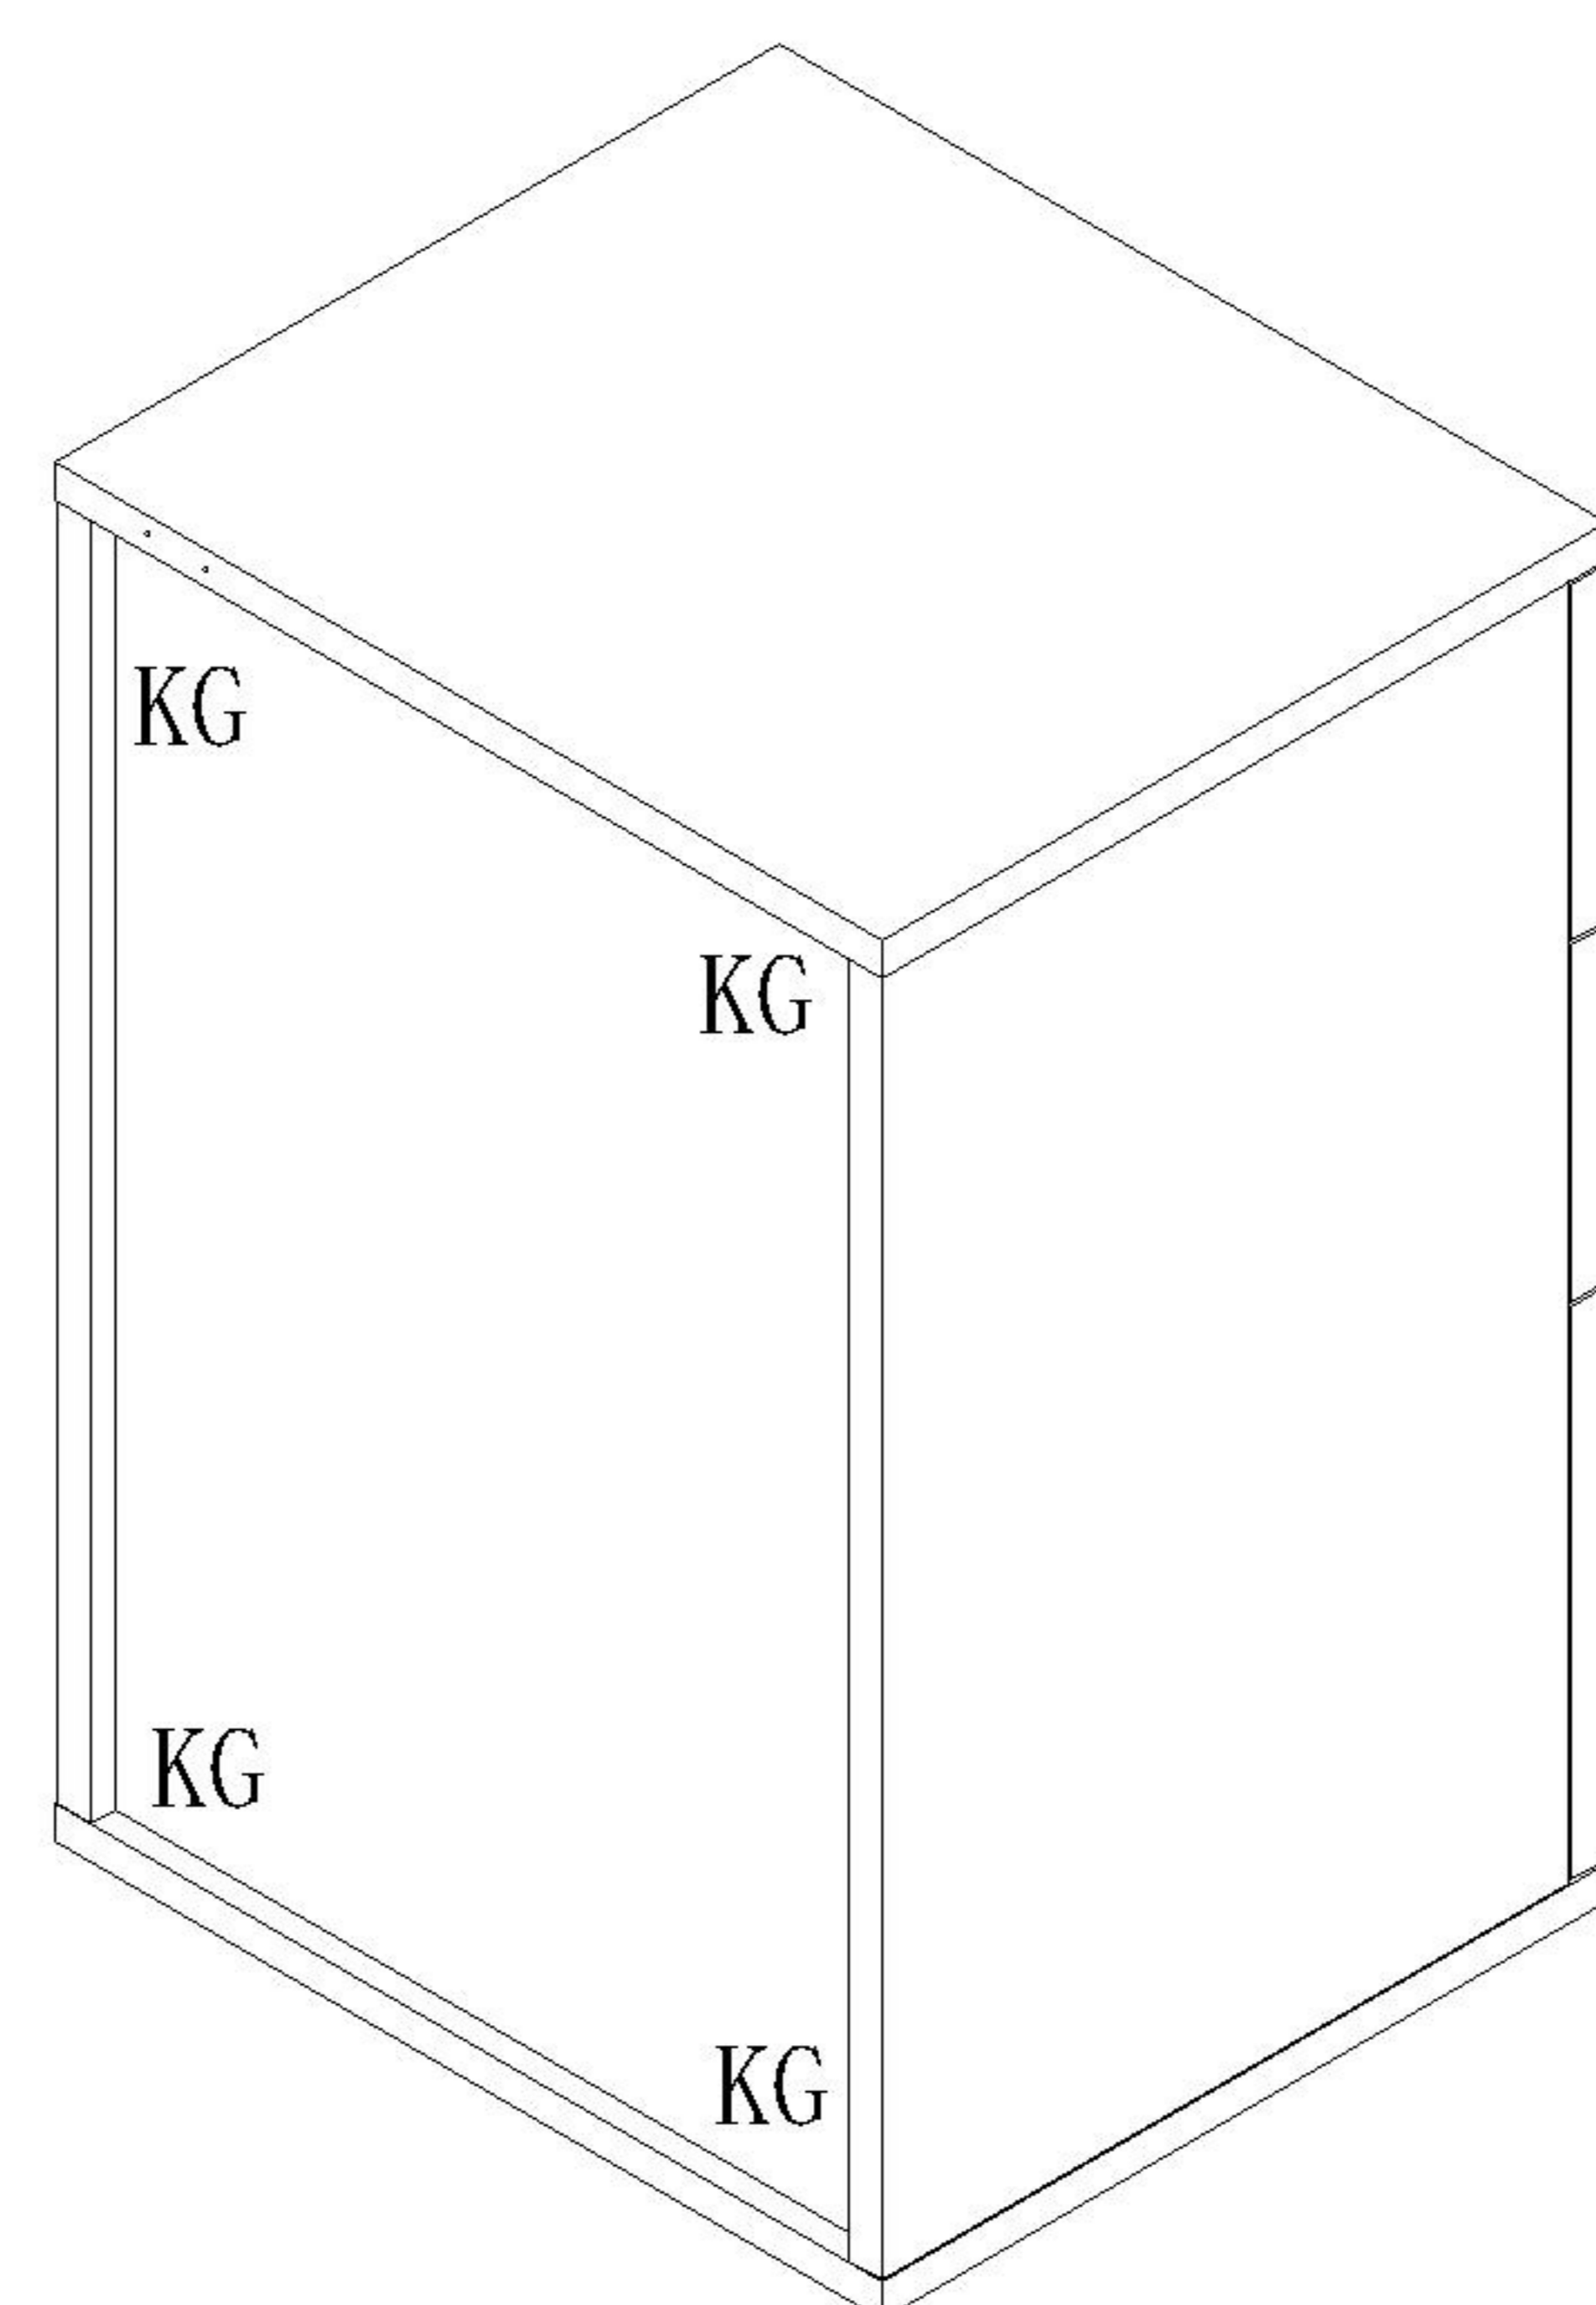
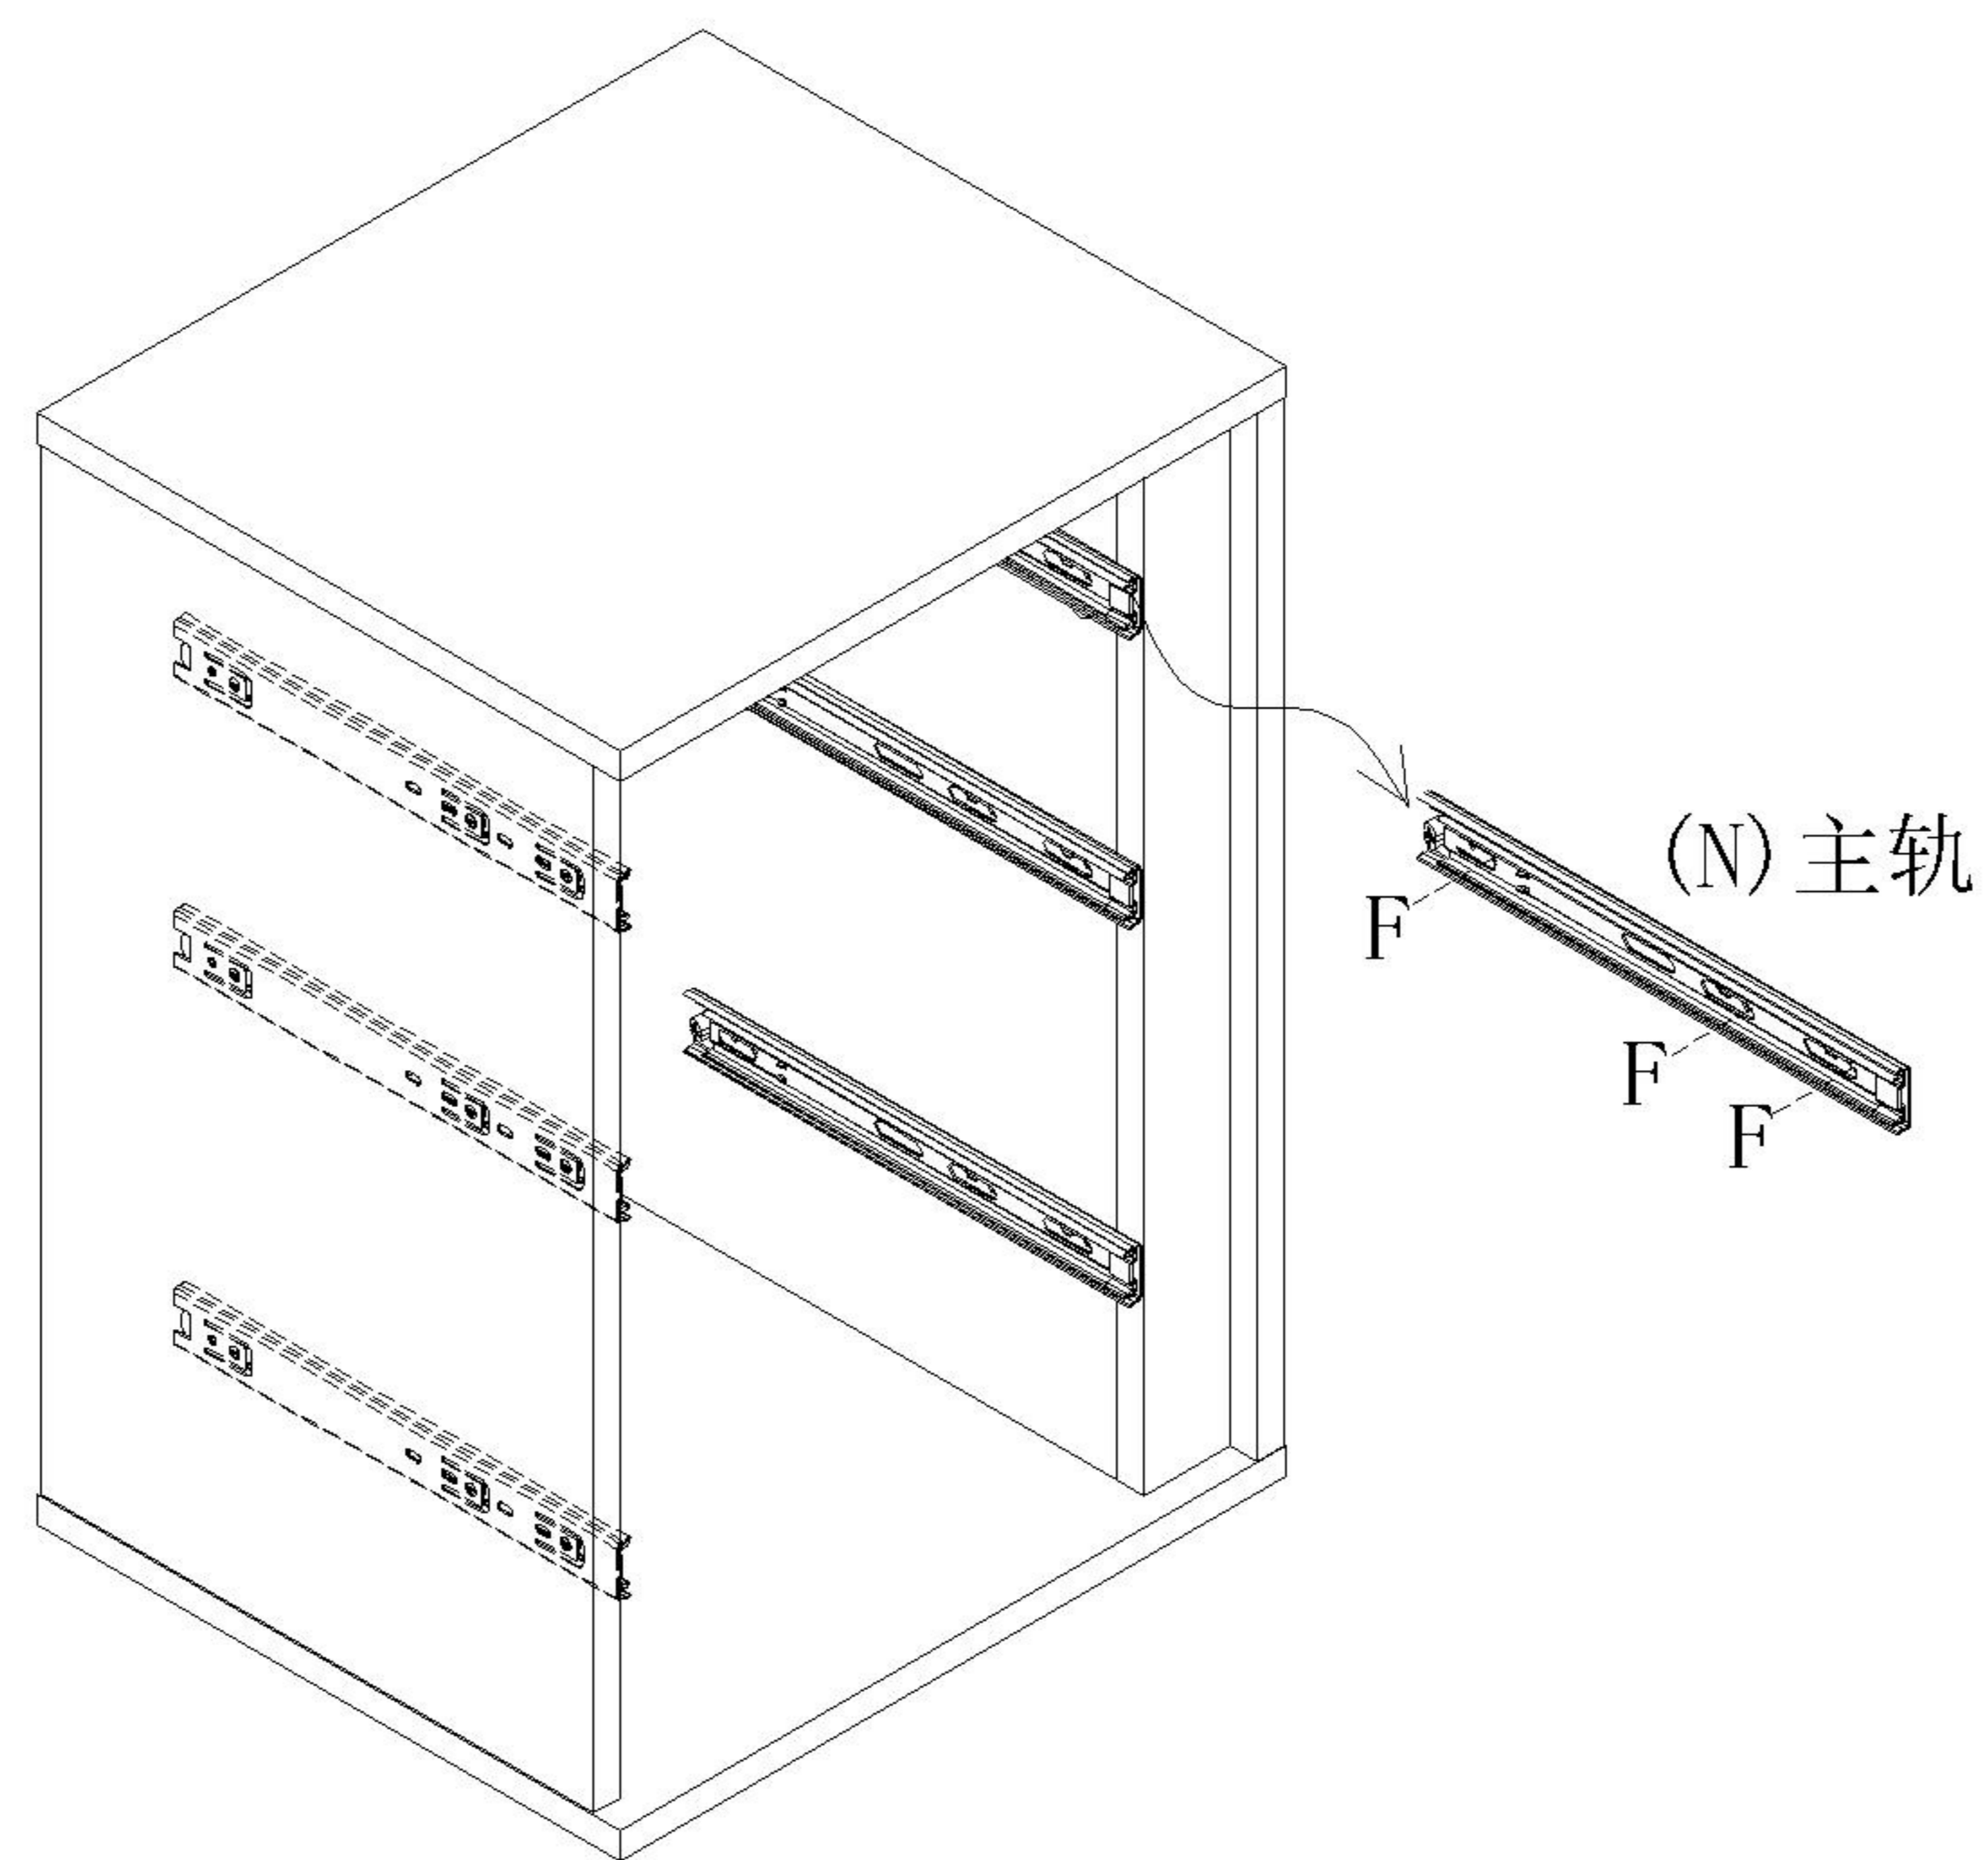
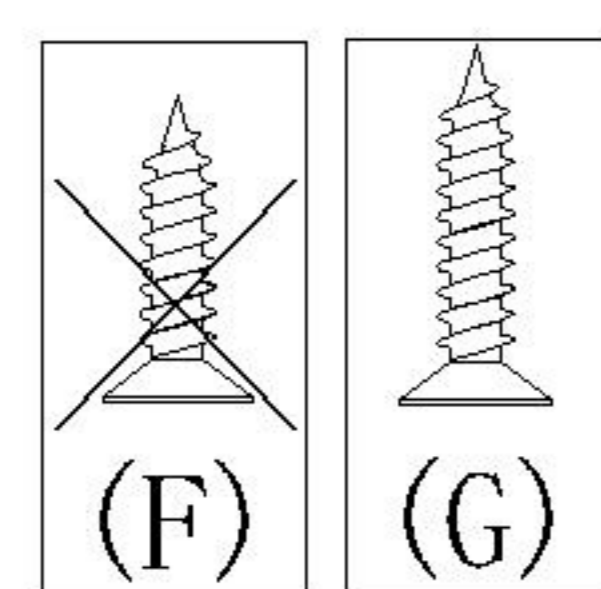
背板扣

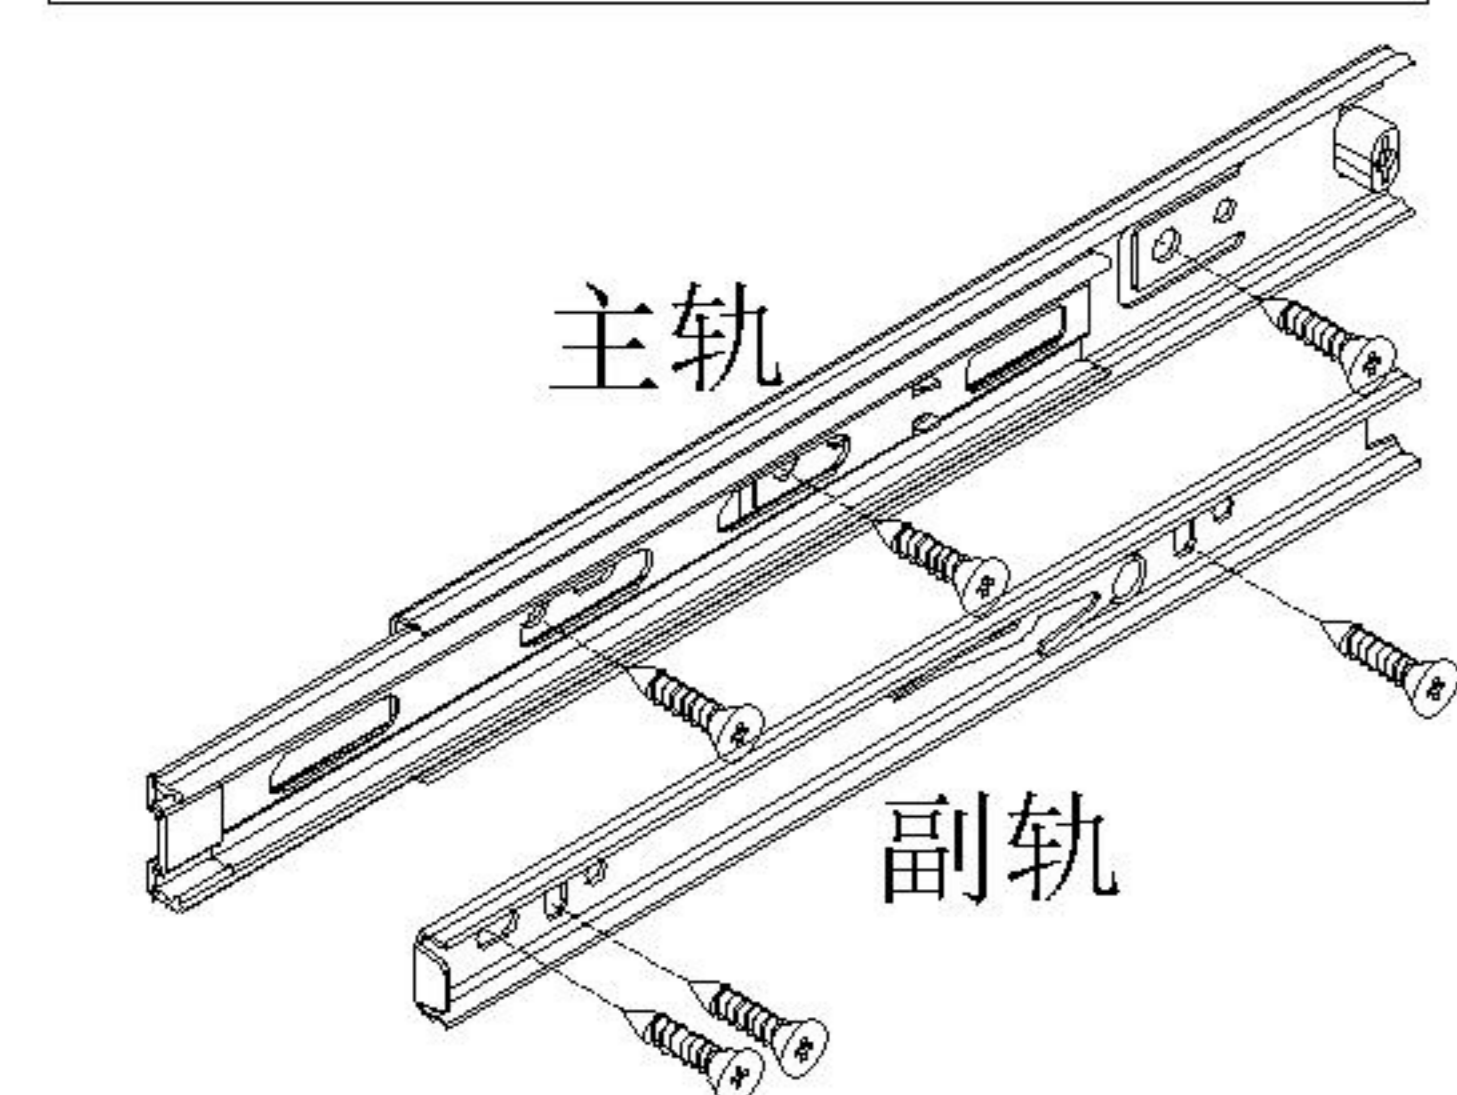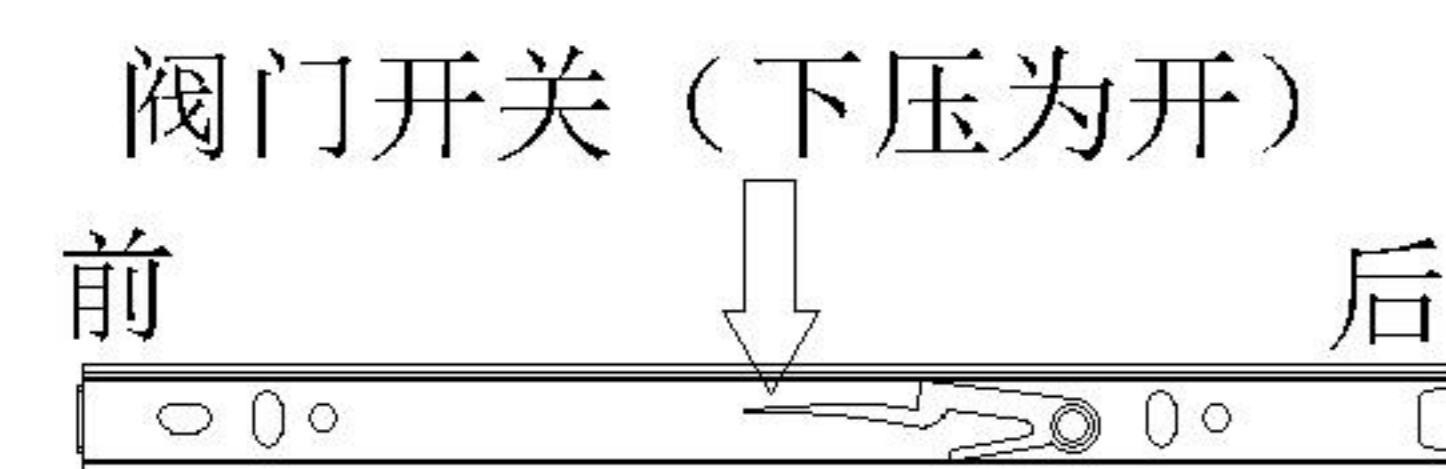

三节滚珠导轨-12''


 (F)*18
 (N)*3

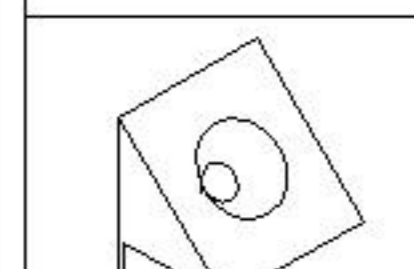 (K)*4
 (G)*4



11


9

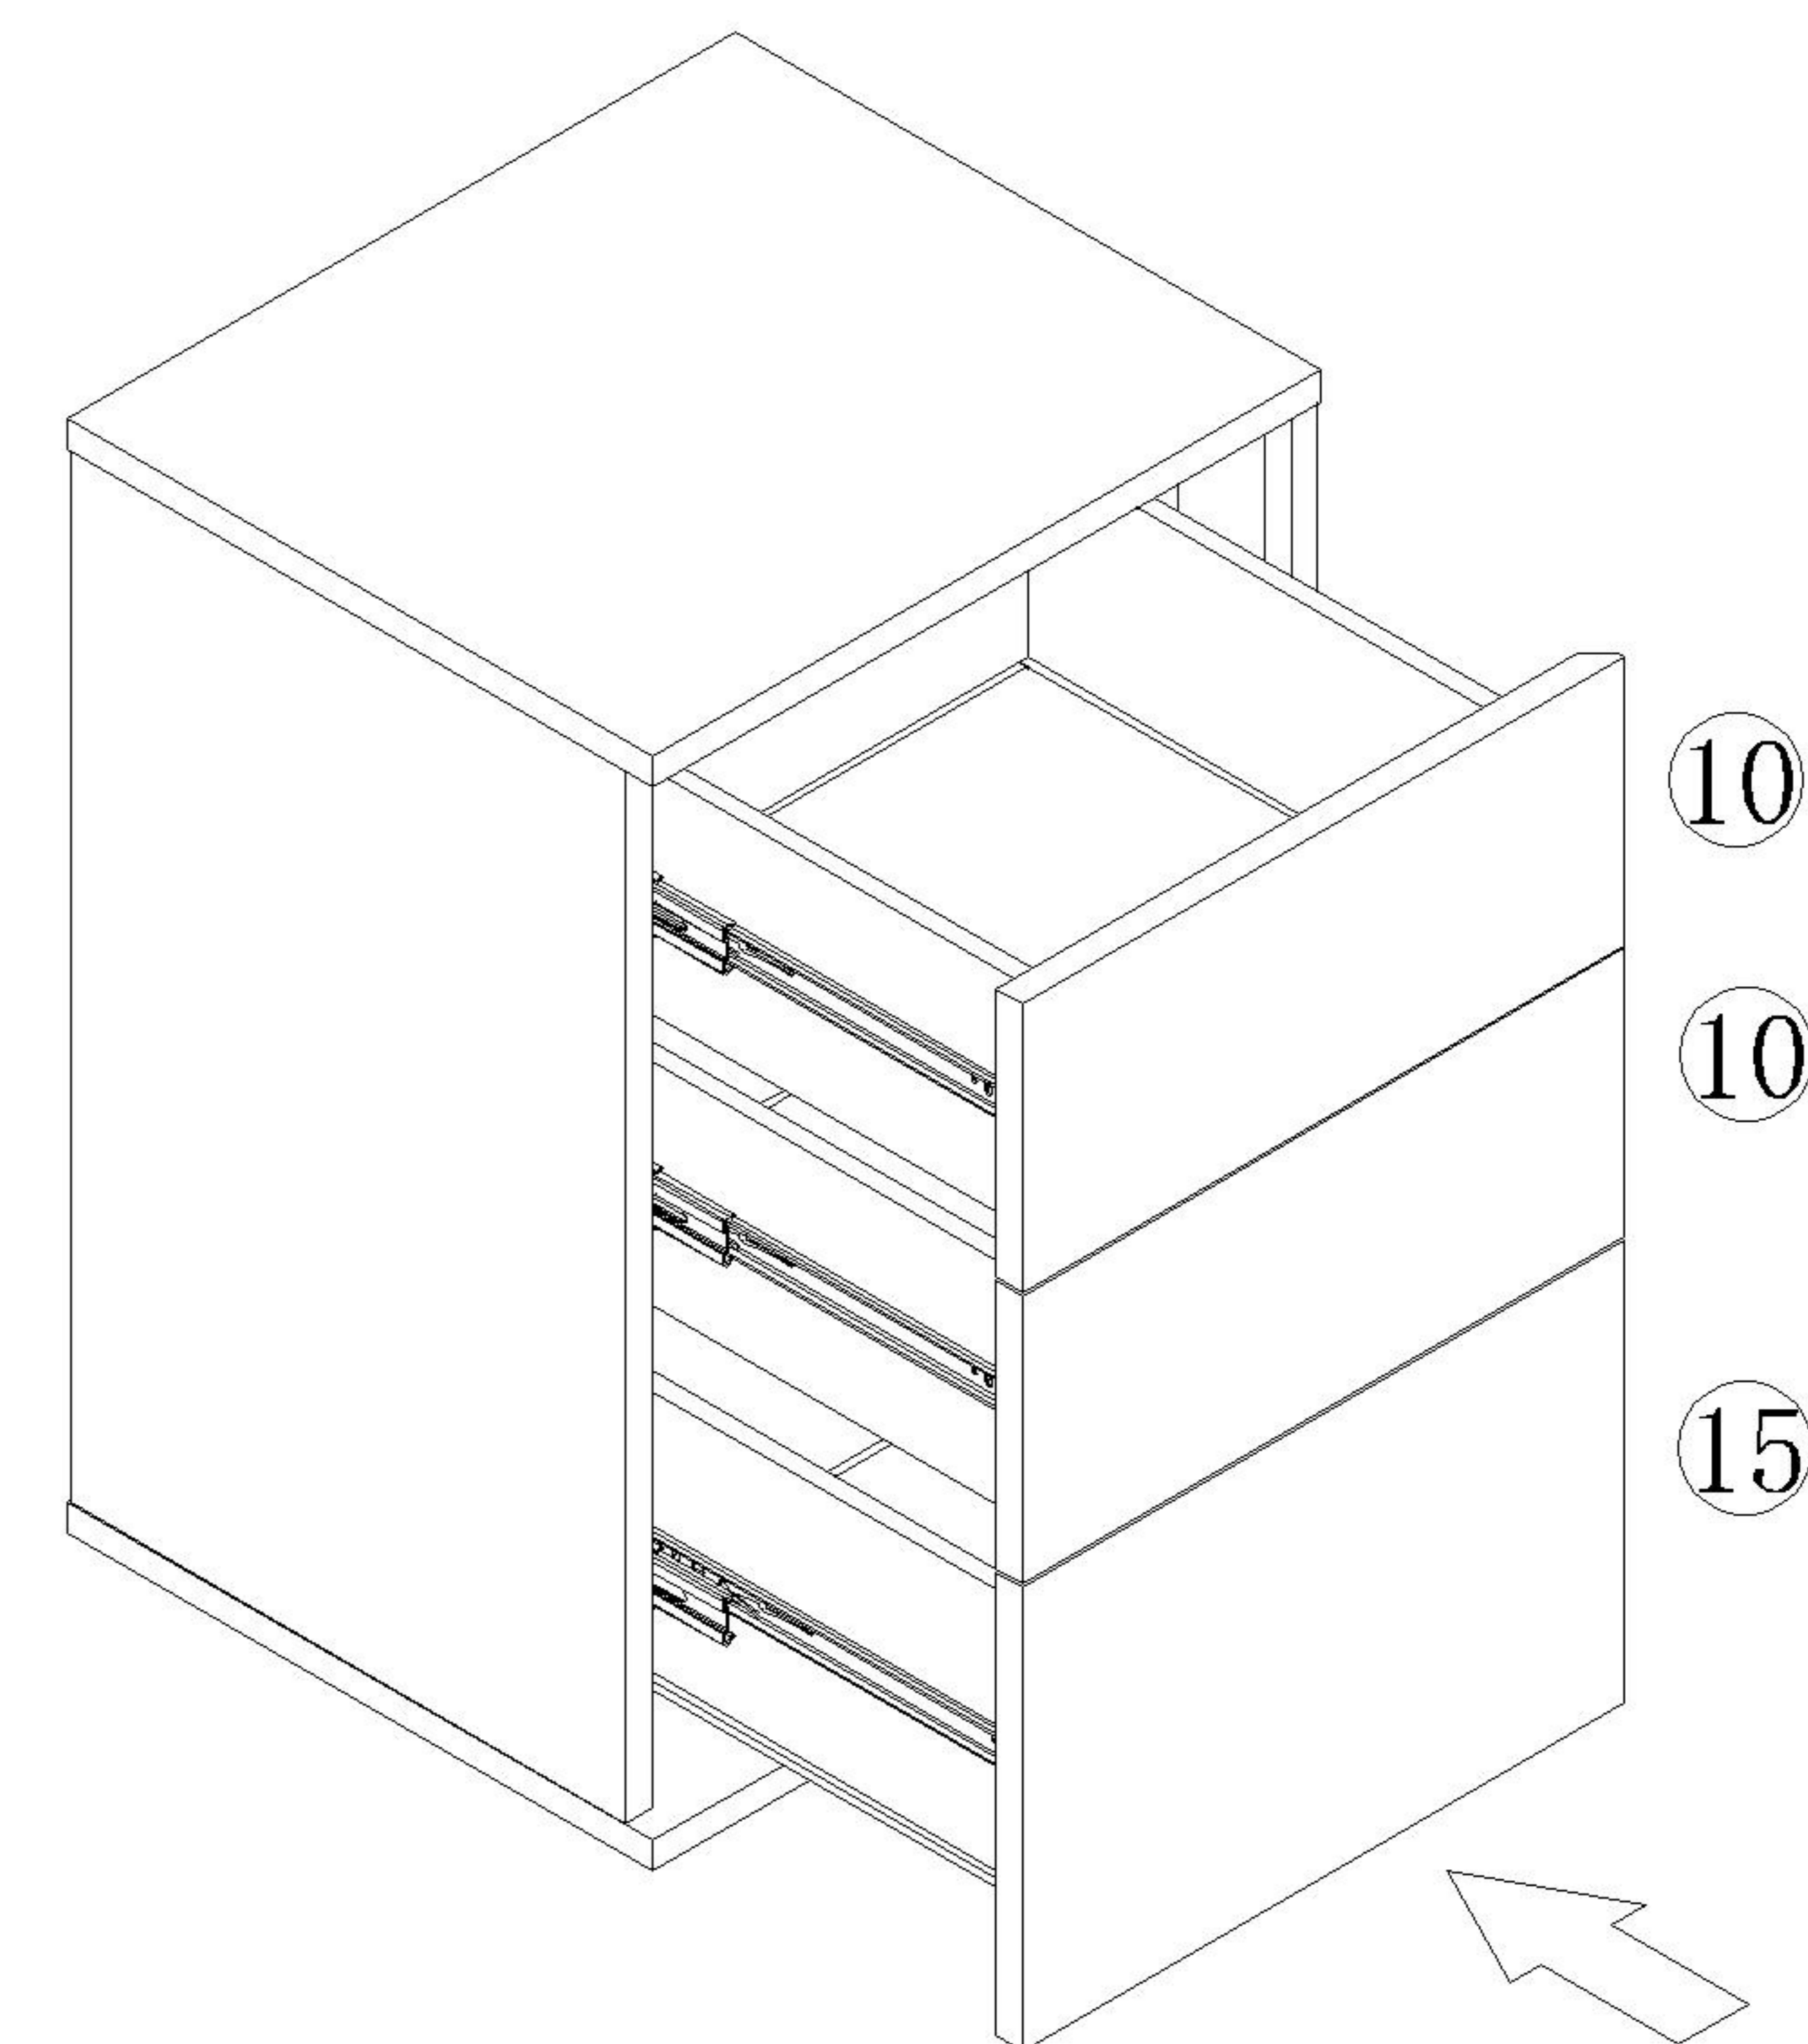

12



10

(0)*1


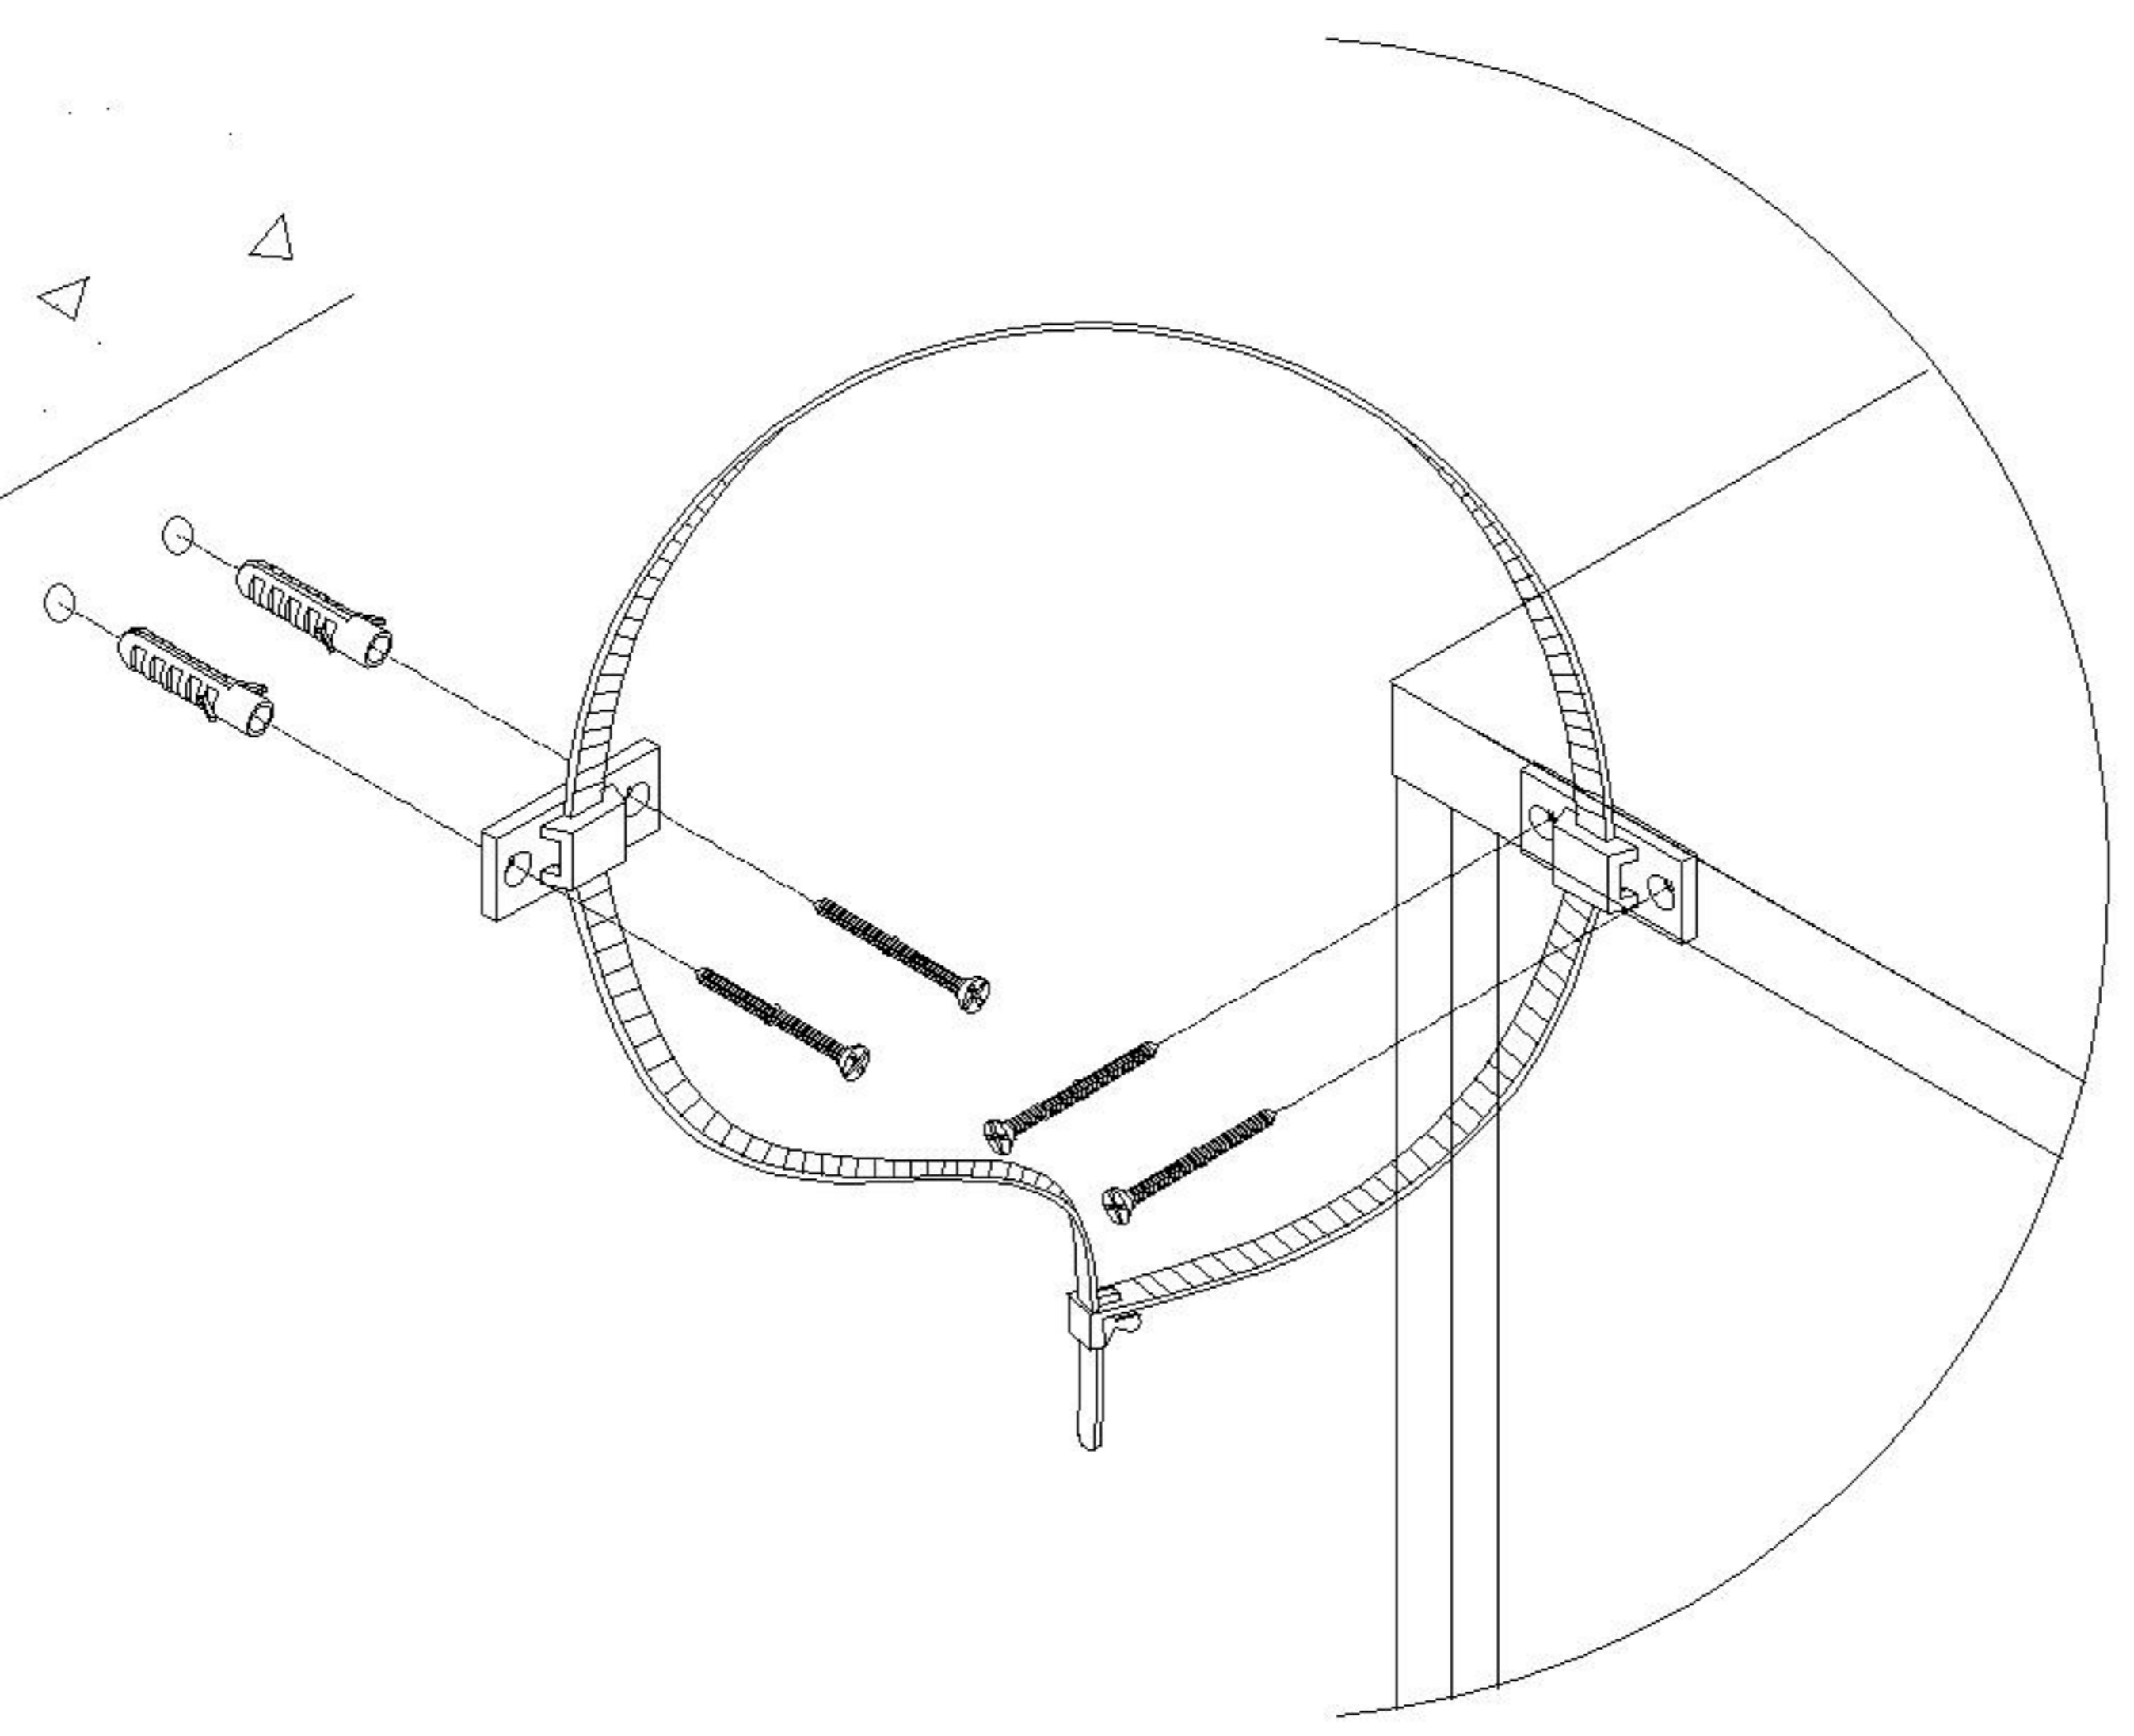



0处放大图


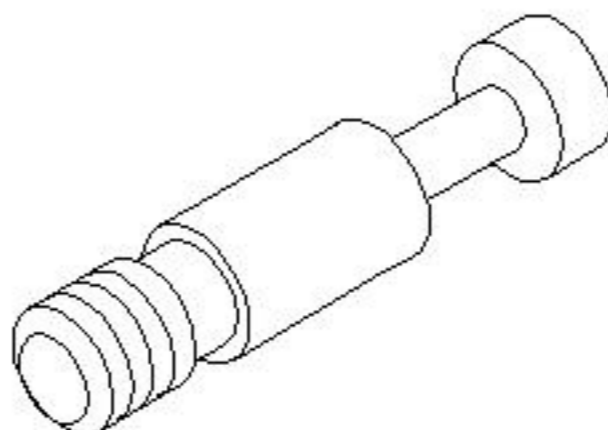
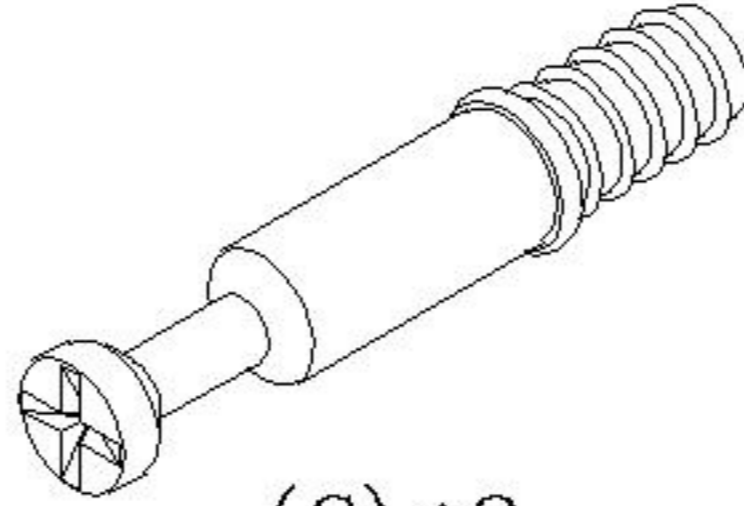
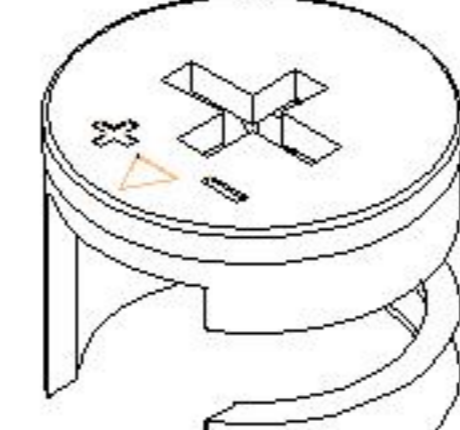
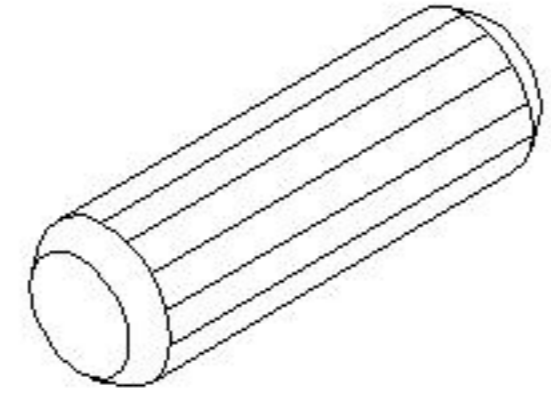
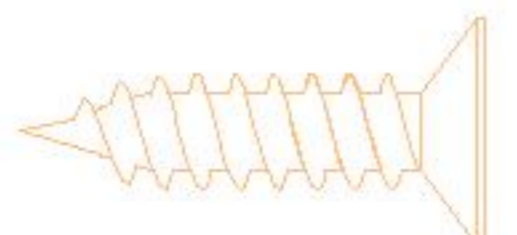
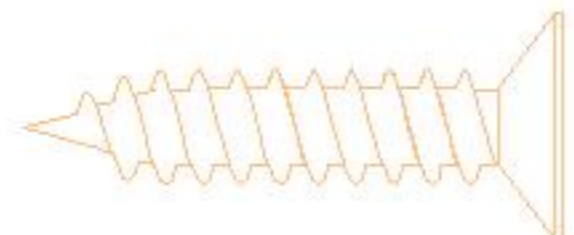
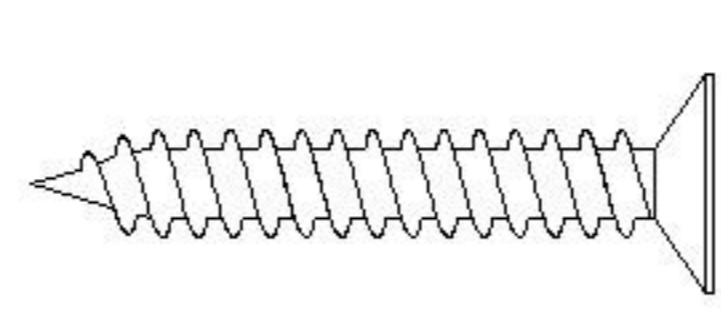
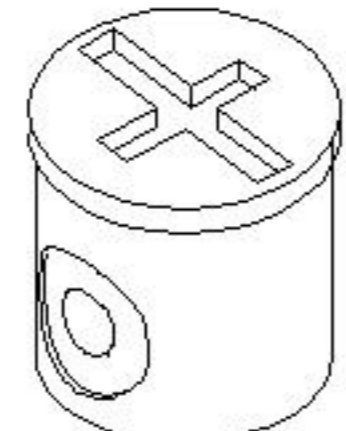
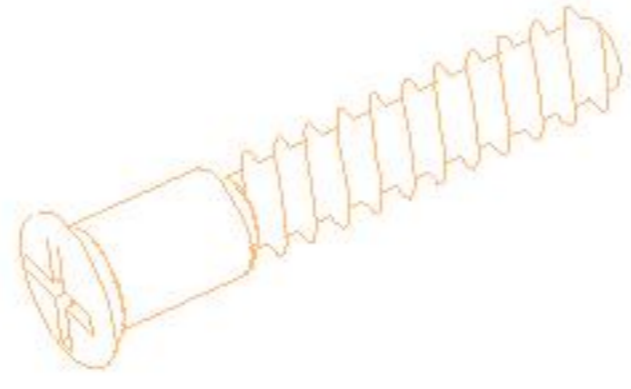
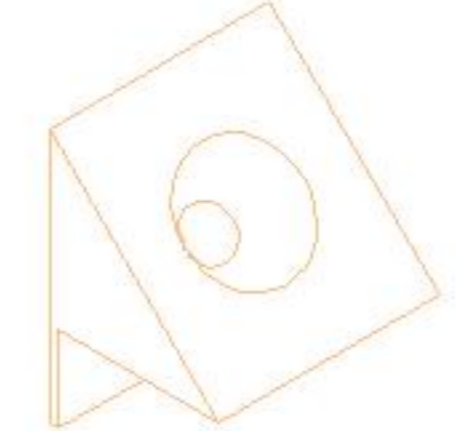
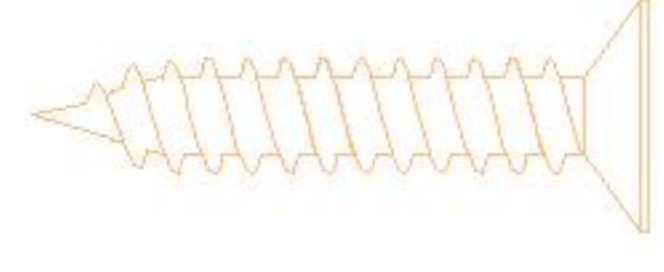


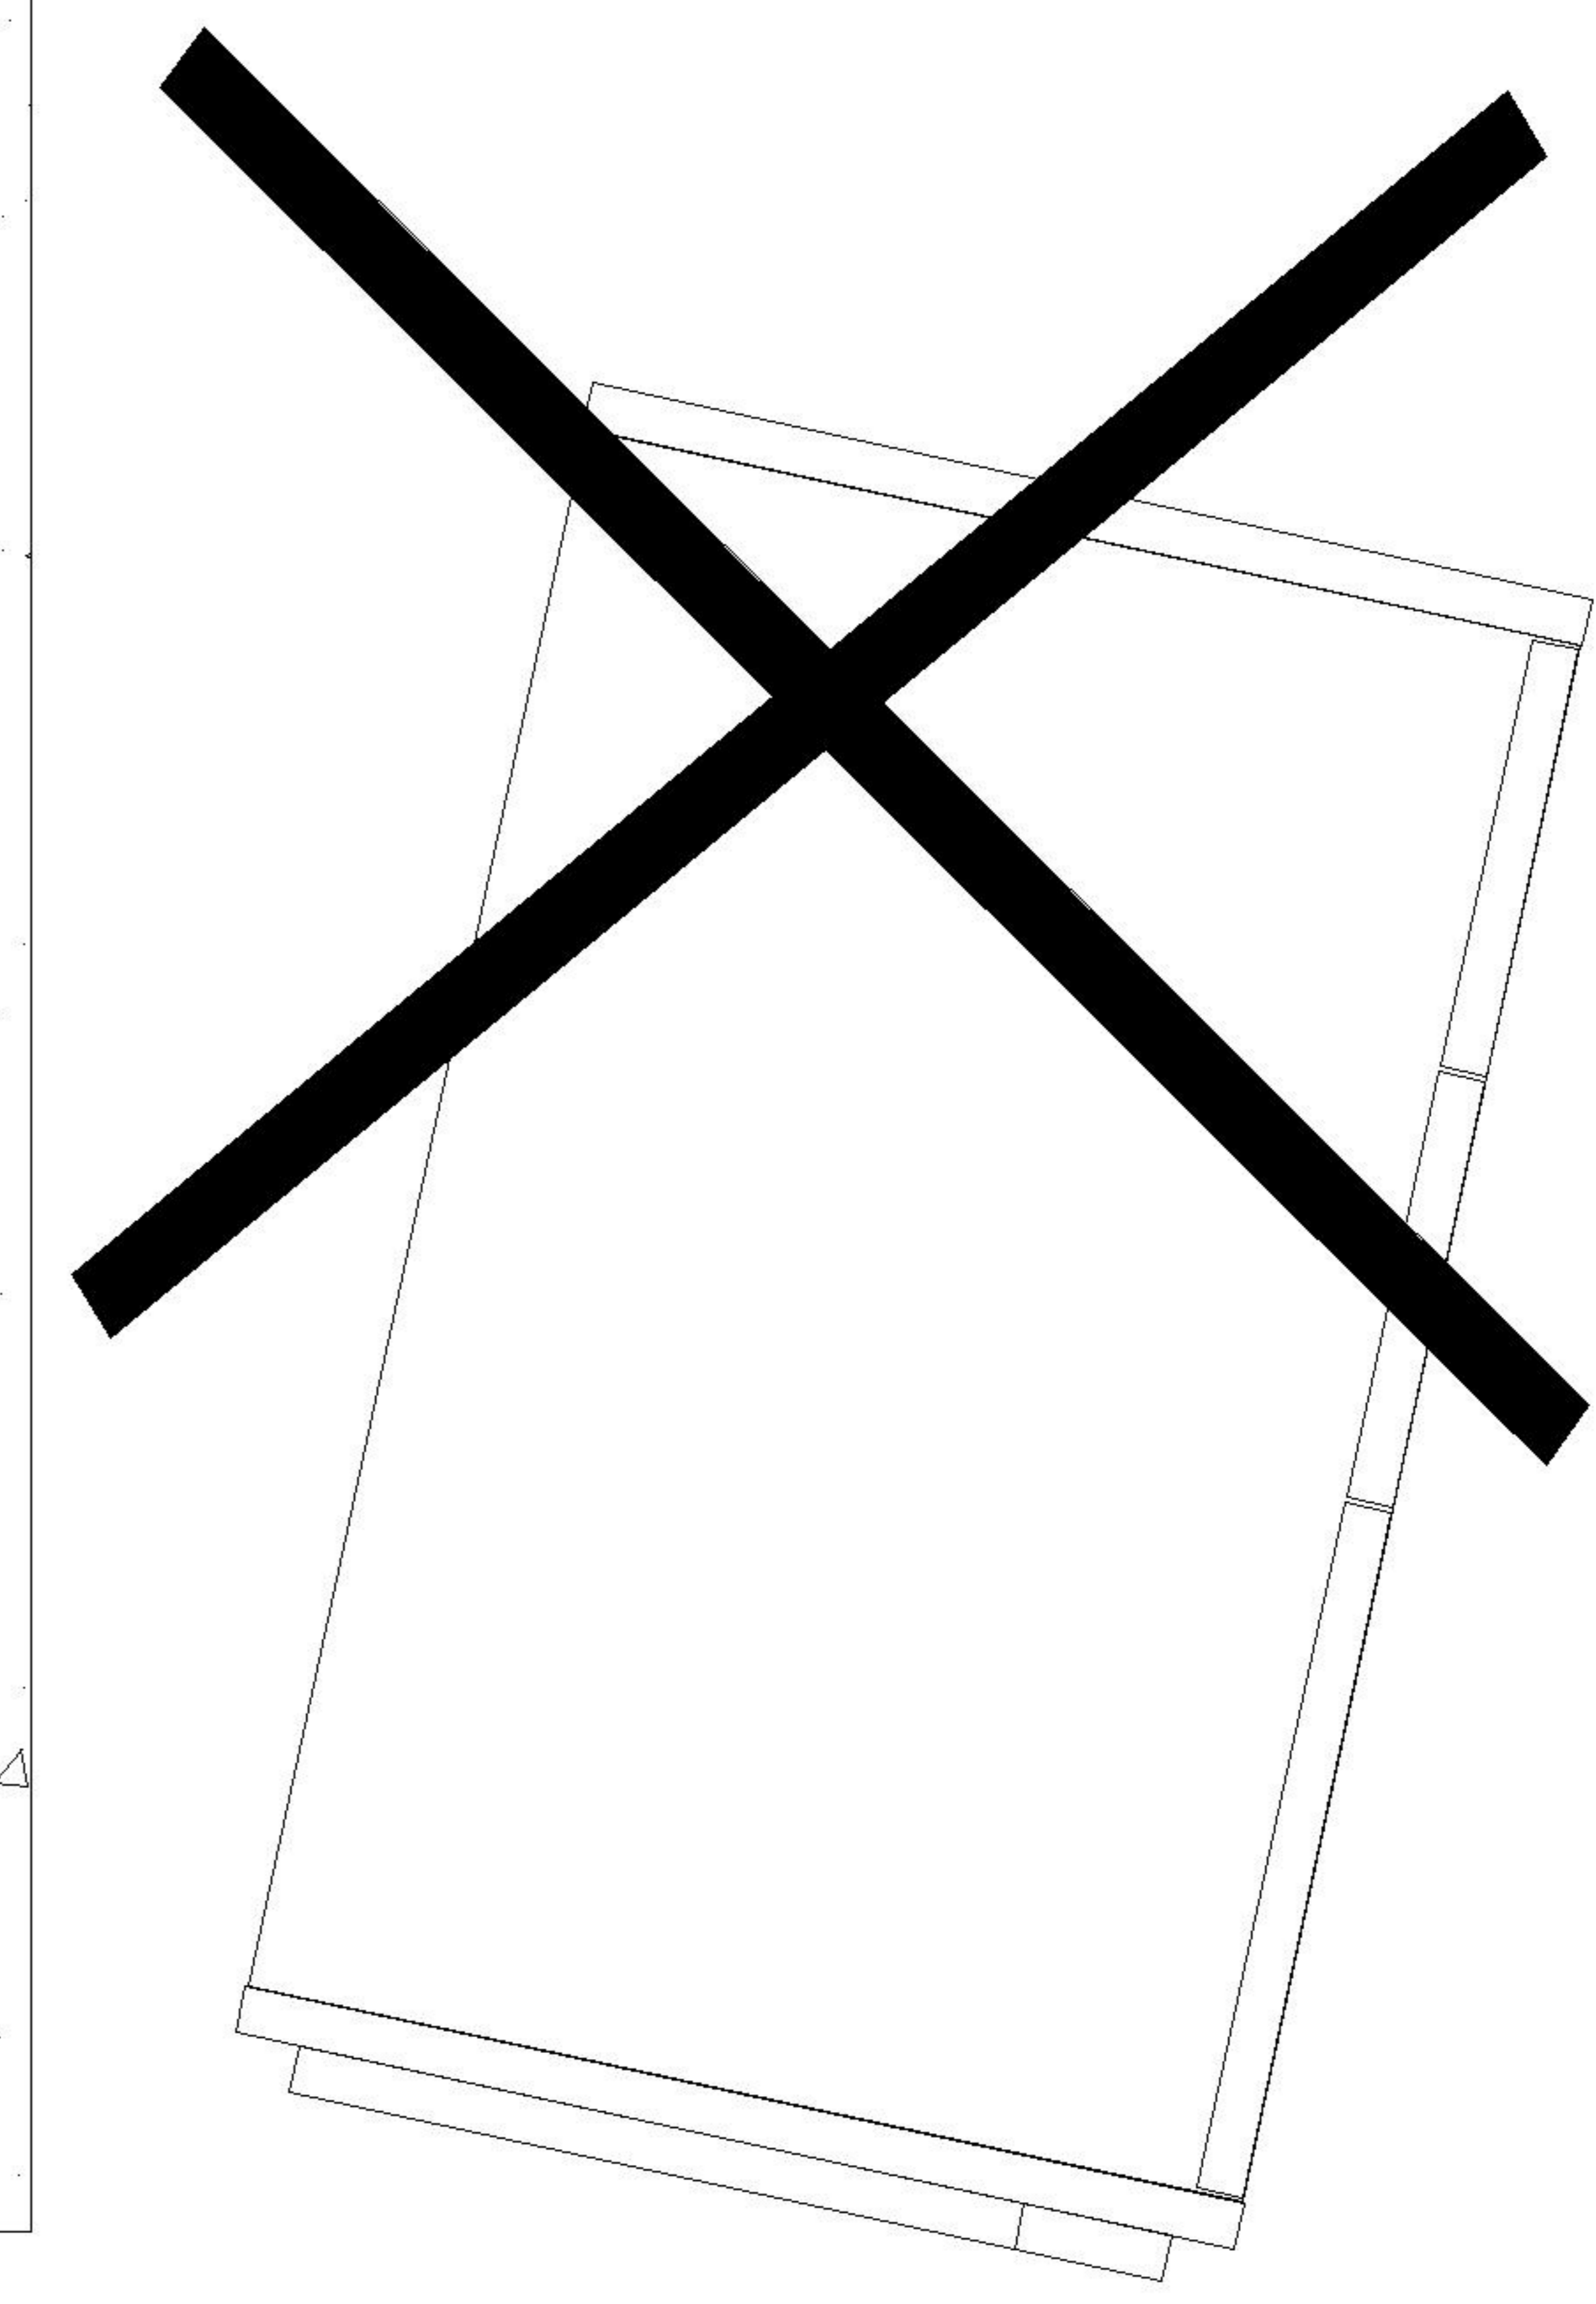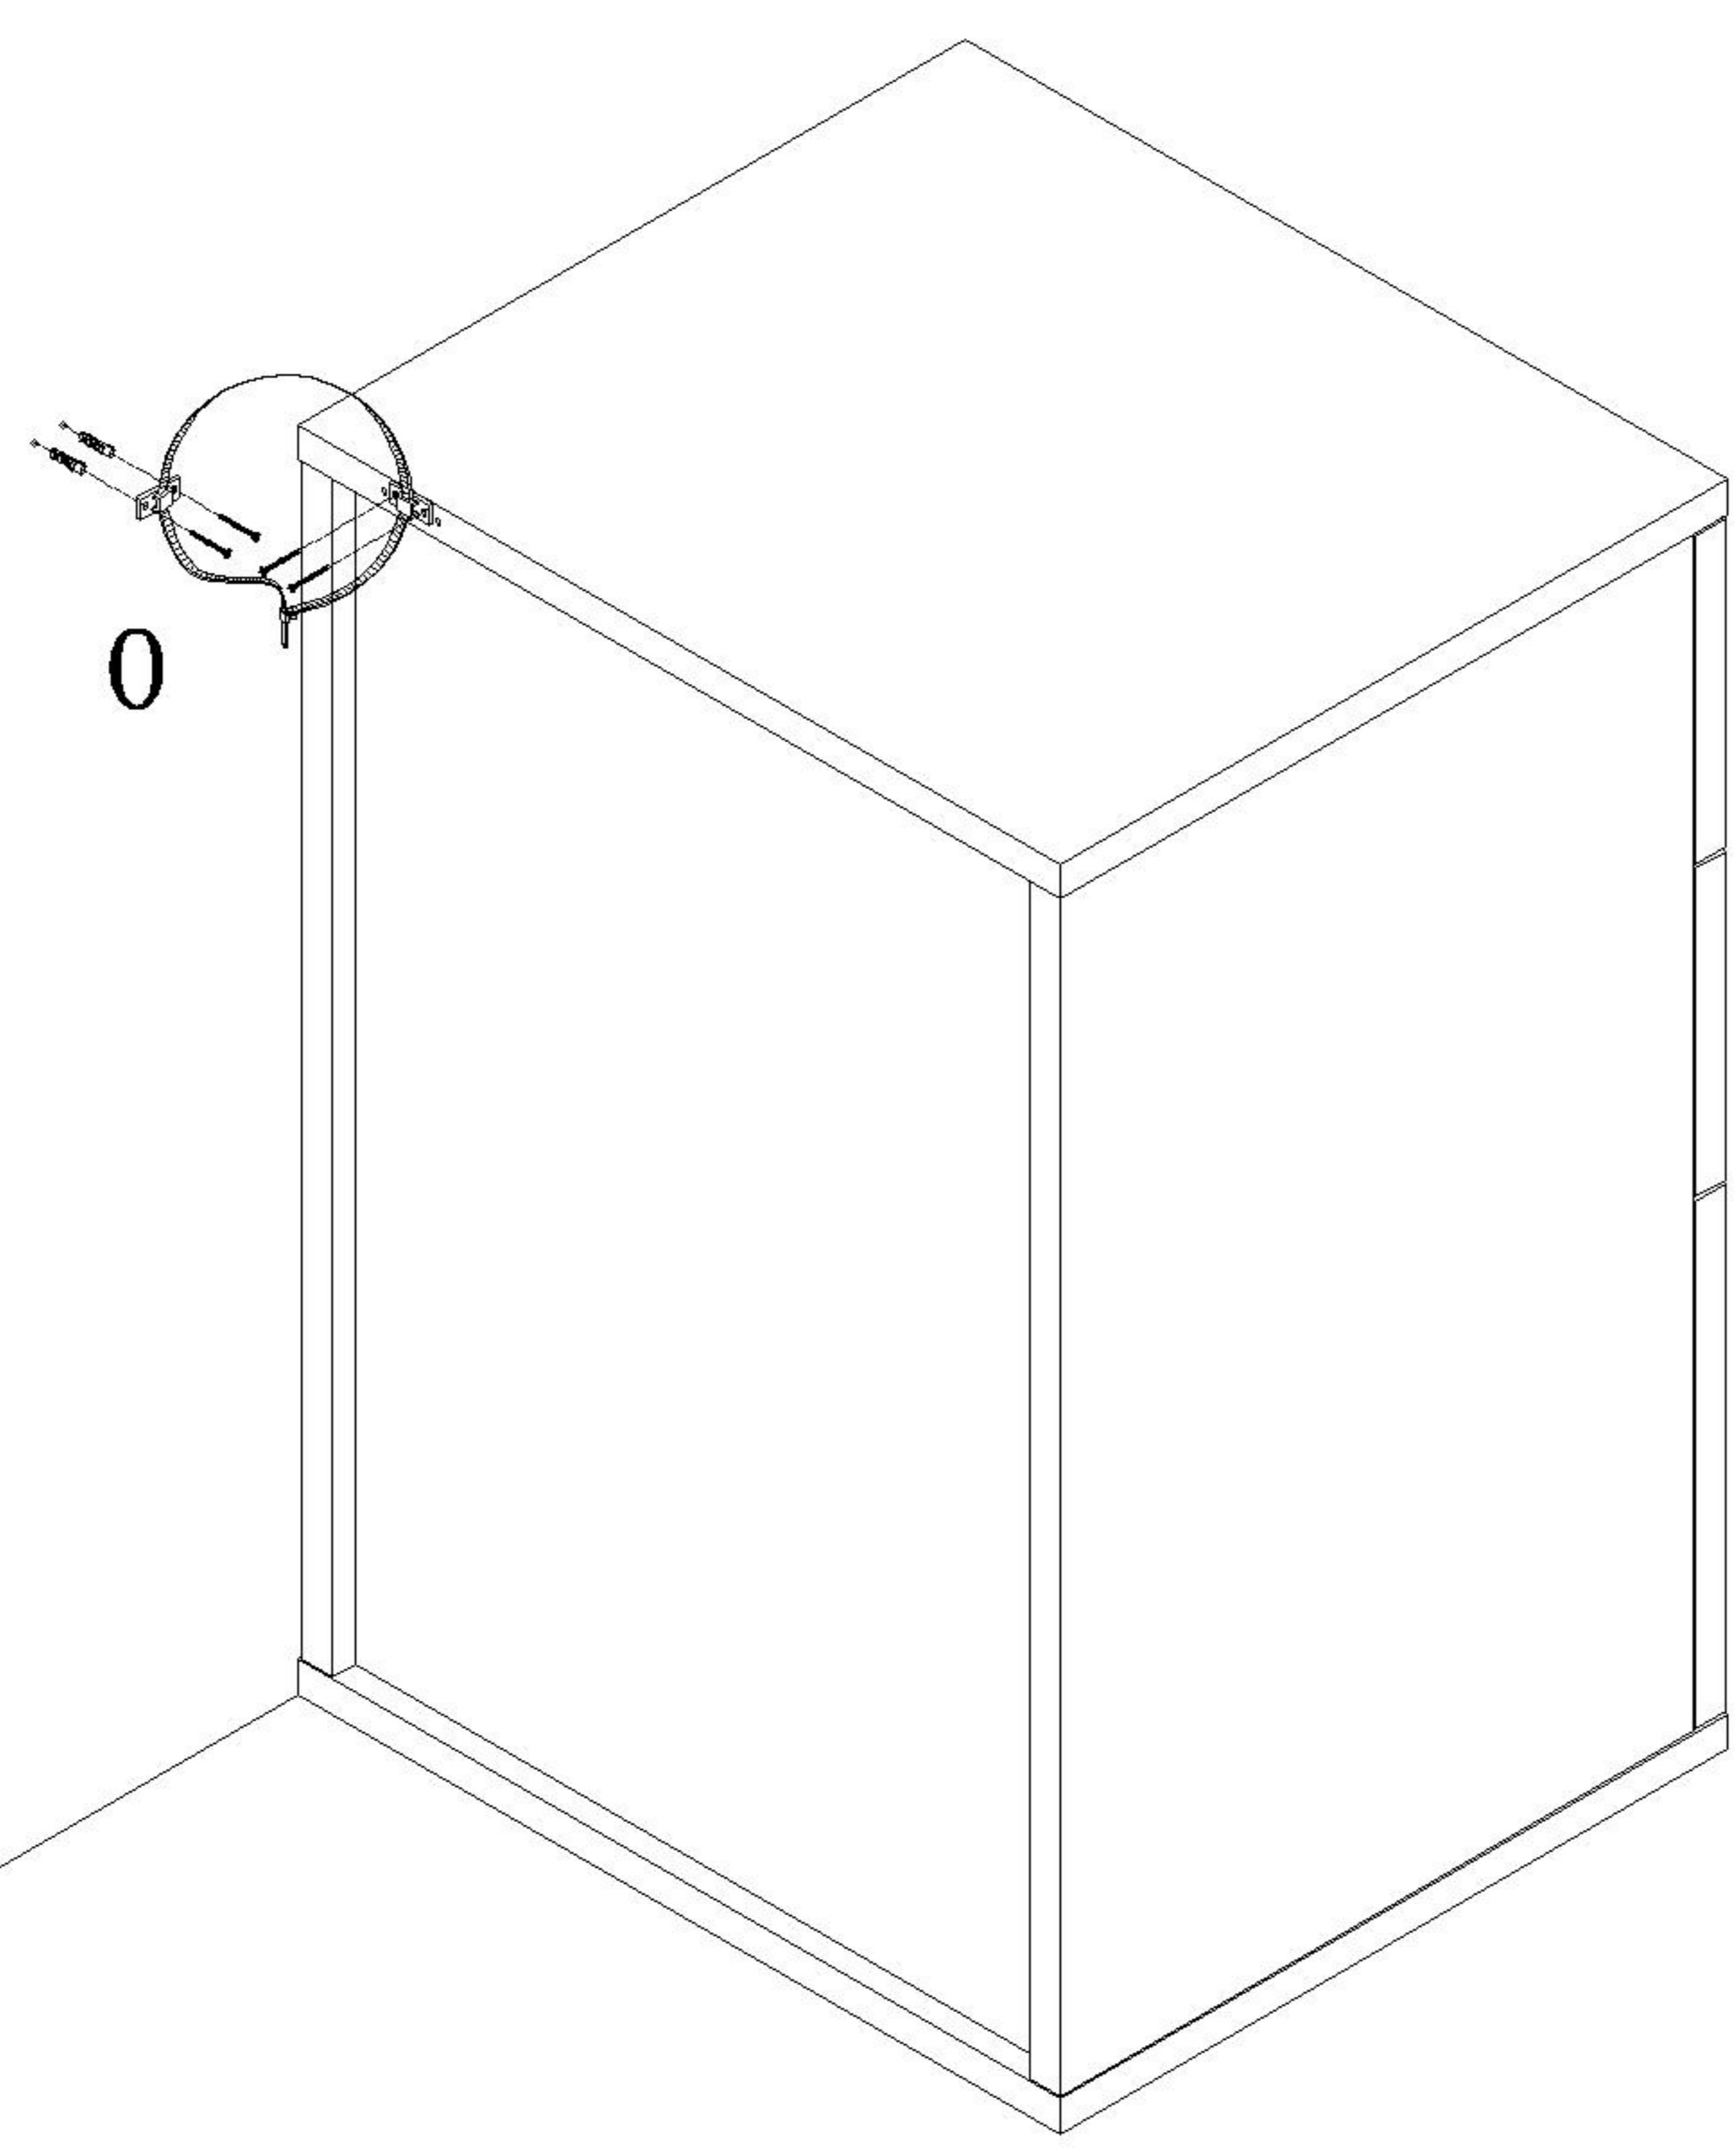
实体墙

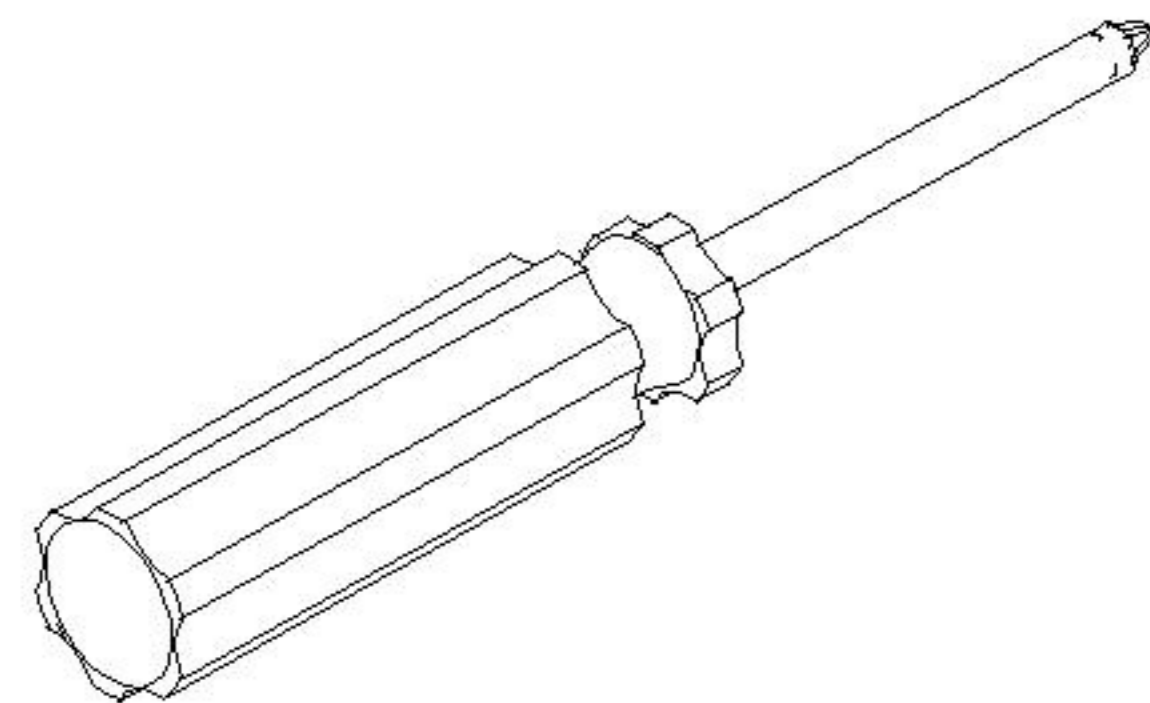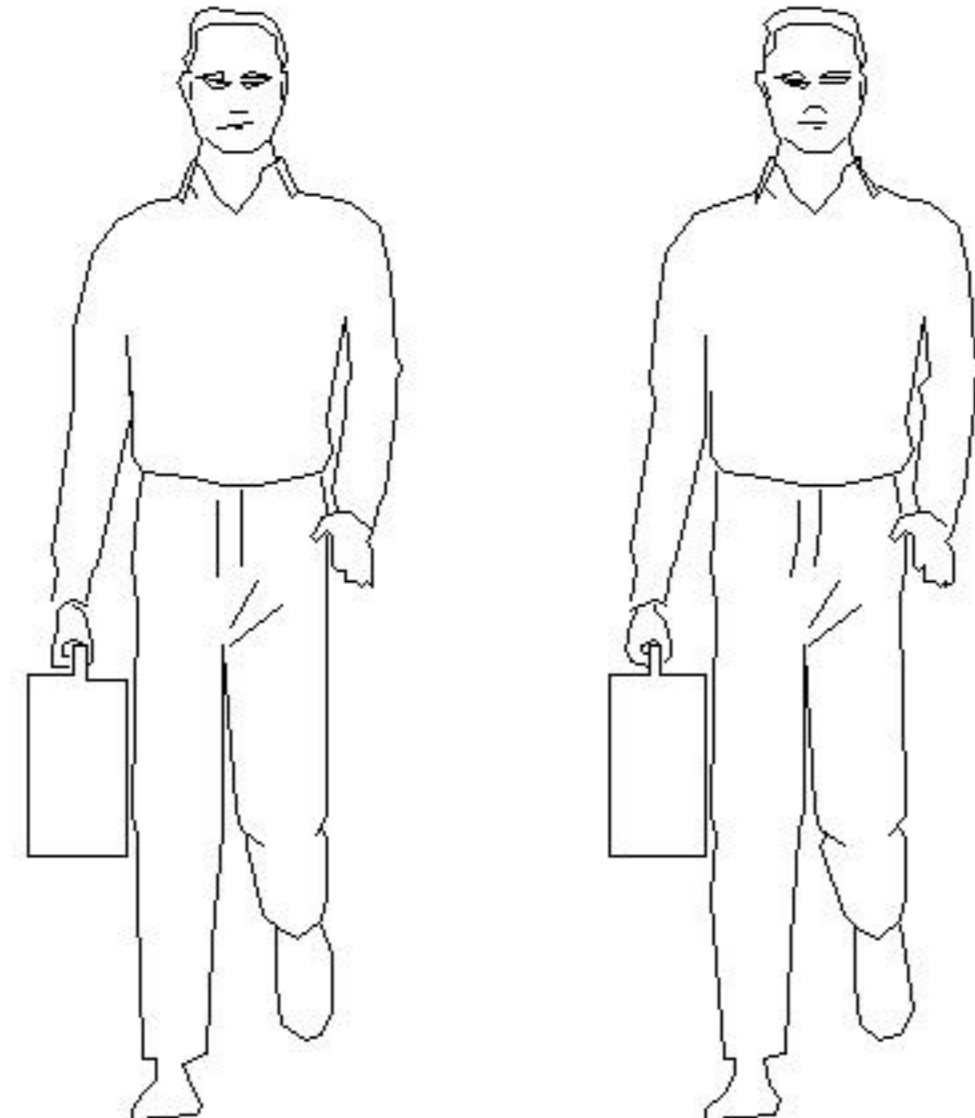

安装示意图/Assembly Instruction

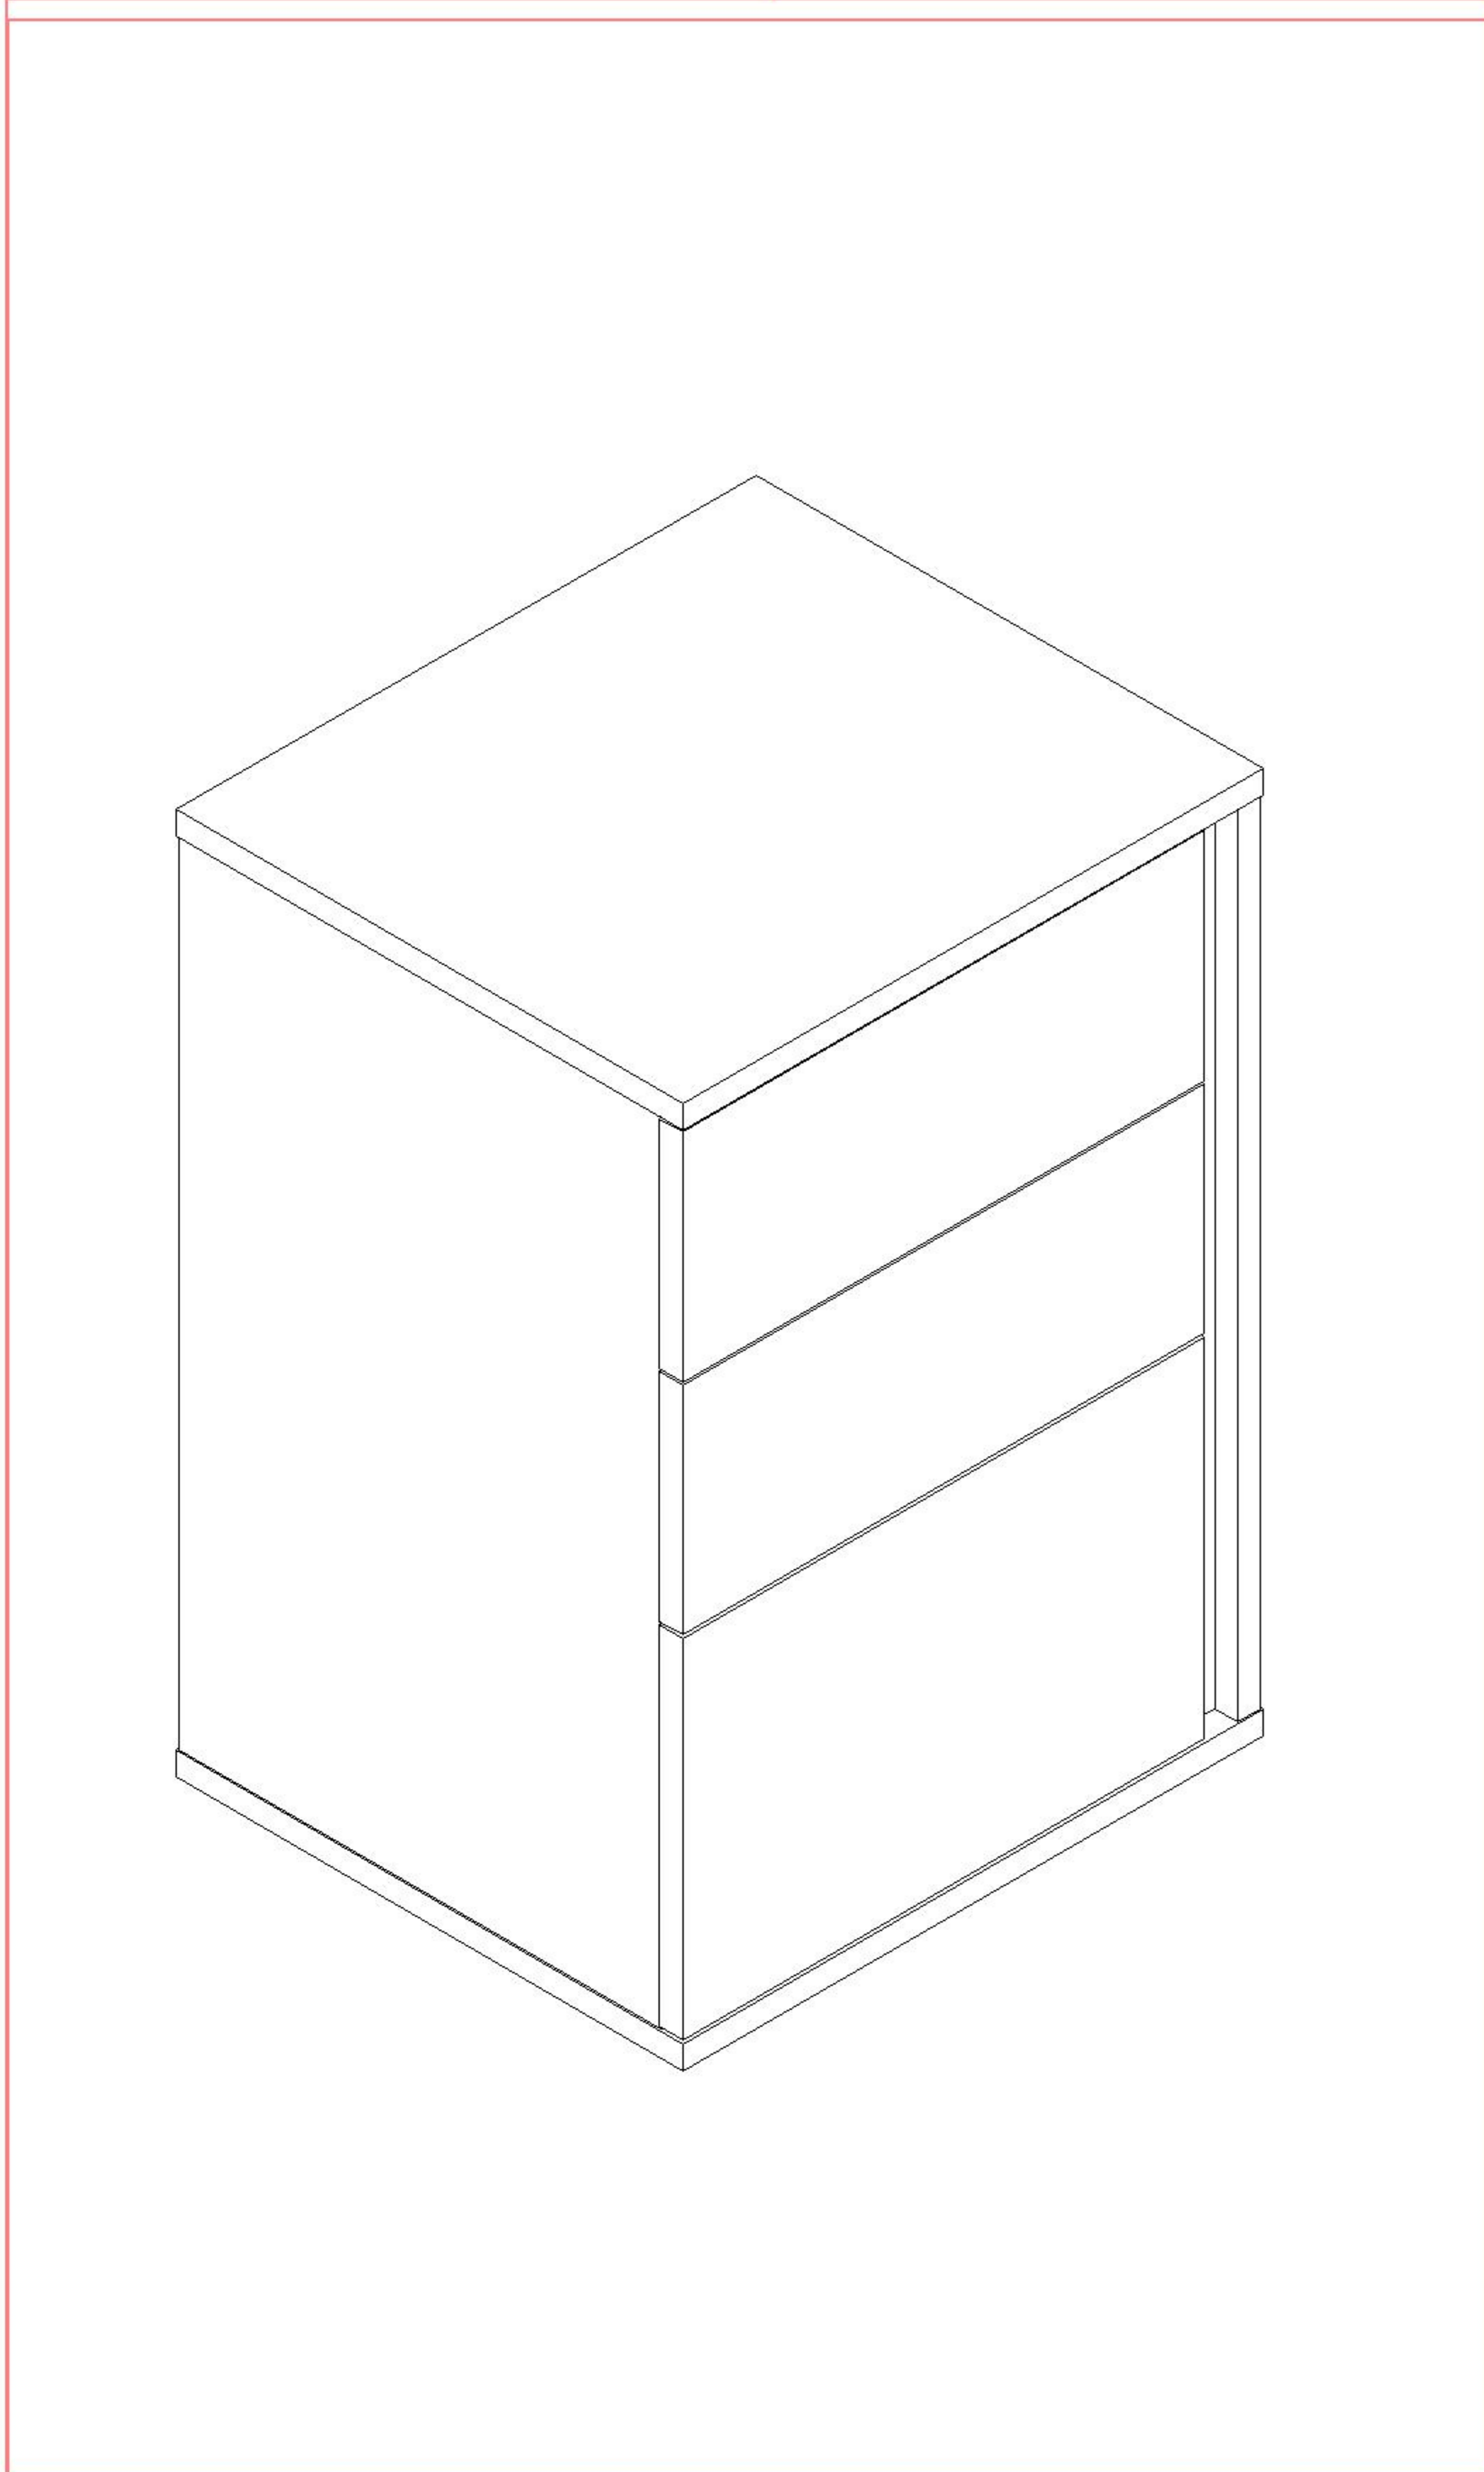产品名称 Model NO.	OI2E-A
产品规格 Specification	450*394*671mm
安装工具 Tool	安装人数 Installer
	

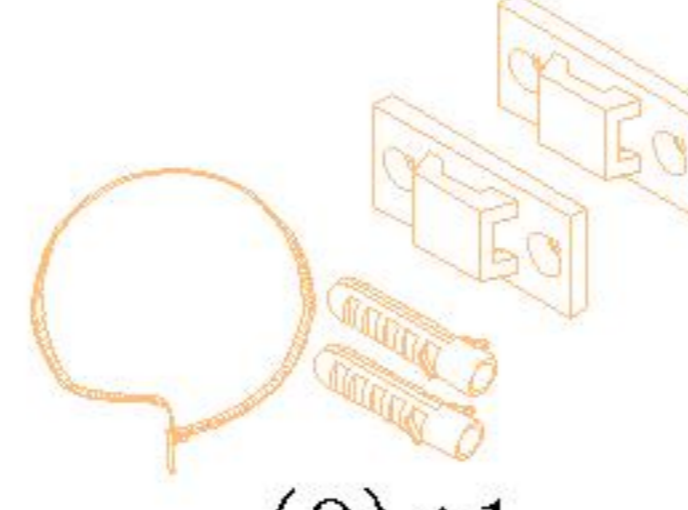


 (A)*13 小三合一-锁饼 3-in-1 small lock	 (B)*13 小二合一杆 2-in-1 small rod	 (C)*8 二合一螺杆 2-in-1-screw	 (D)*8 大三合一锁饼 3-in-1 large lock
 (E)*13 木榫-(Ø8*30mm) Wood tenon	 (F)*38 自攻螺丝M3.5*12 Tapping screw	 (G)*4 自攻螺丝M3.5*16 Tapping screw	 (H)*13 自攻螺丝-(M4*40mm) Tapping screw
 (I)*13 塑料螺母 Plastic Nut	 (J)*6 过山丝 Confirmat screw	 (K)*4 背板扣 White buckle	 (L)*6 自攻螺丝M4*30 Tapping screw
 (M)*4 脚垫-灰色毛毡 Foot pad	 (N)*3 导轨12寸 Three-section rail	 (O)*1 家具防倒器白色 Anti-fall device	

编号NO.	名称Name	规格 (MM) Specification	数量QTY	材质Material
1	面板Top panel	450*394*18	1	三胺板 Melamine
2	底板Bottom board	450*394*18	1	三胺板 Melamine
3	右侧板Side board(R)	614*392*18	1	三胺板 Melamine
4	左侧板Side board(L)	614*374*18	1	三胺板 Melamine
5	右中侧板Middle side board(R)	614*336*18	1	三胺板 Melamine
6	竖条Vertical bar	614*58*18	1	三胺板 Melamine
7	长垫条Long strap	398*58*18	1	三胺板 Melamine
8	短垫条Short strap	286*58*18	2	三胺板 Melamine
9	背板Back board	624*422*5	1	三胺板 Melamine
10	上抽屉面板 Upper drawer's panel	405*168*18	2	三胺板 Melamine
11	上抽屉后板 Upper drawer's back board	304*142*12	2	三胺板 Melamine
12	上抽屉右侧板 Upper drawer right panel	340*142*12	2	三胺板 Melamine
13	上抽屉左侧板 Upper drawer left panel	340*142*12	2	三胺板 Melamine
14	抽屉底板 Drawer's Bottom board	314*336*5	3	三胺板 Melamine
15	下抽屉面板 Bottom drawer's panel	405*270*18	1	三胺板 Melamine
16	下抽屉后板 Down drawer's back board	304*174*12	1	三胺板 Melamine
17	下抽屉右侧板 Lower drawer right panel	340*174*12	1	三胺板 Melamine
18	下抽屉左侧板 Lower drawer left panel	340*174*12	1	三胺板 Melamine

O12E-A


安装方法/ Installation method

1
阀门开关(下压为开)
Valve switch
(press down to open)


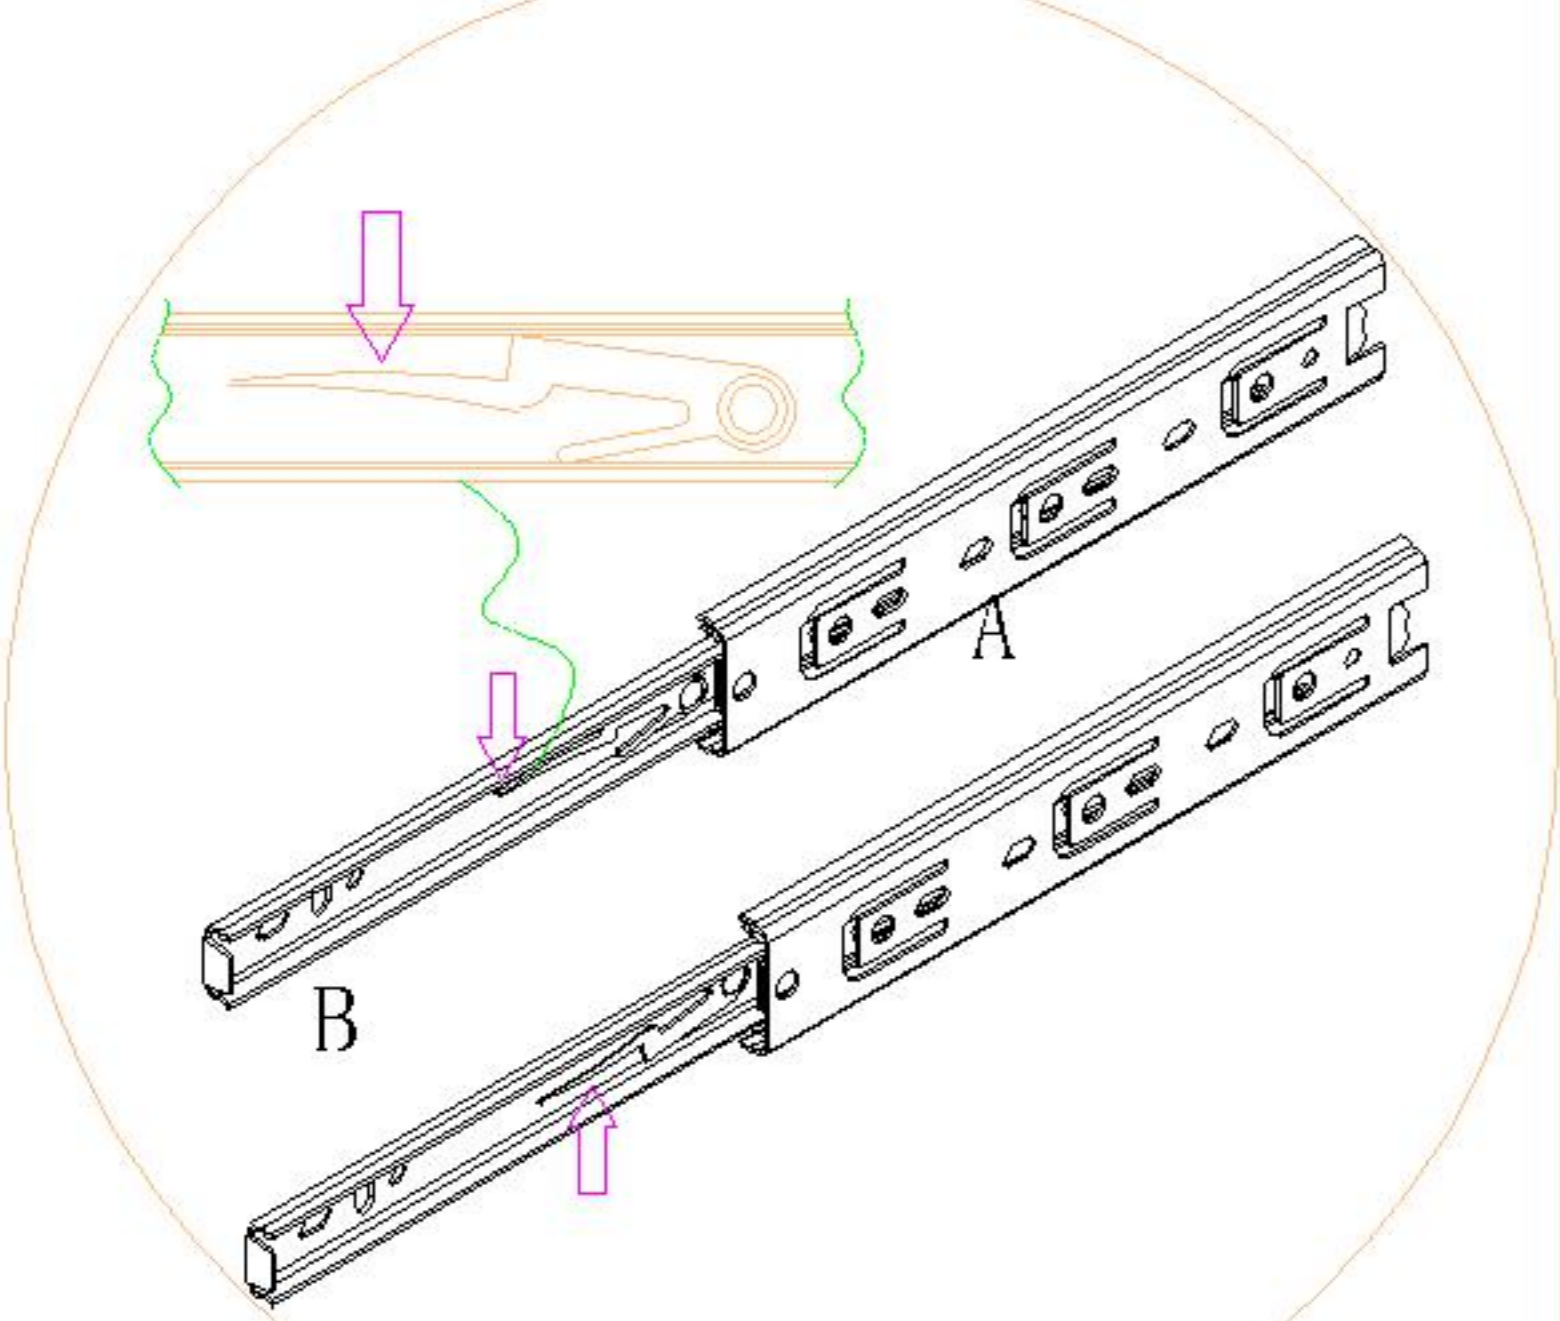


注: 先将A与B拆下来
Note: remove a and B first

2
侧板
side board
后after








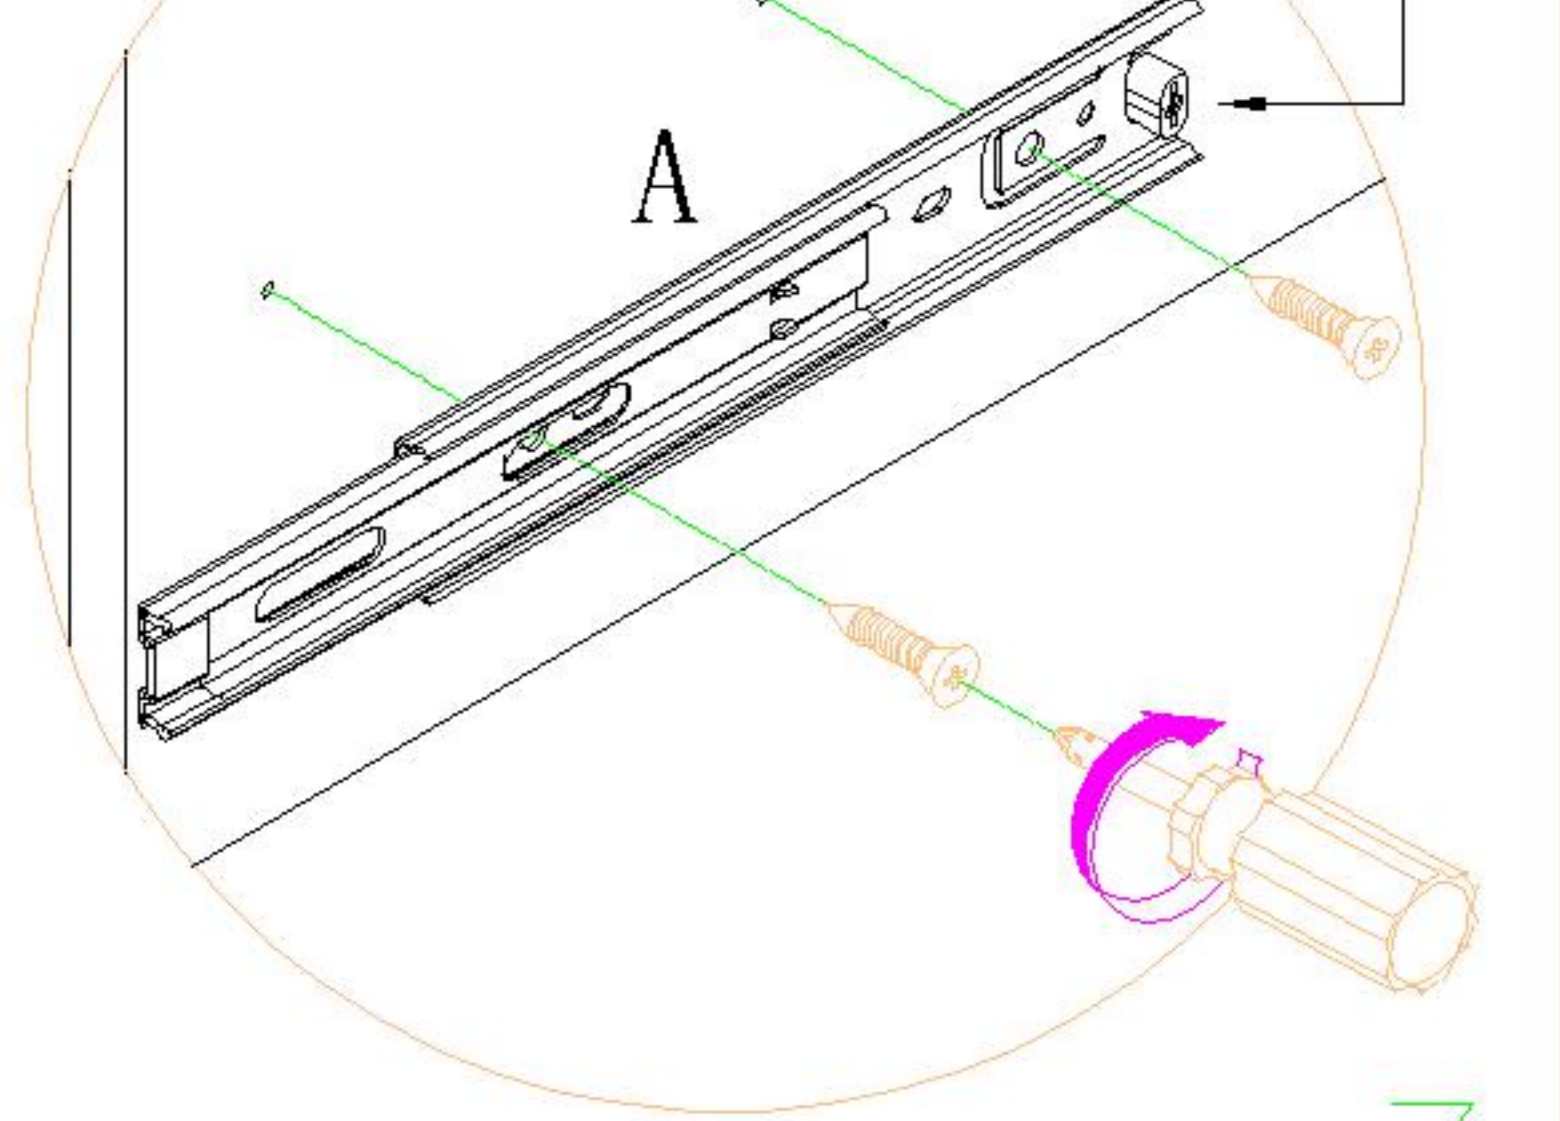


3
抽屉侧板
sideboard
of the drawer
后after

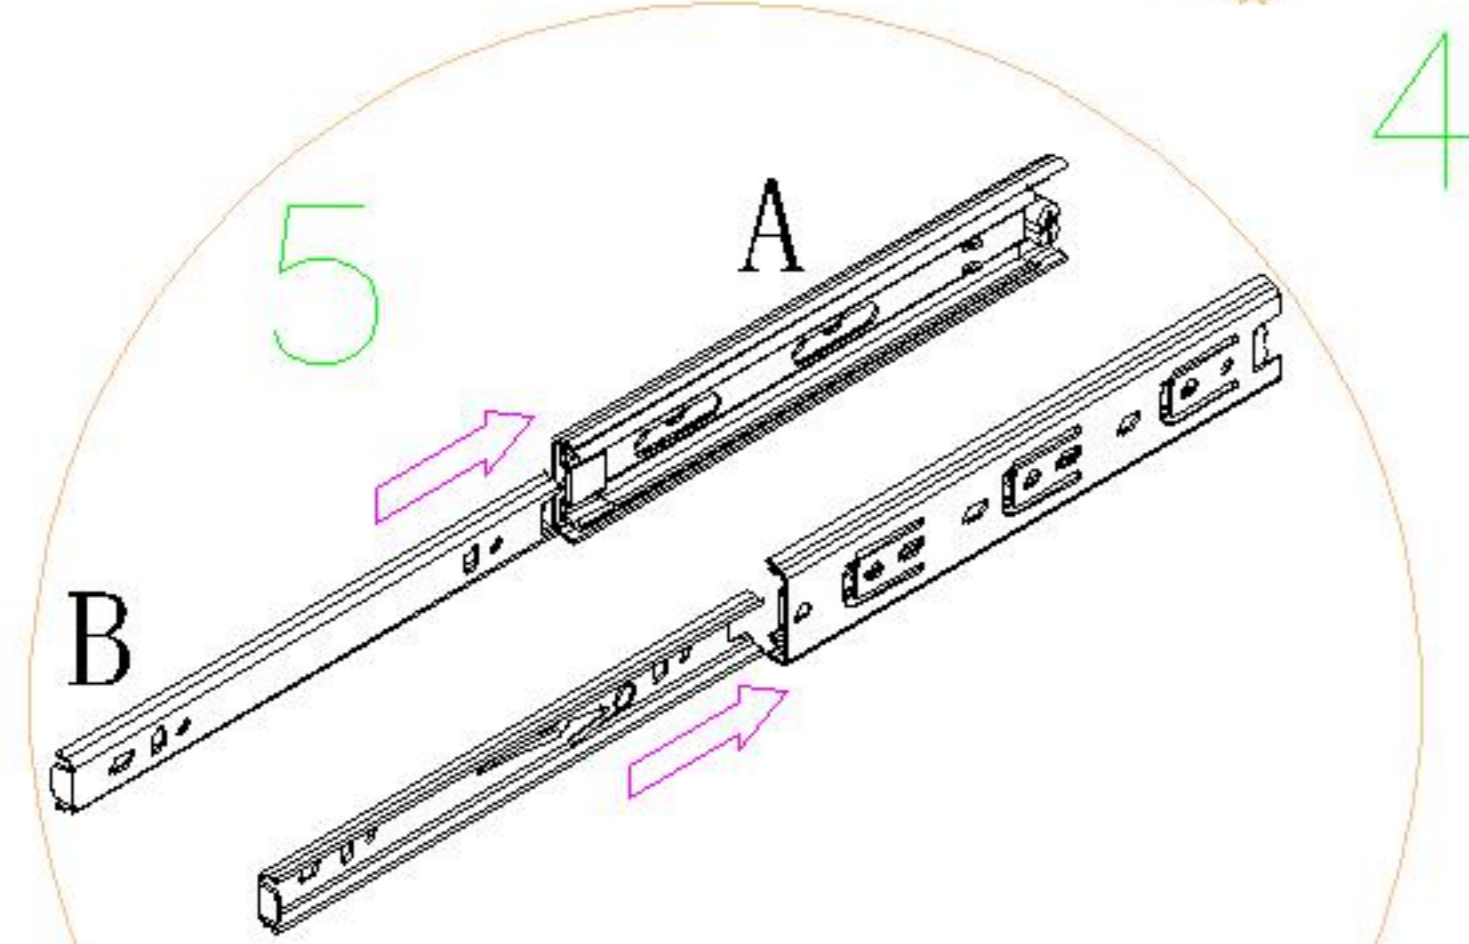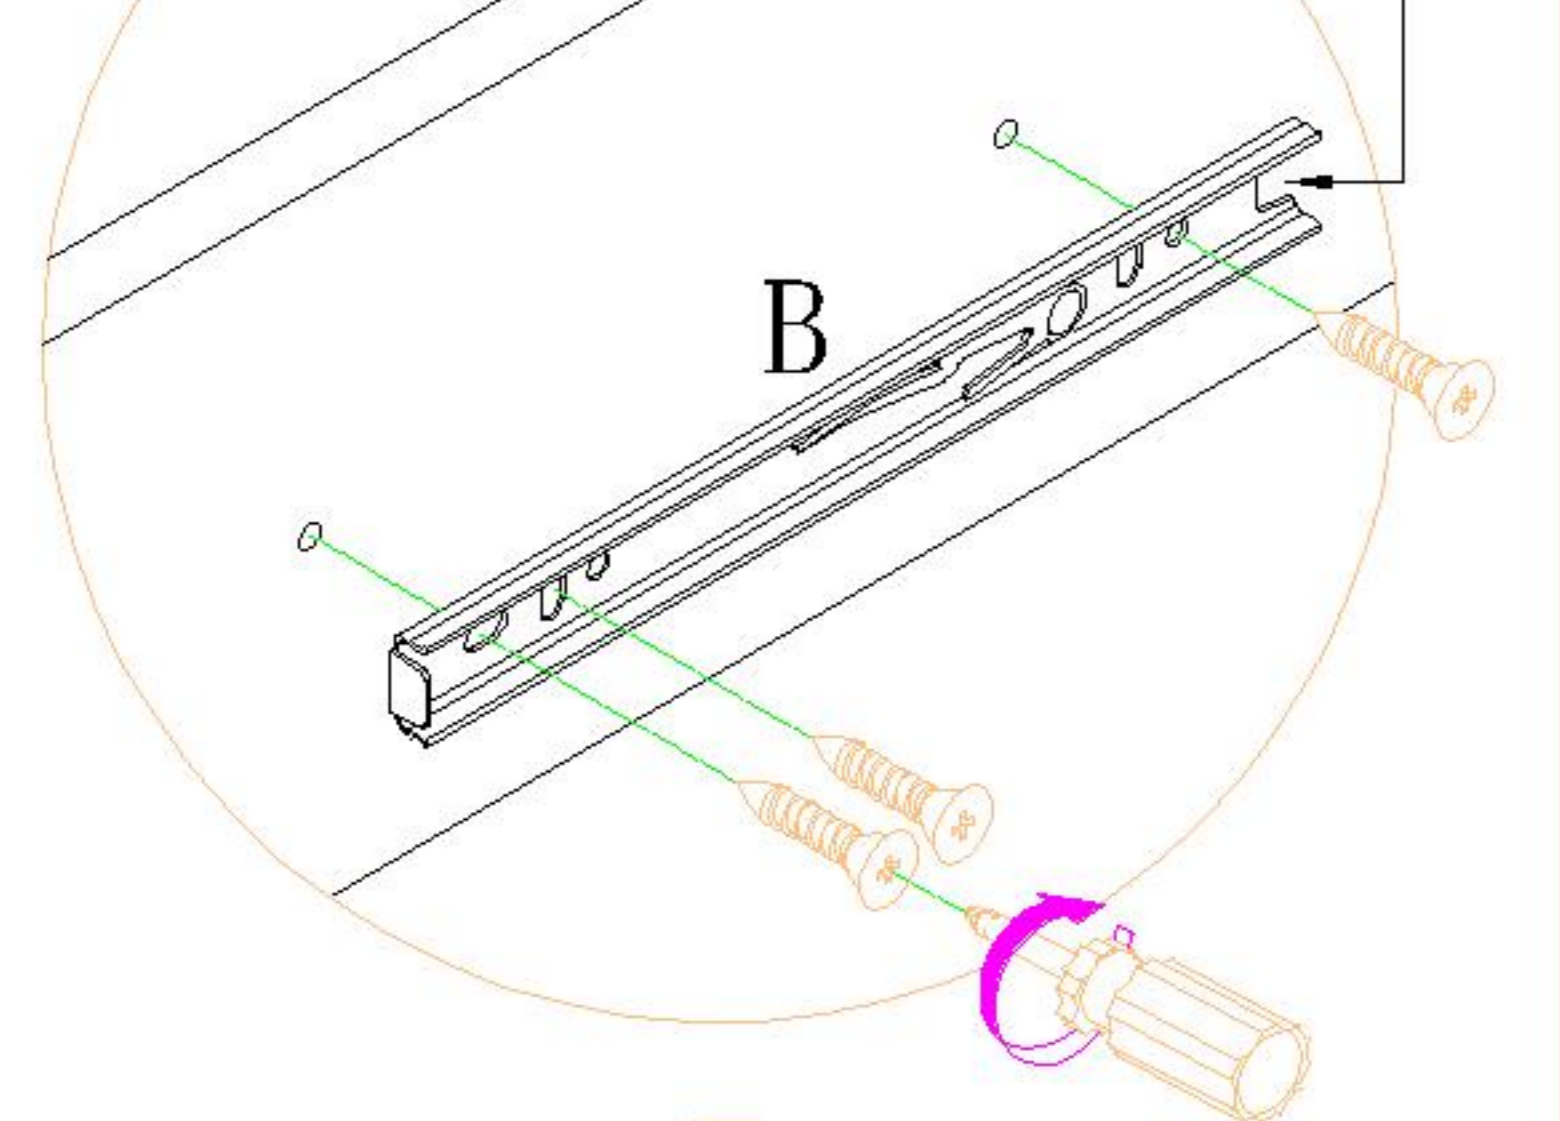

注: 将B对准A后推进去
Note: align B with a
and push it in

三节滚珠导轨
three-section ball rail

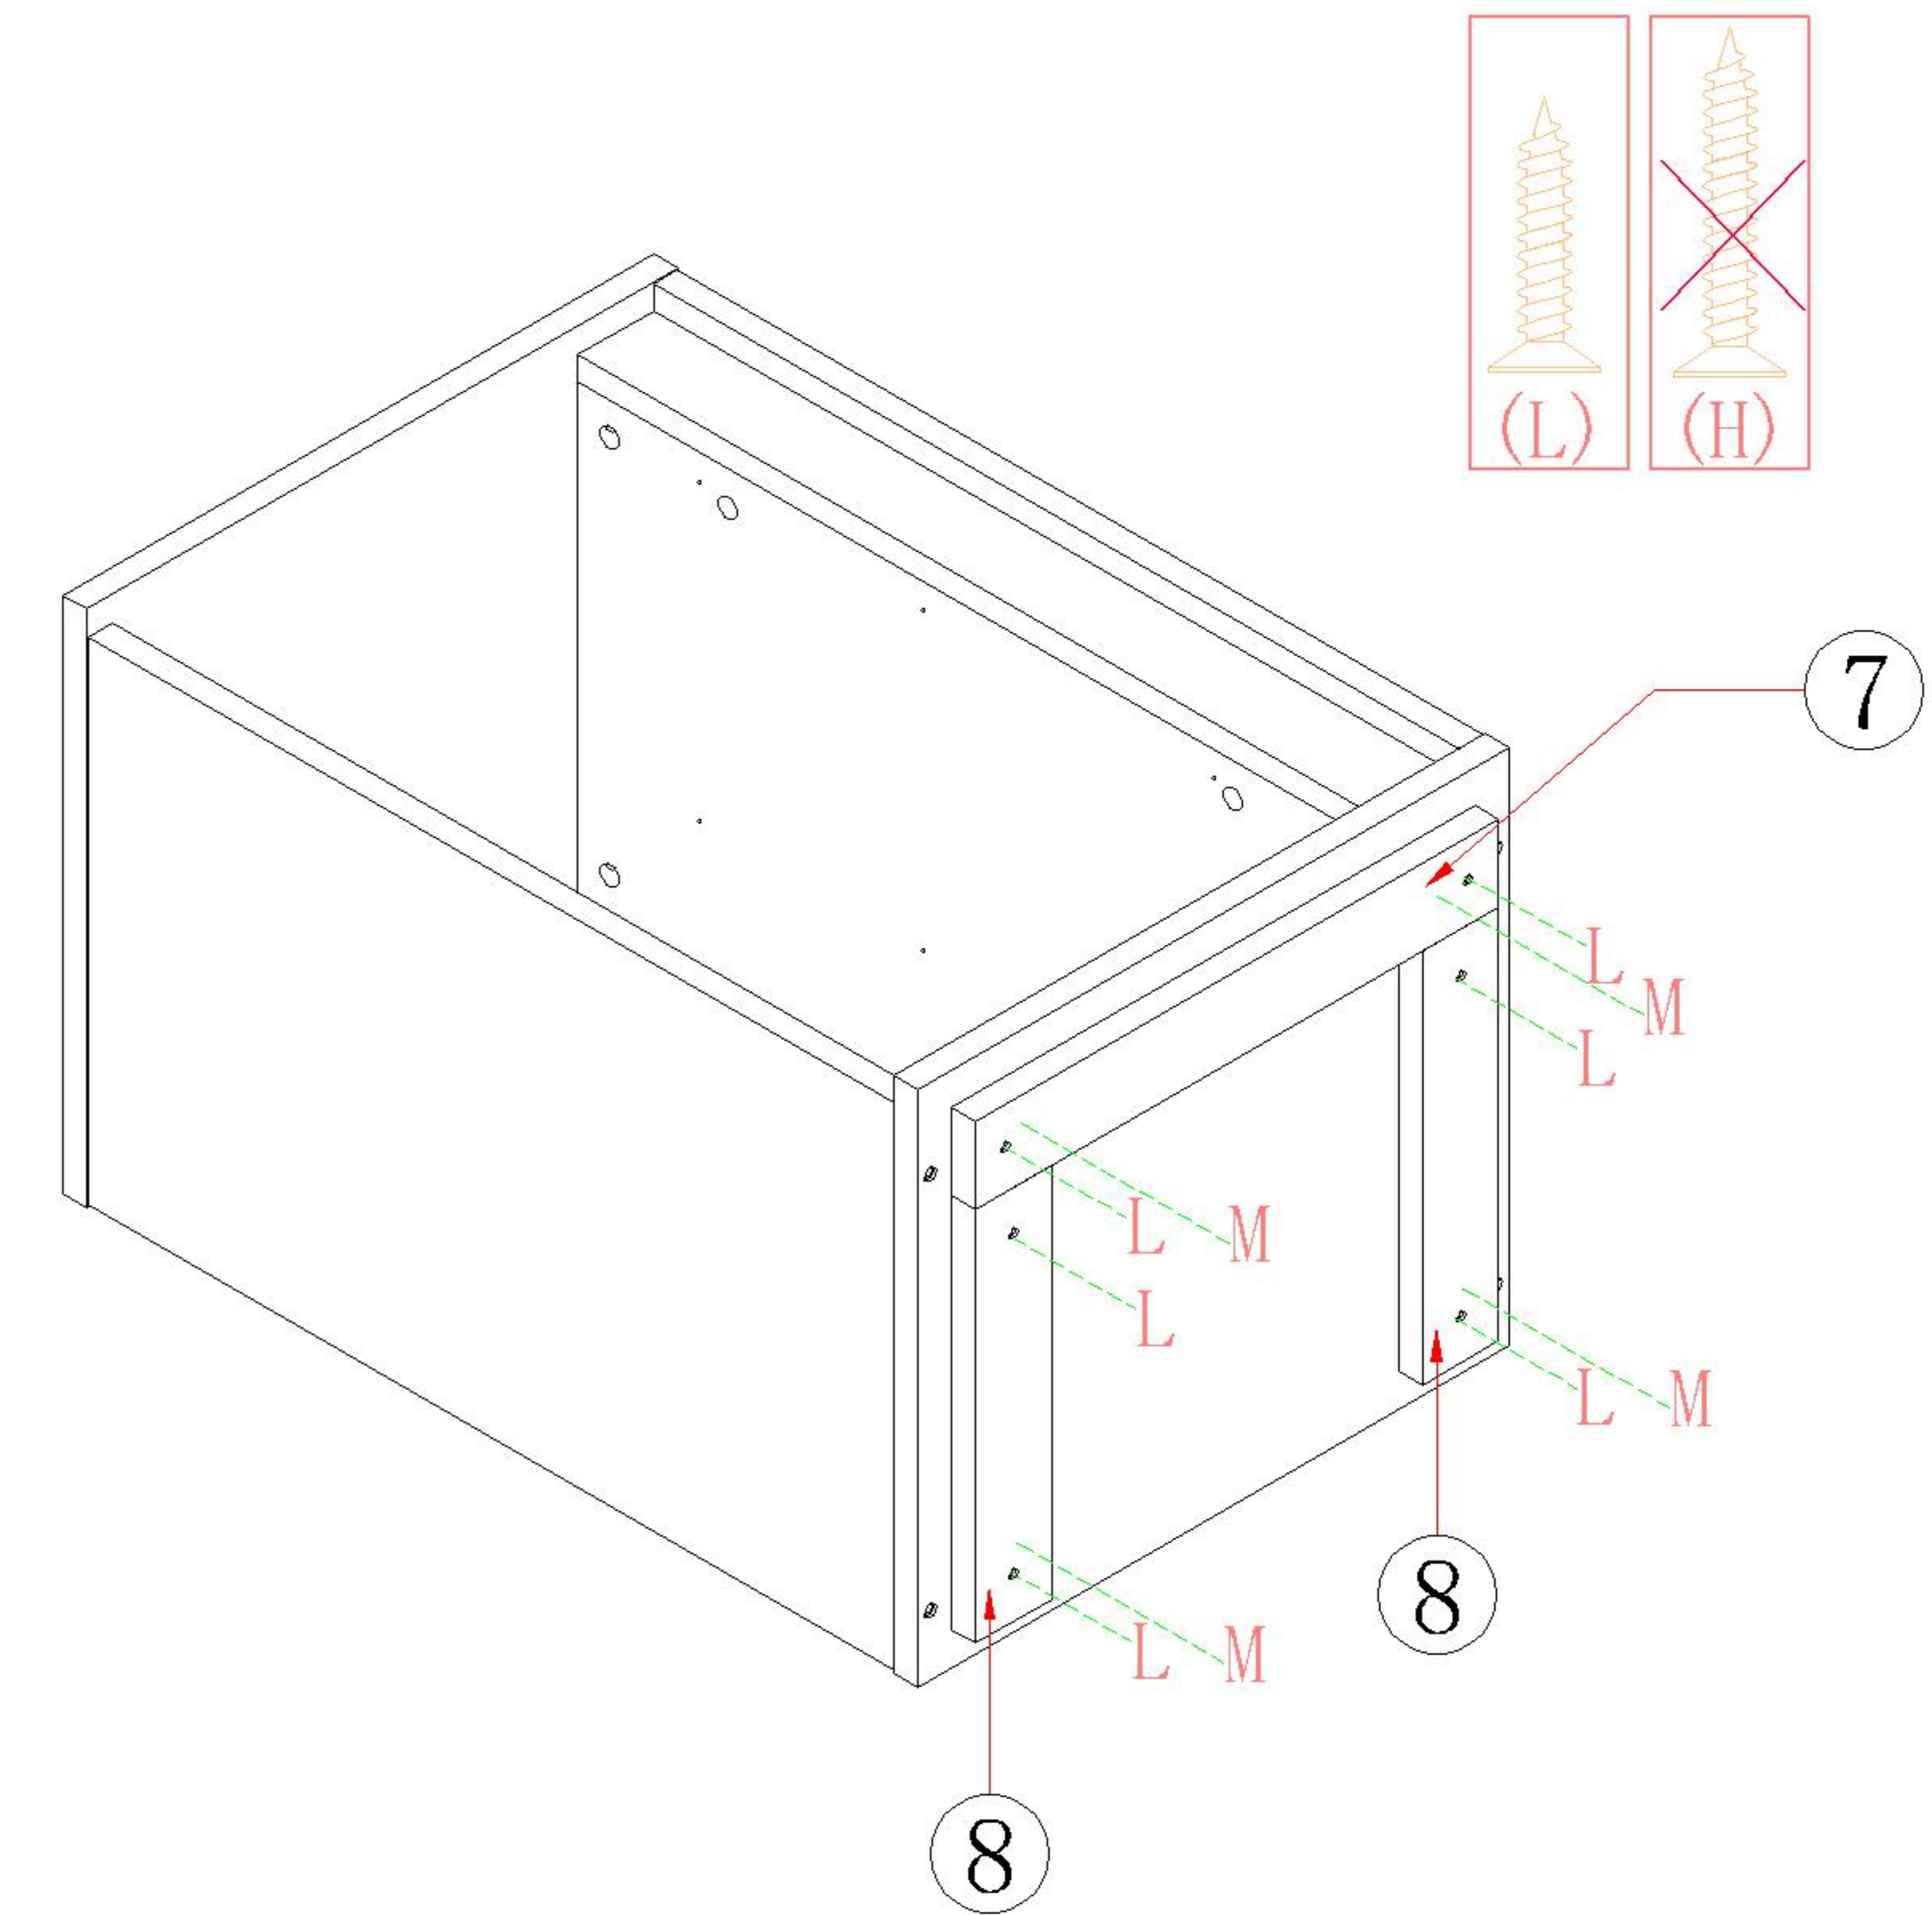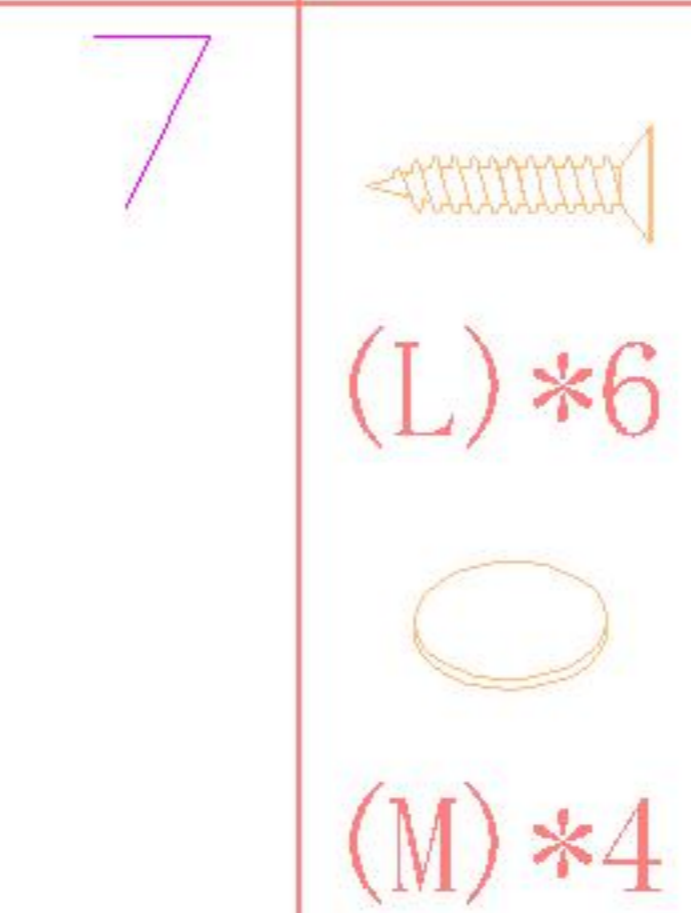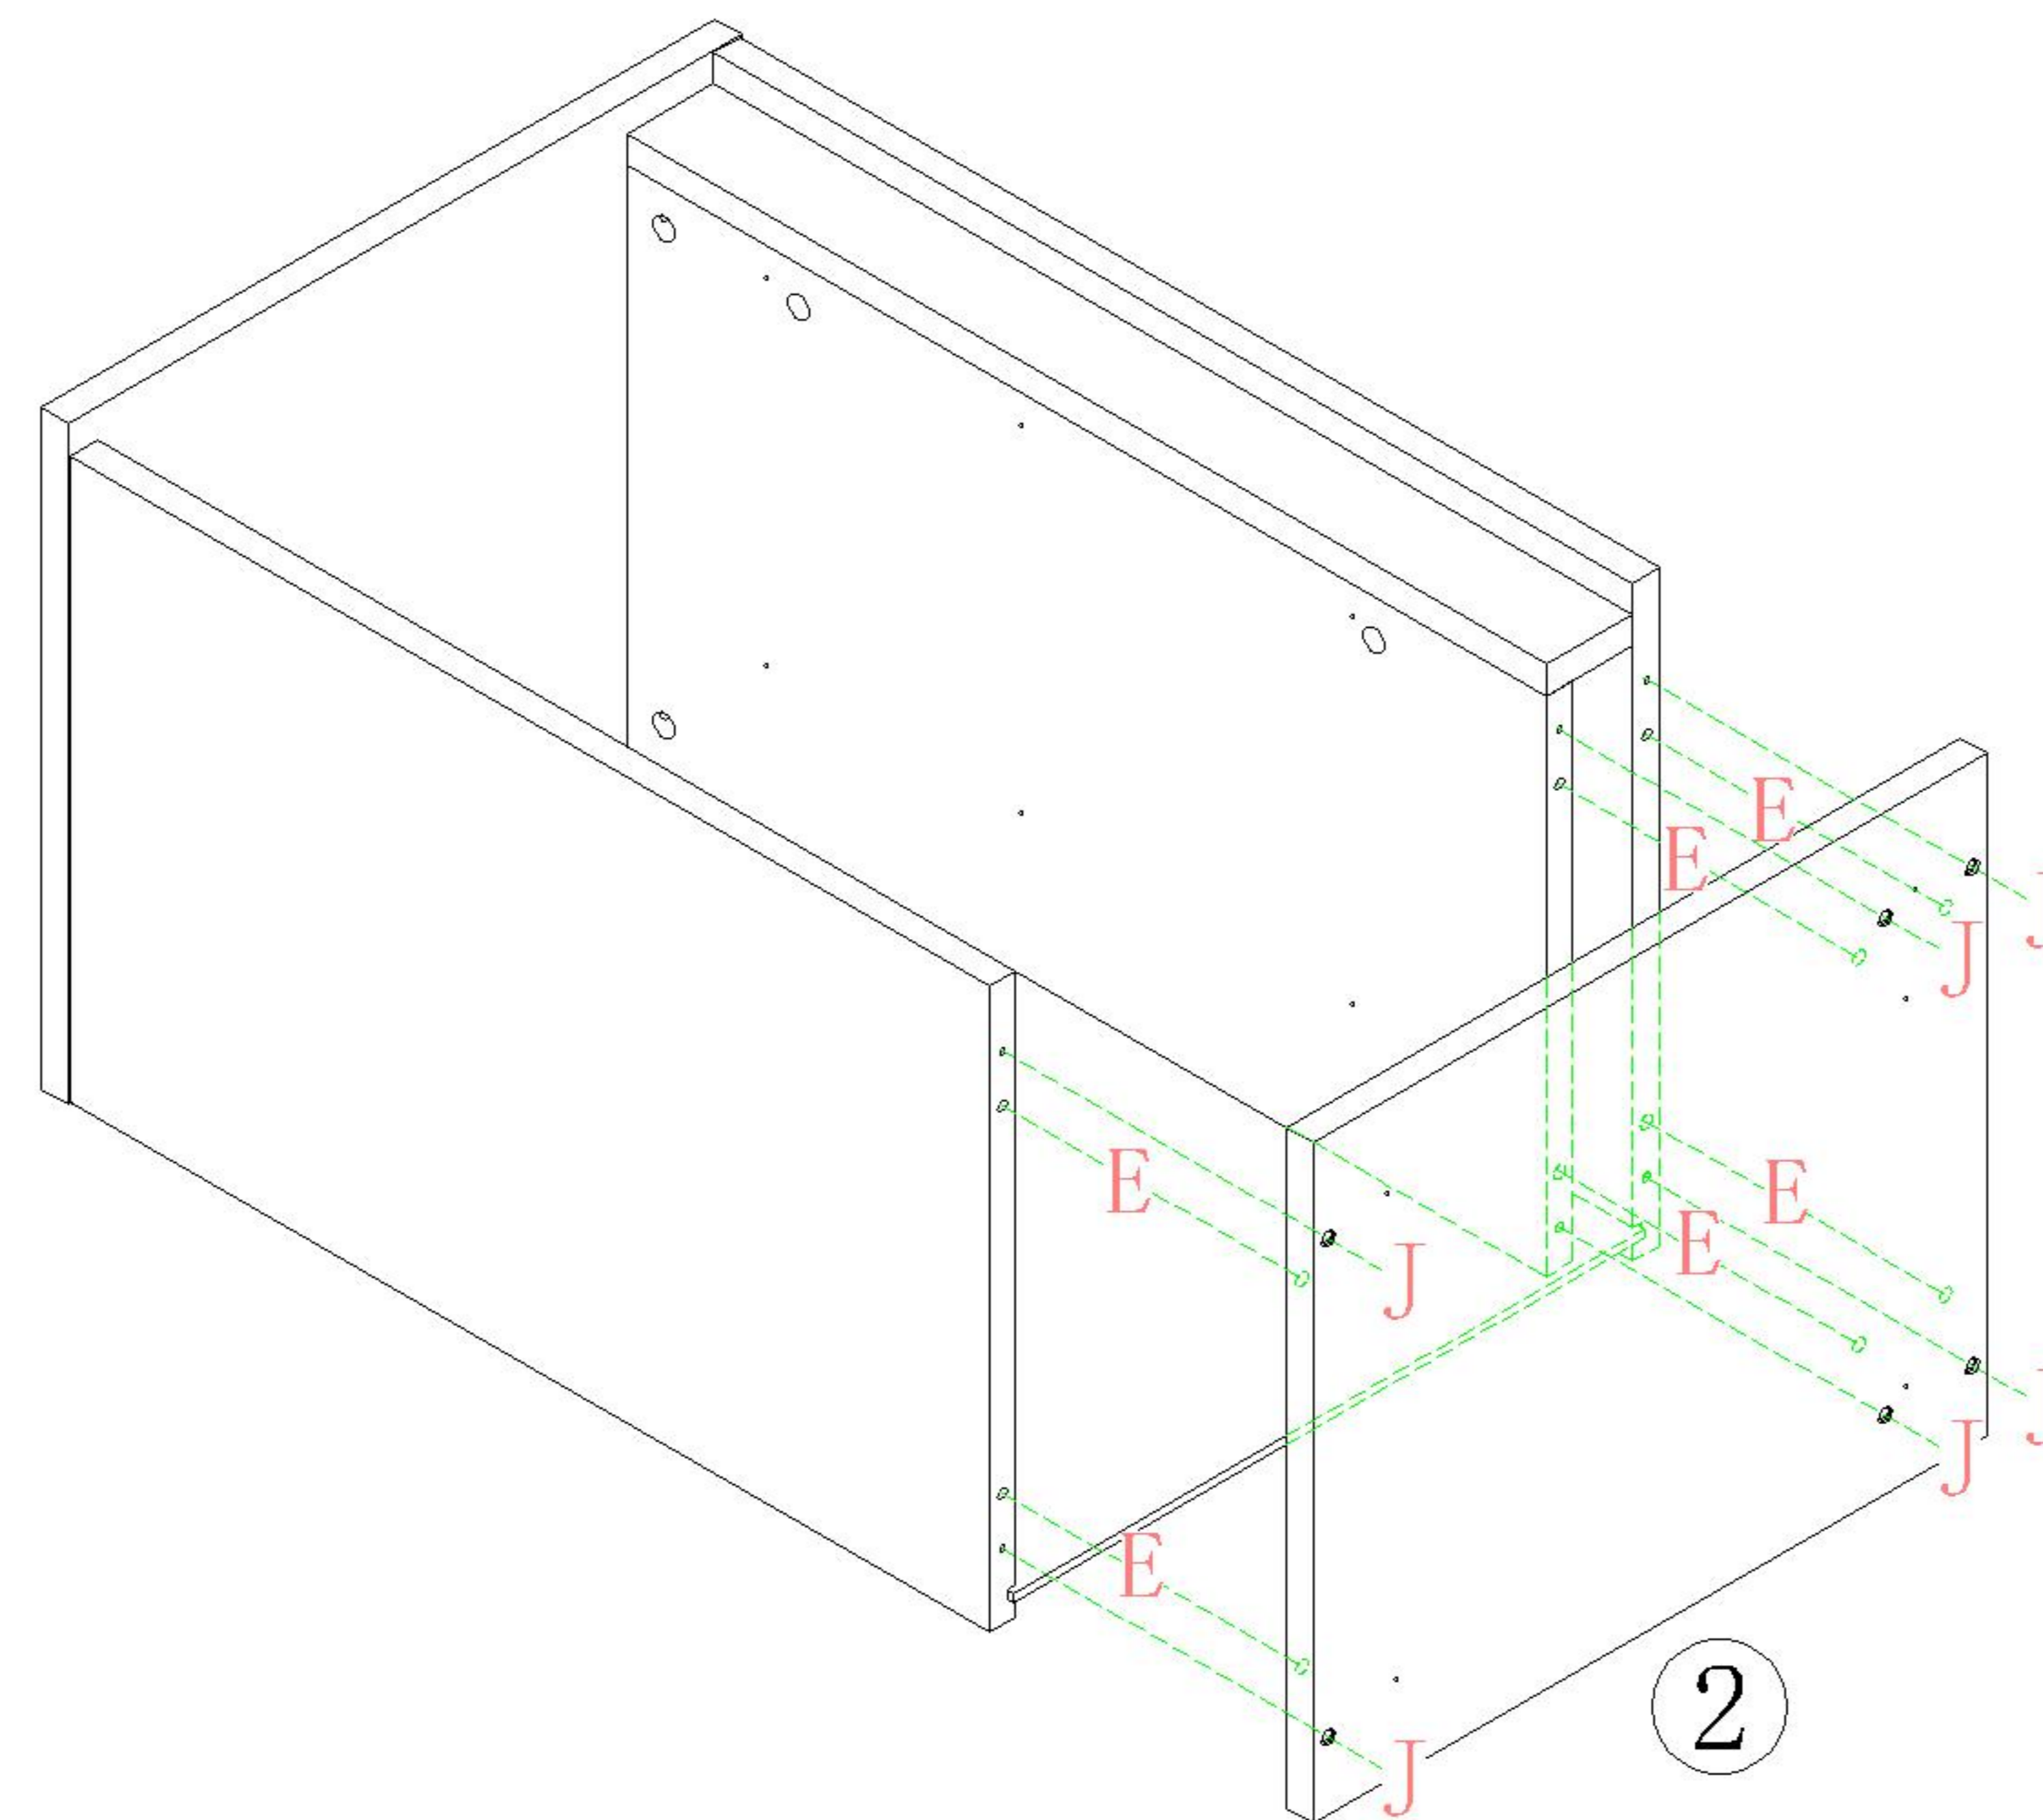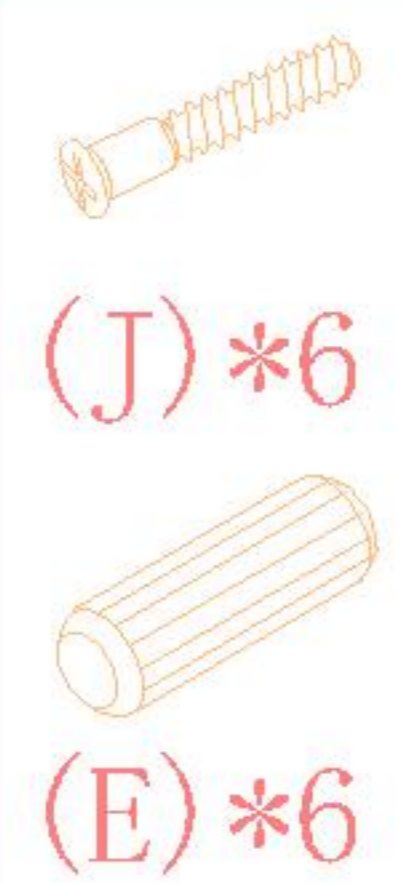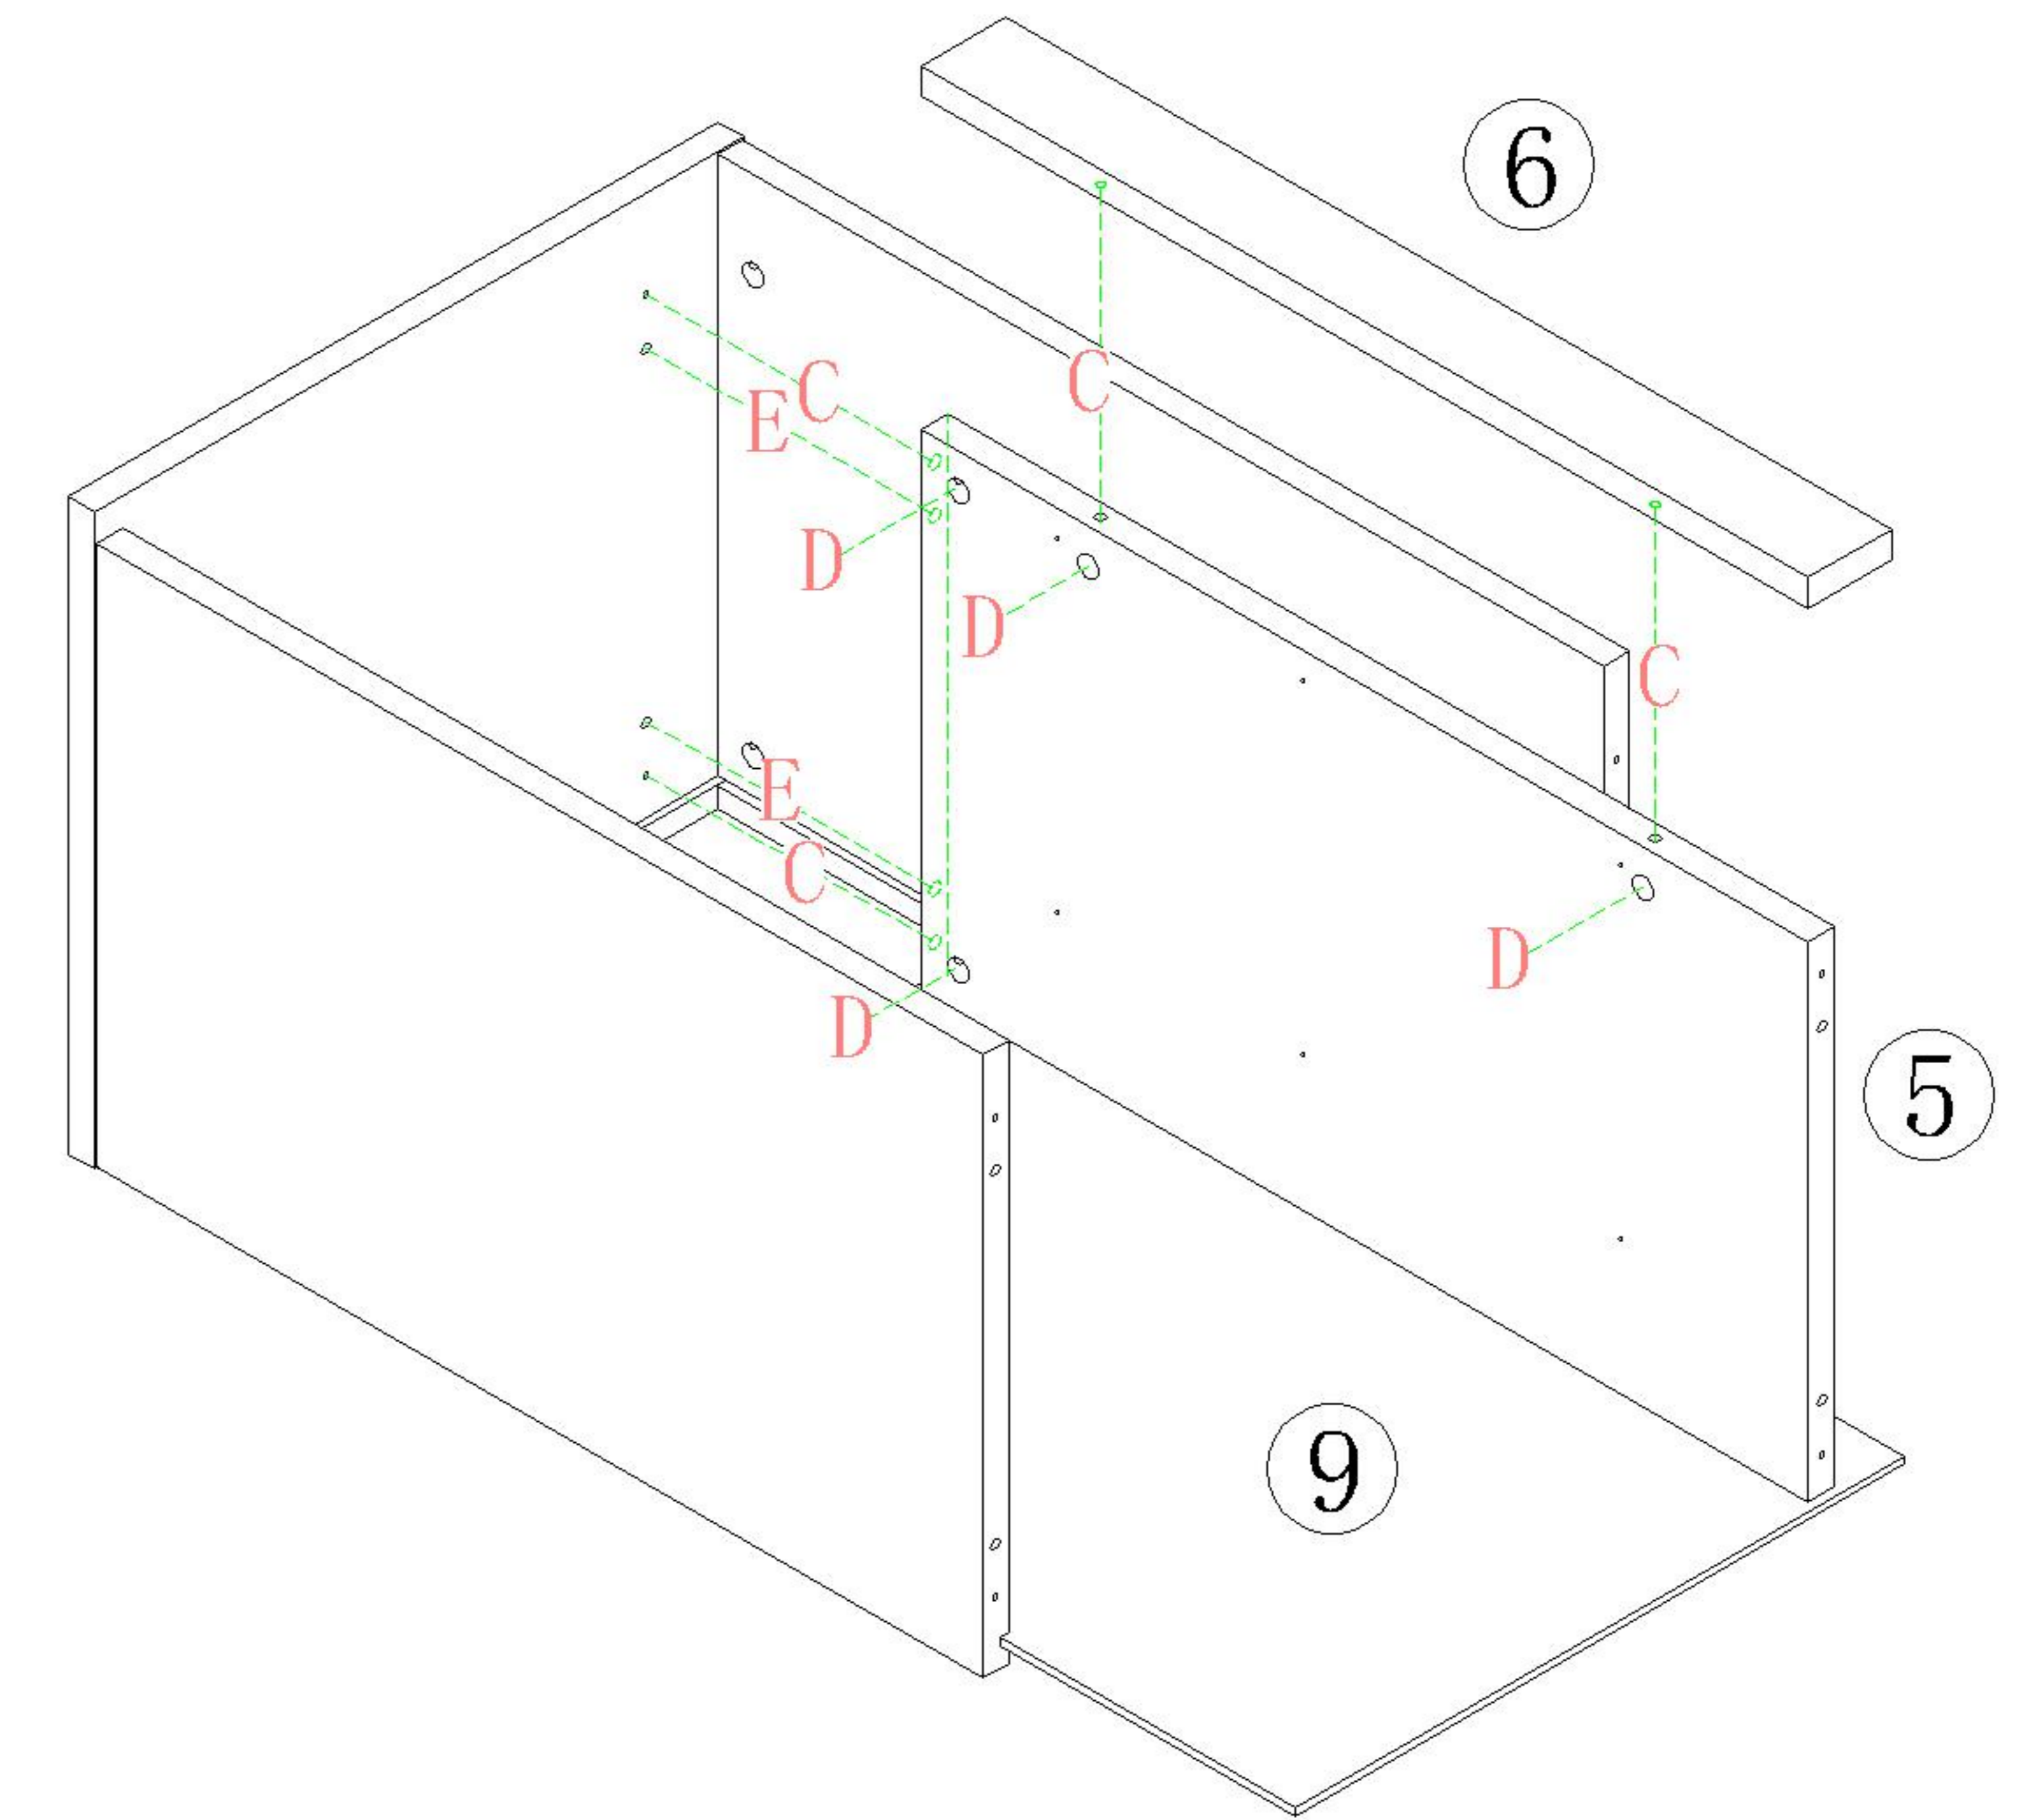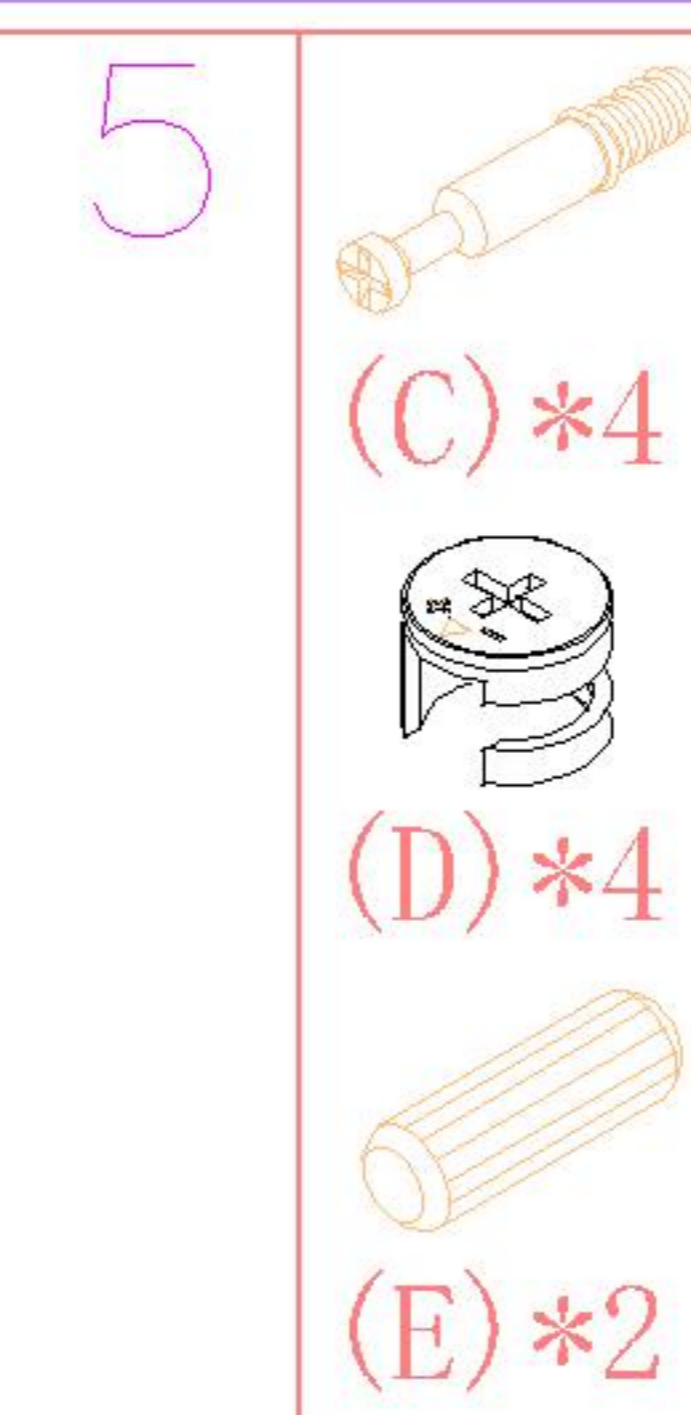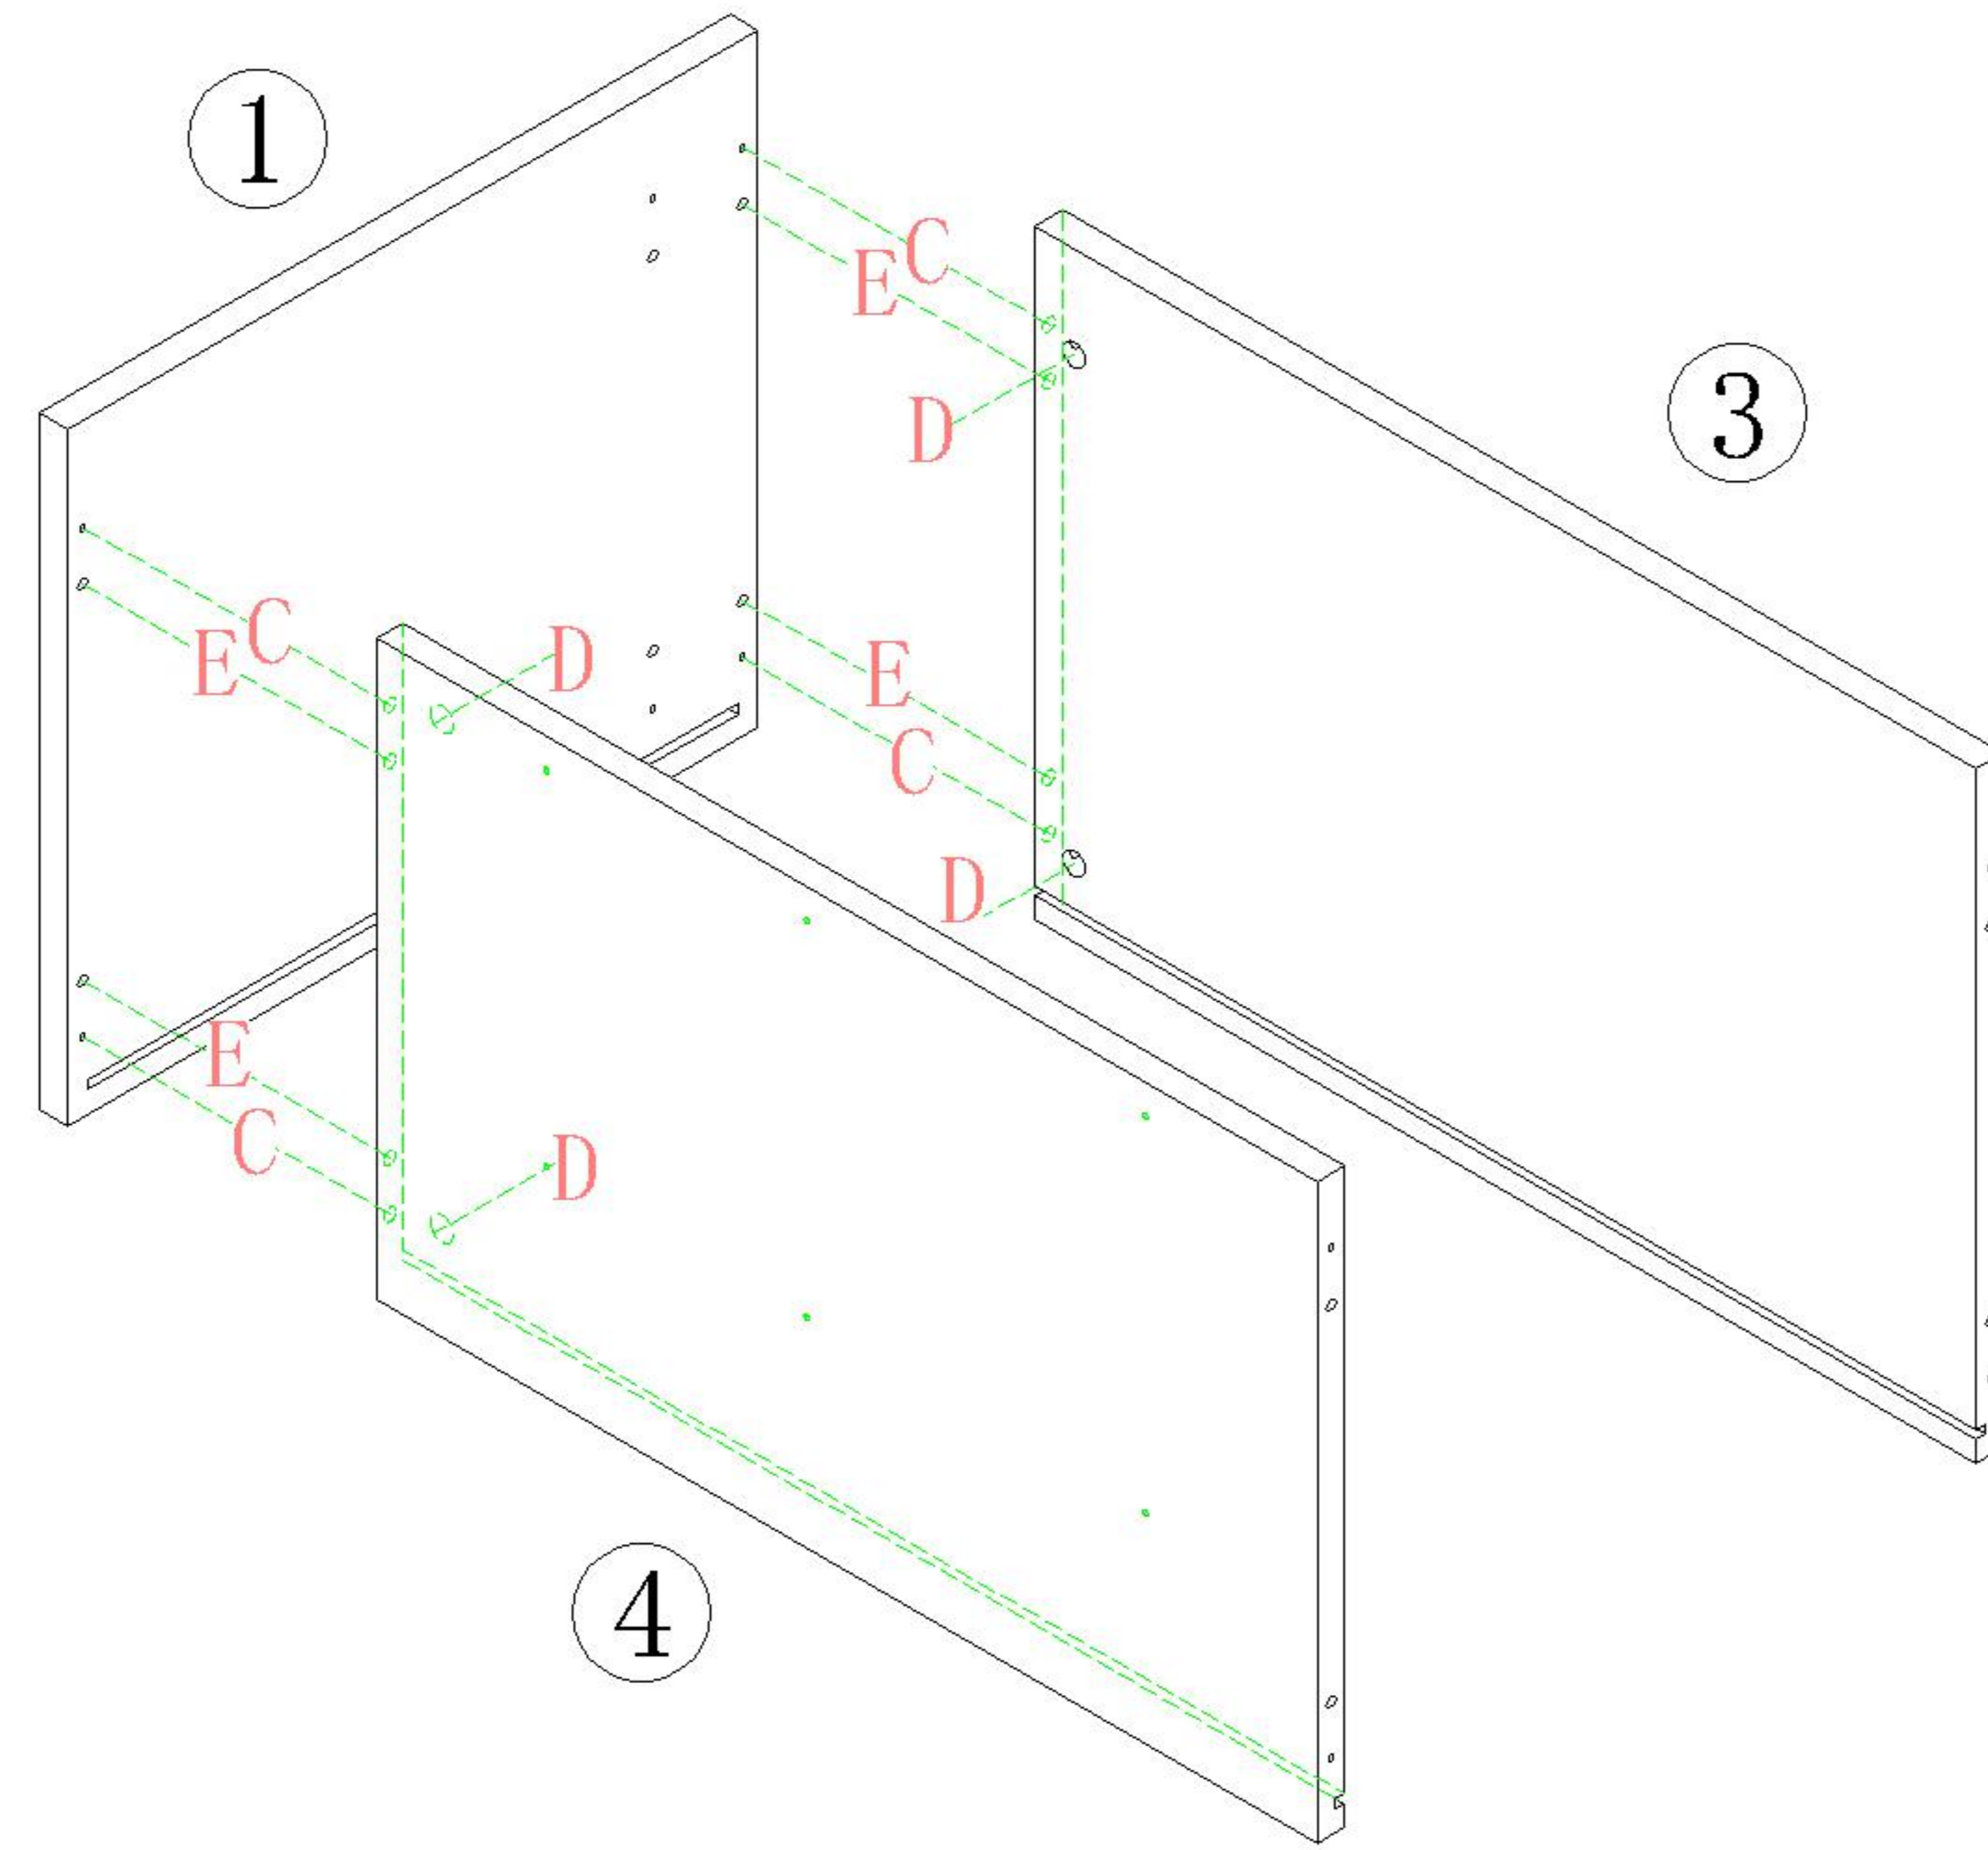
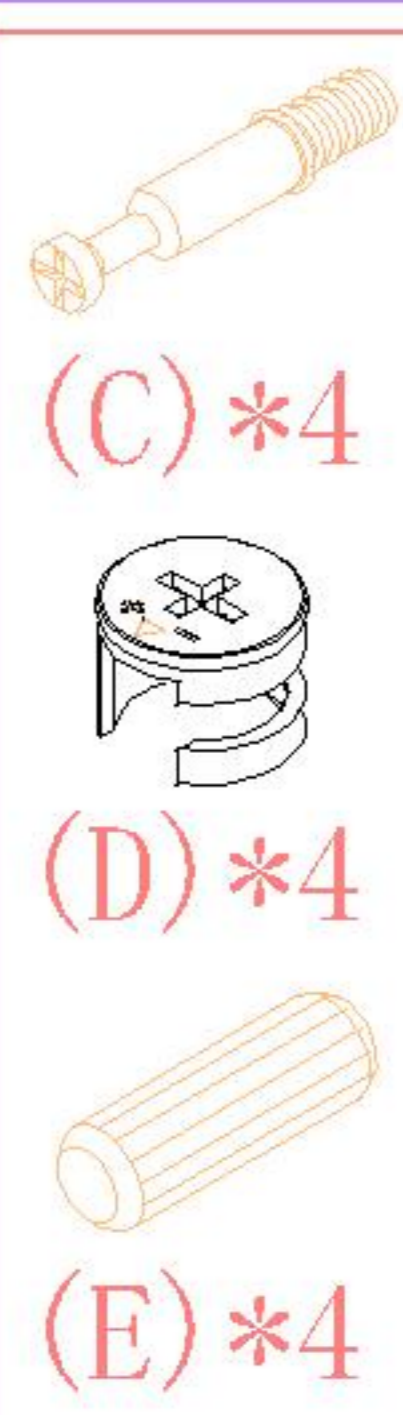


6

8

O12E-A

安装方法/
Installation method

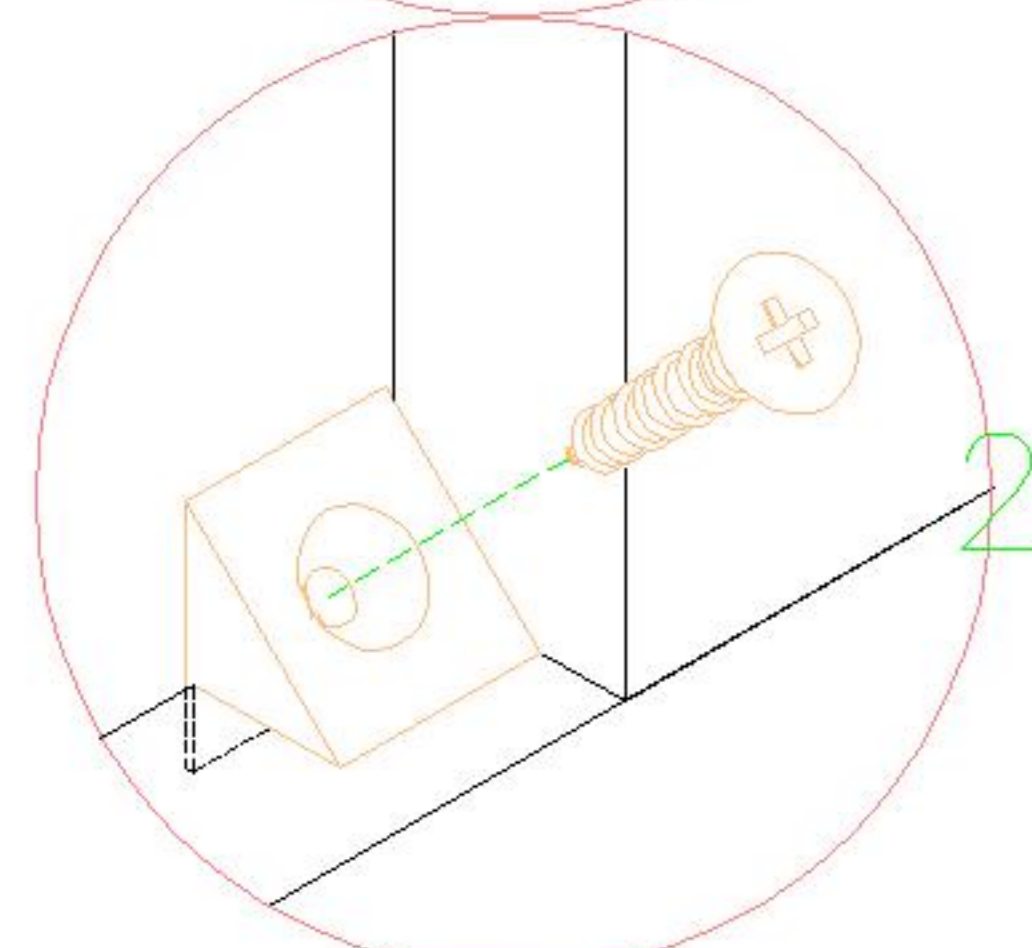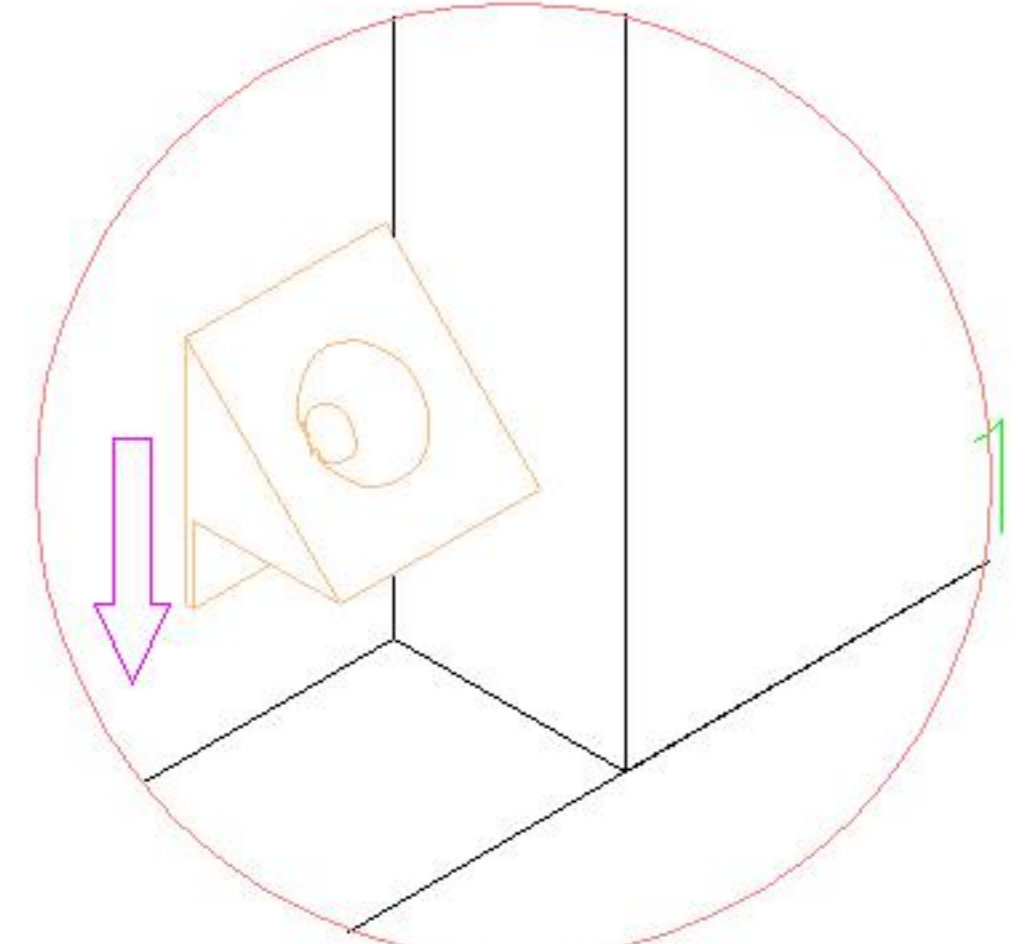


背板扣
Back Plate Buckle-White



(F)*18




(N)*3

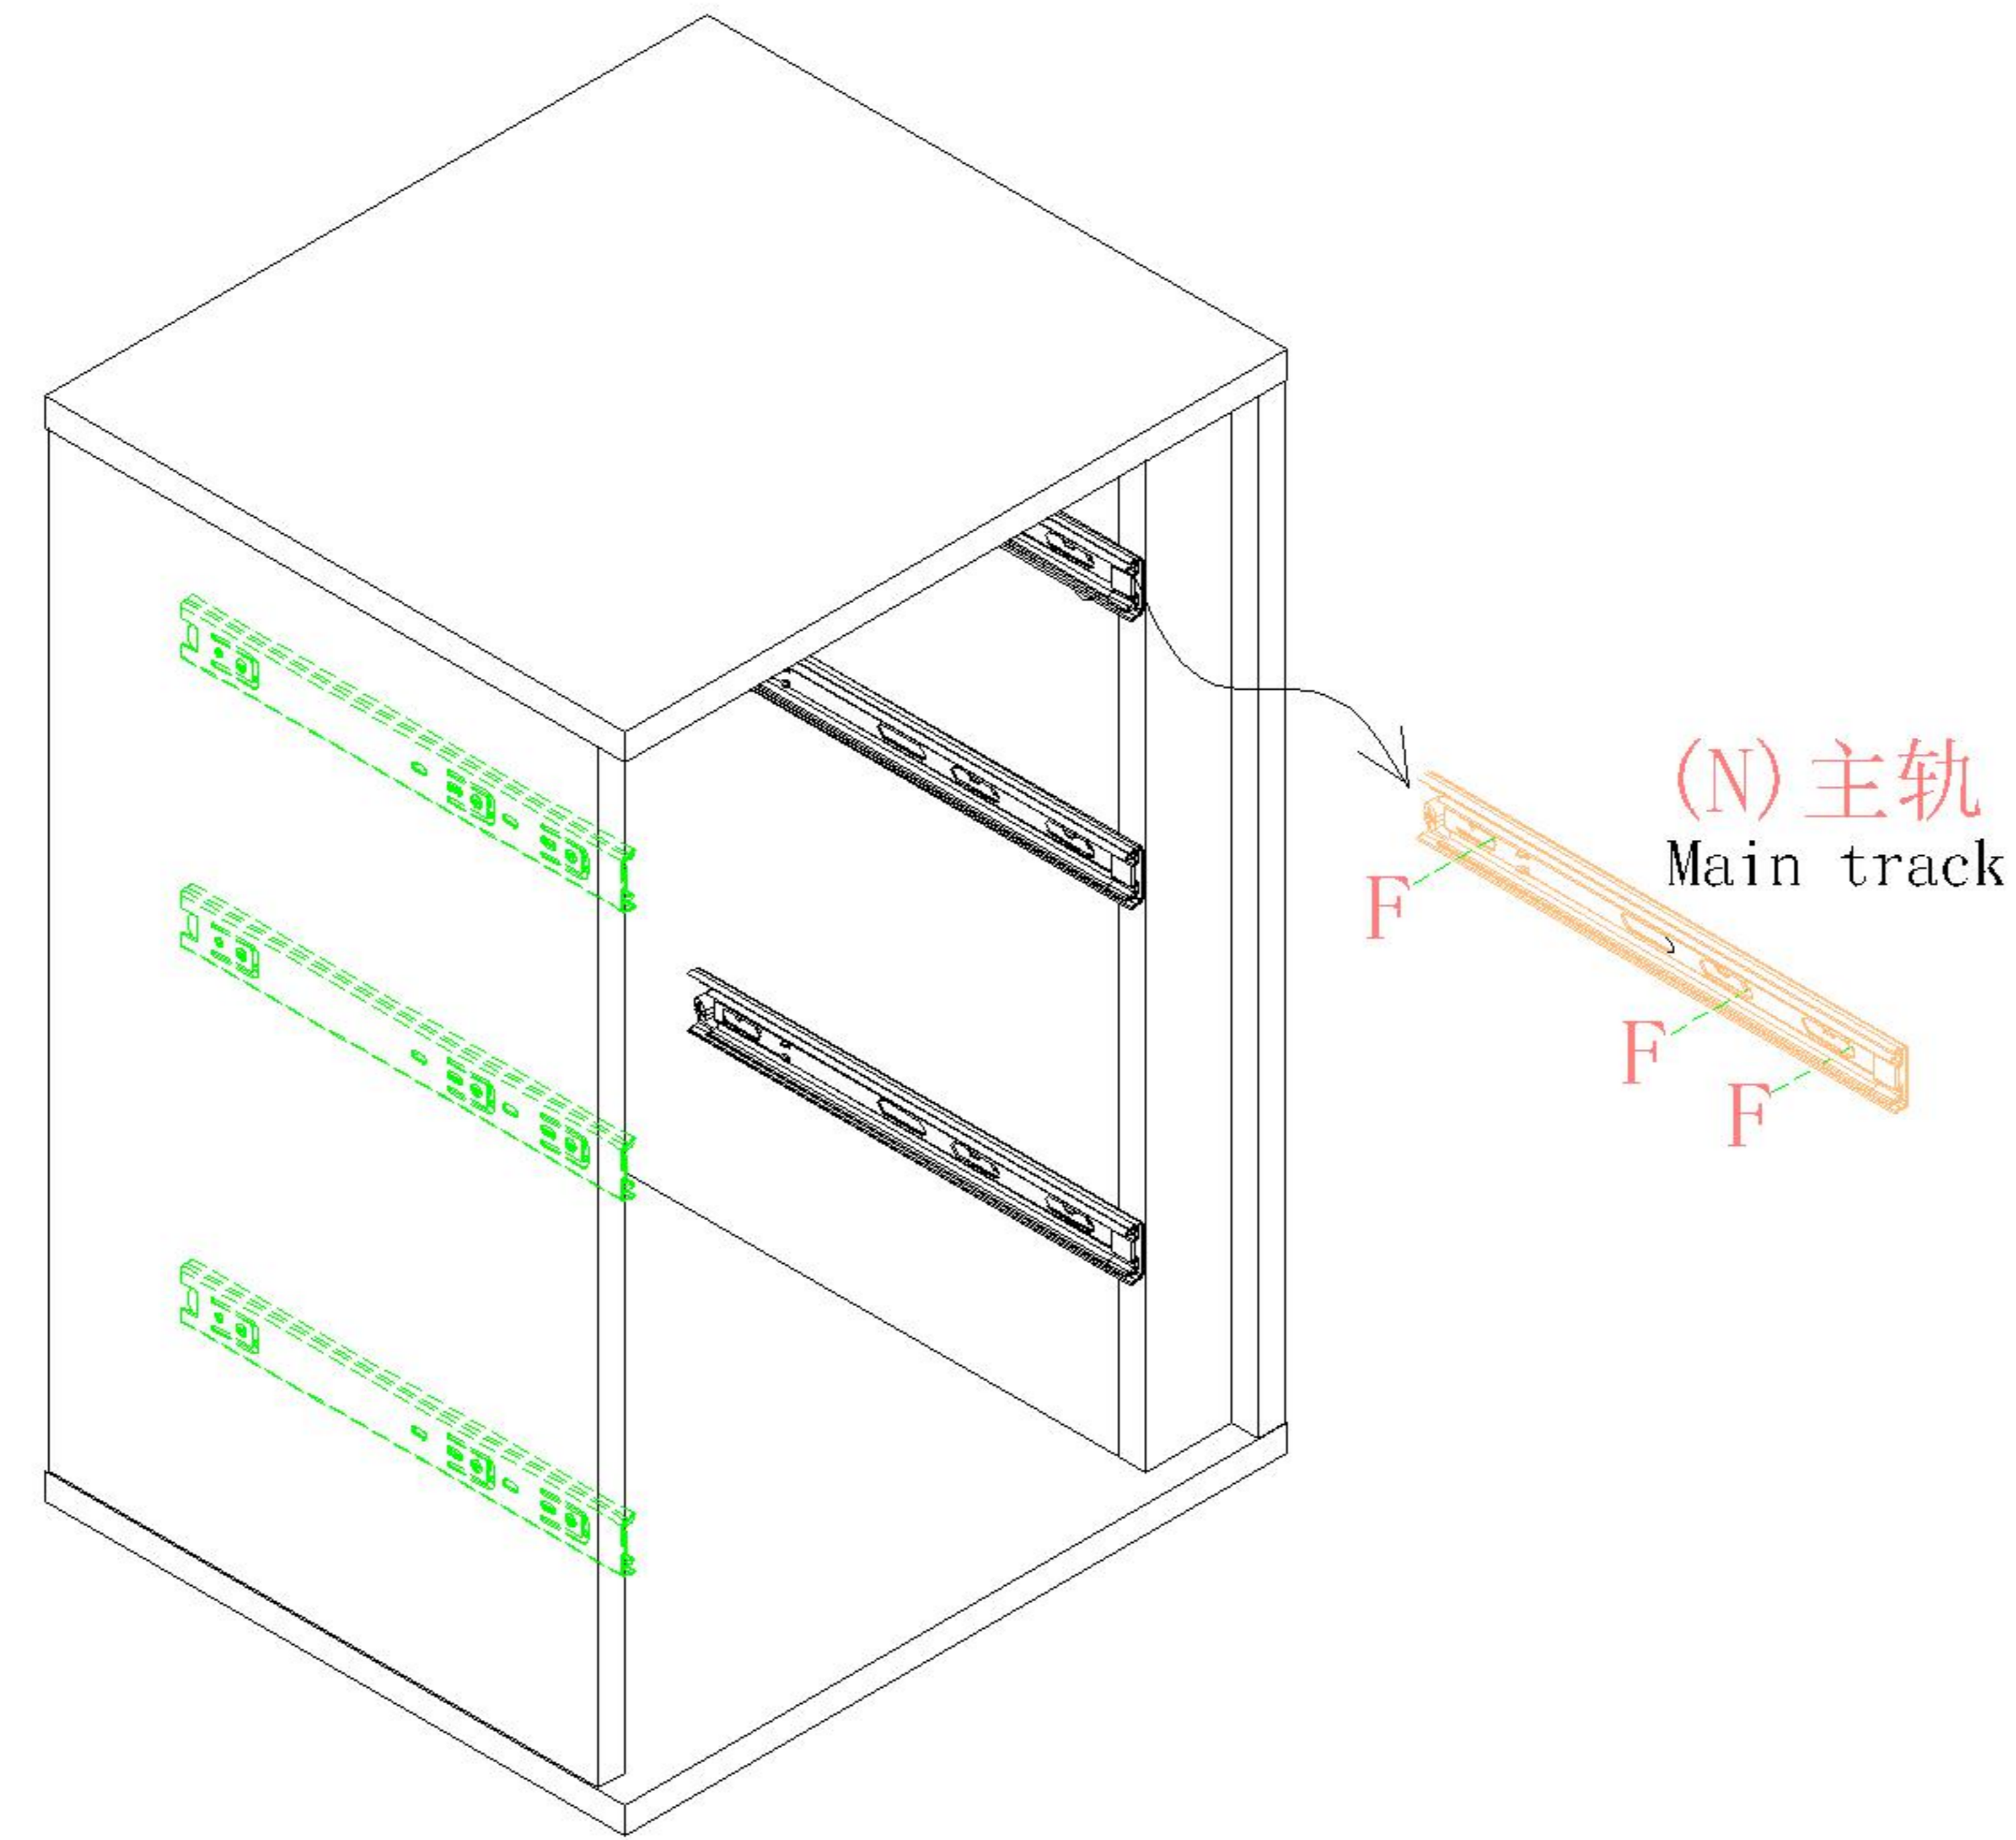


9



10

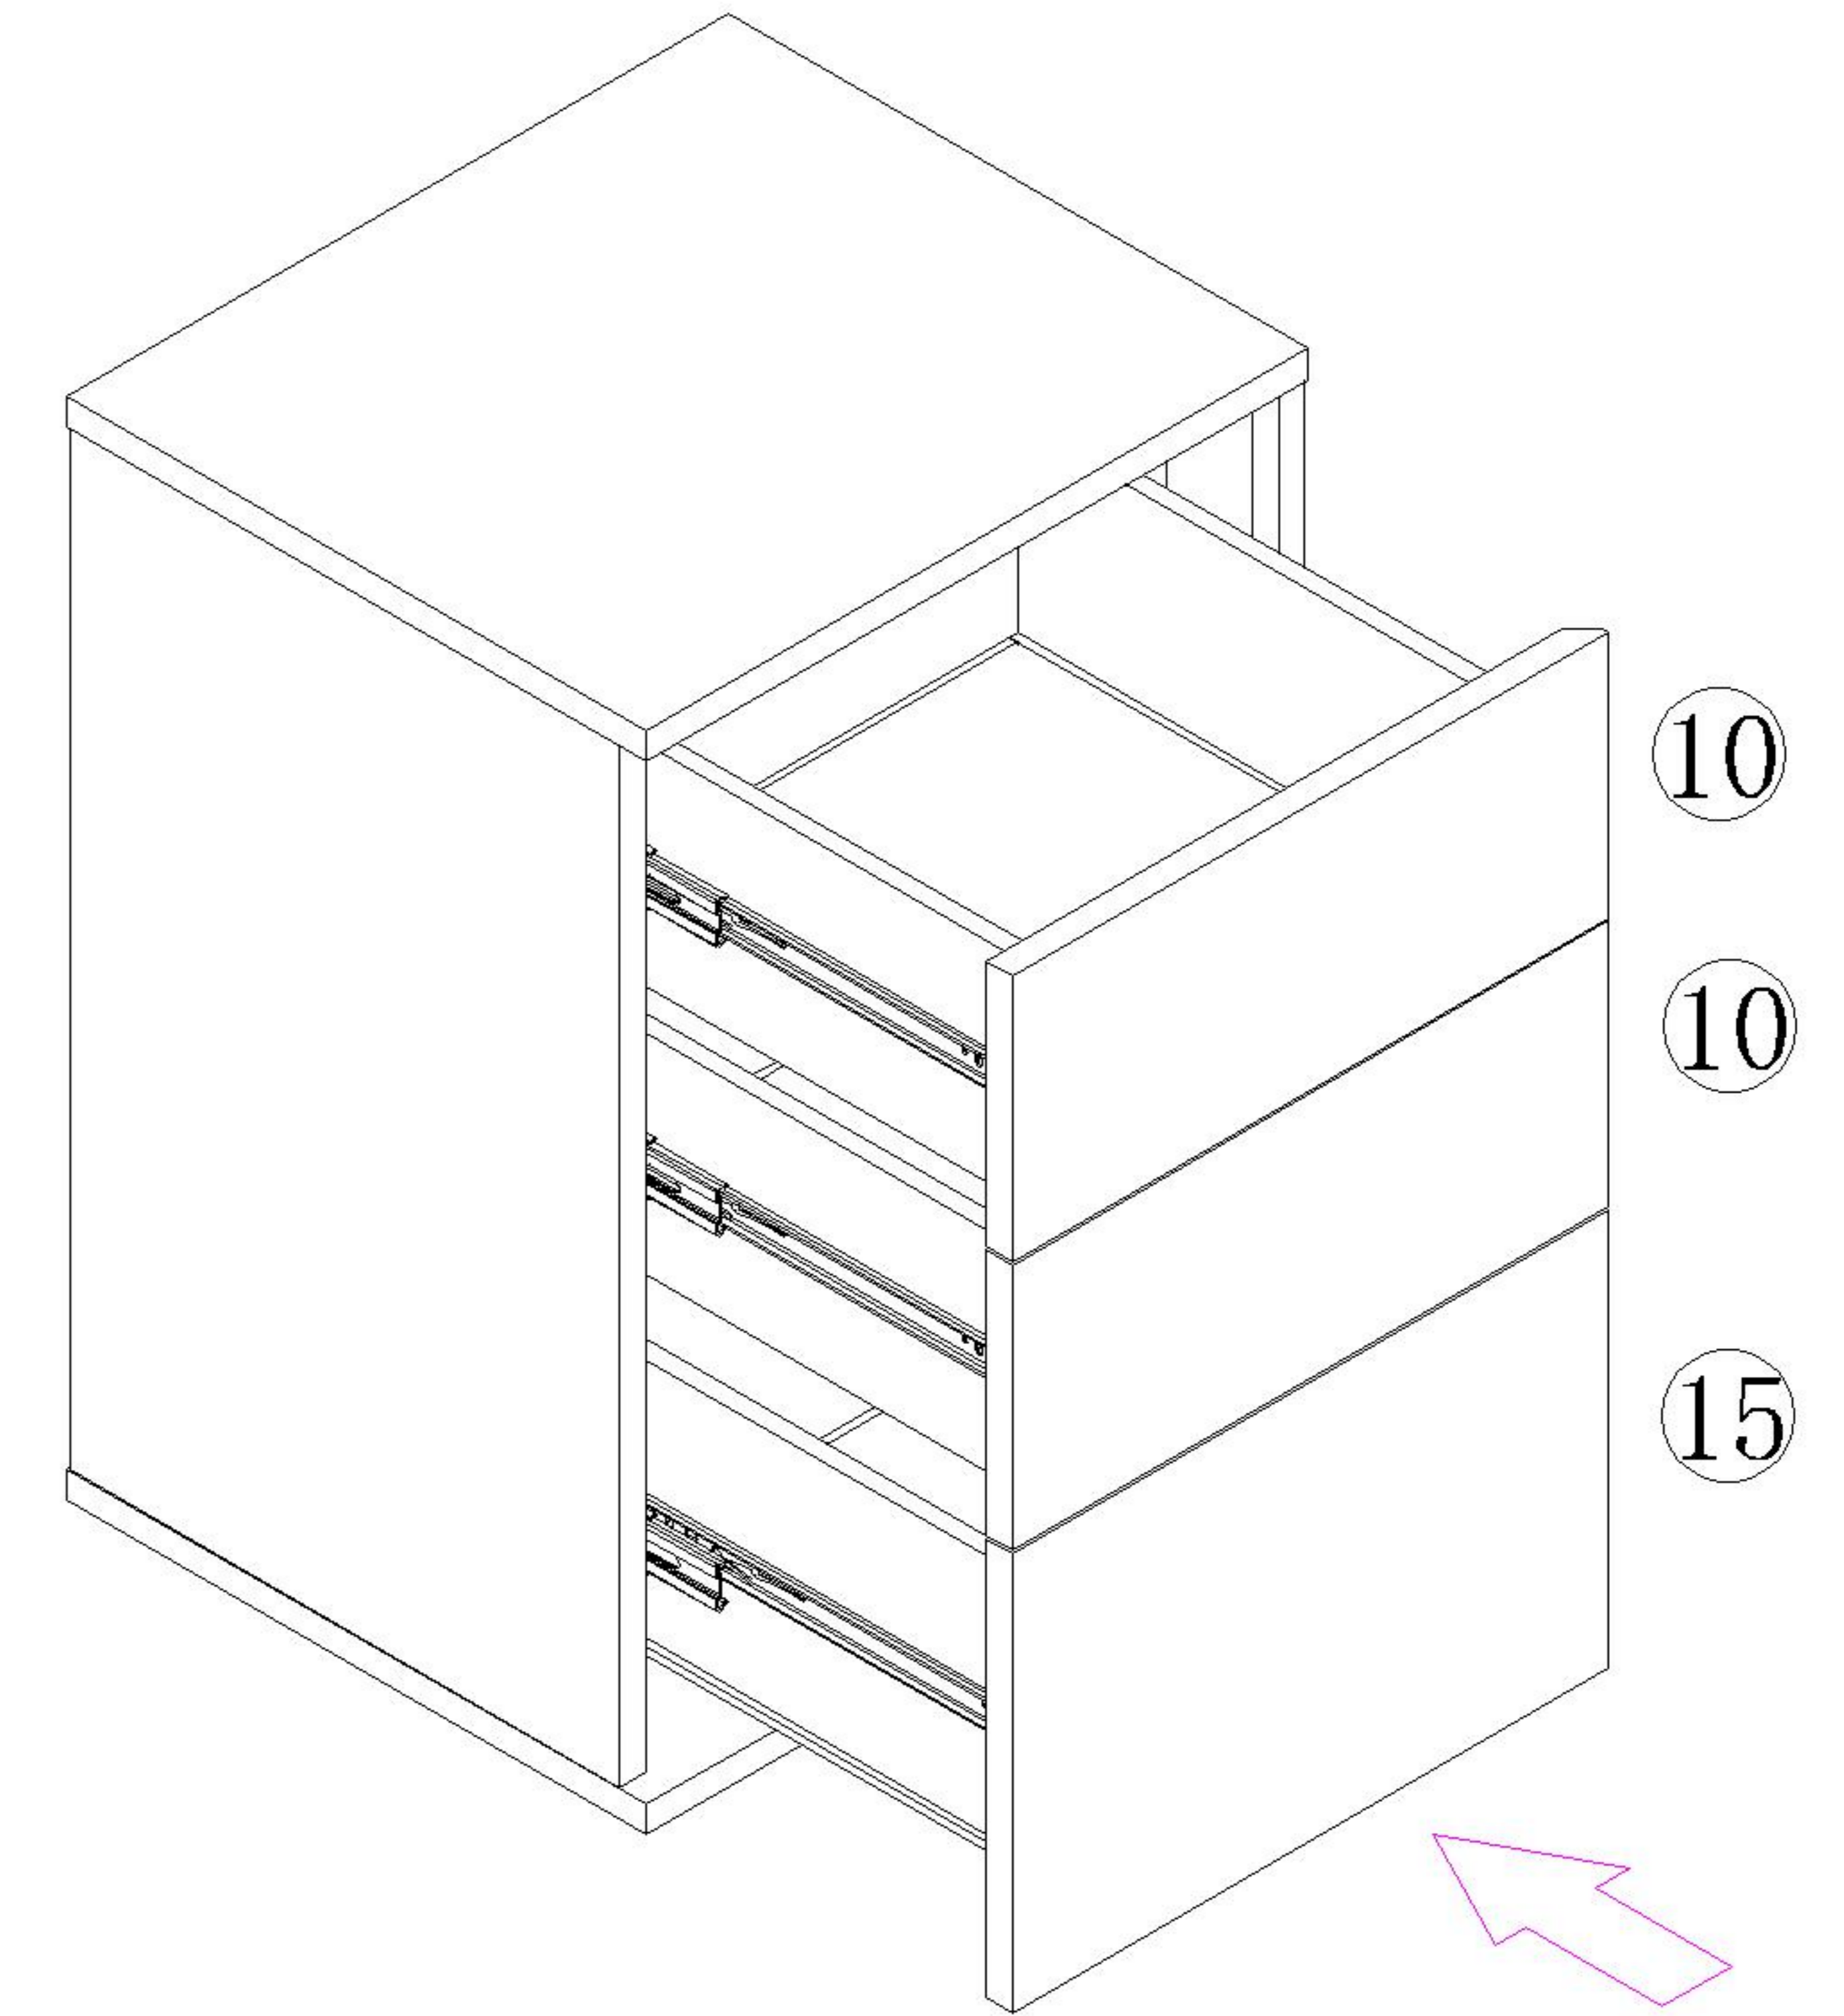

(K)*4

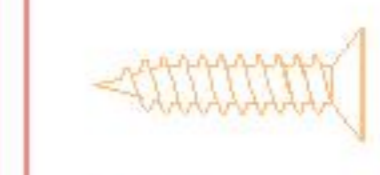


(G)*4

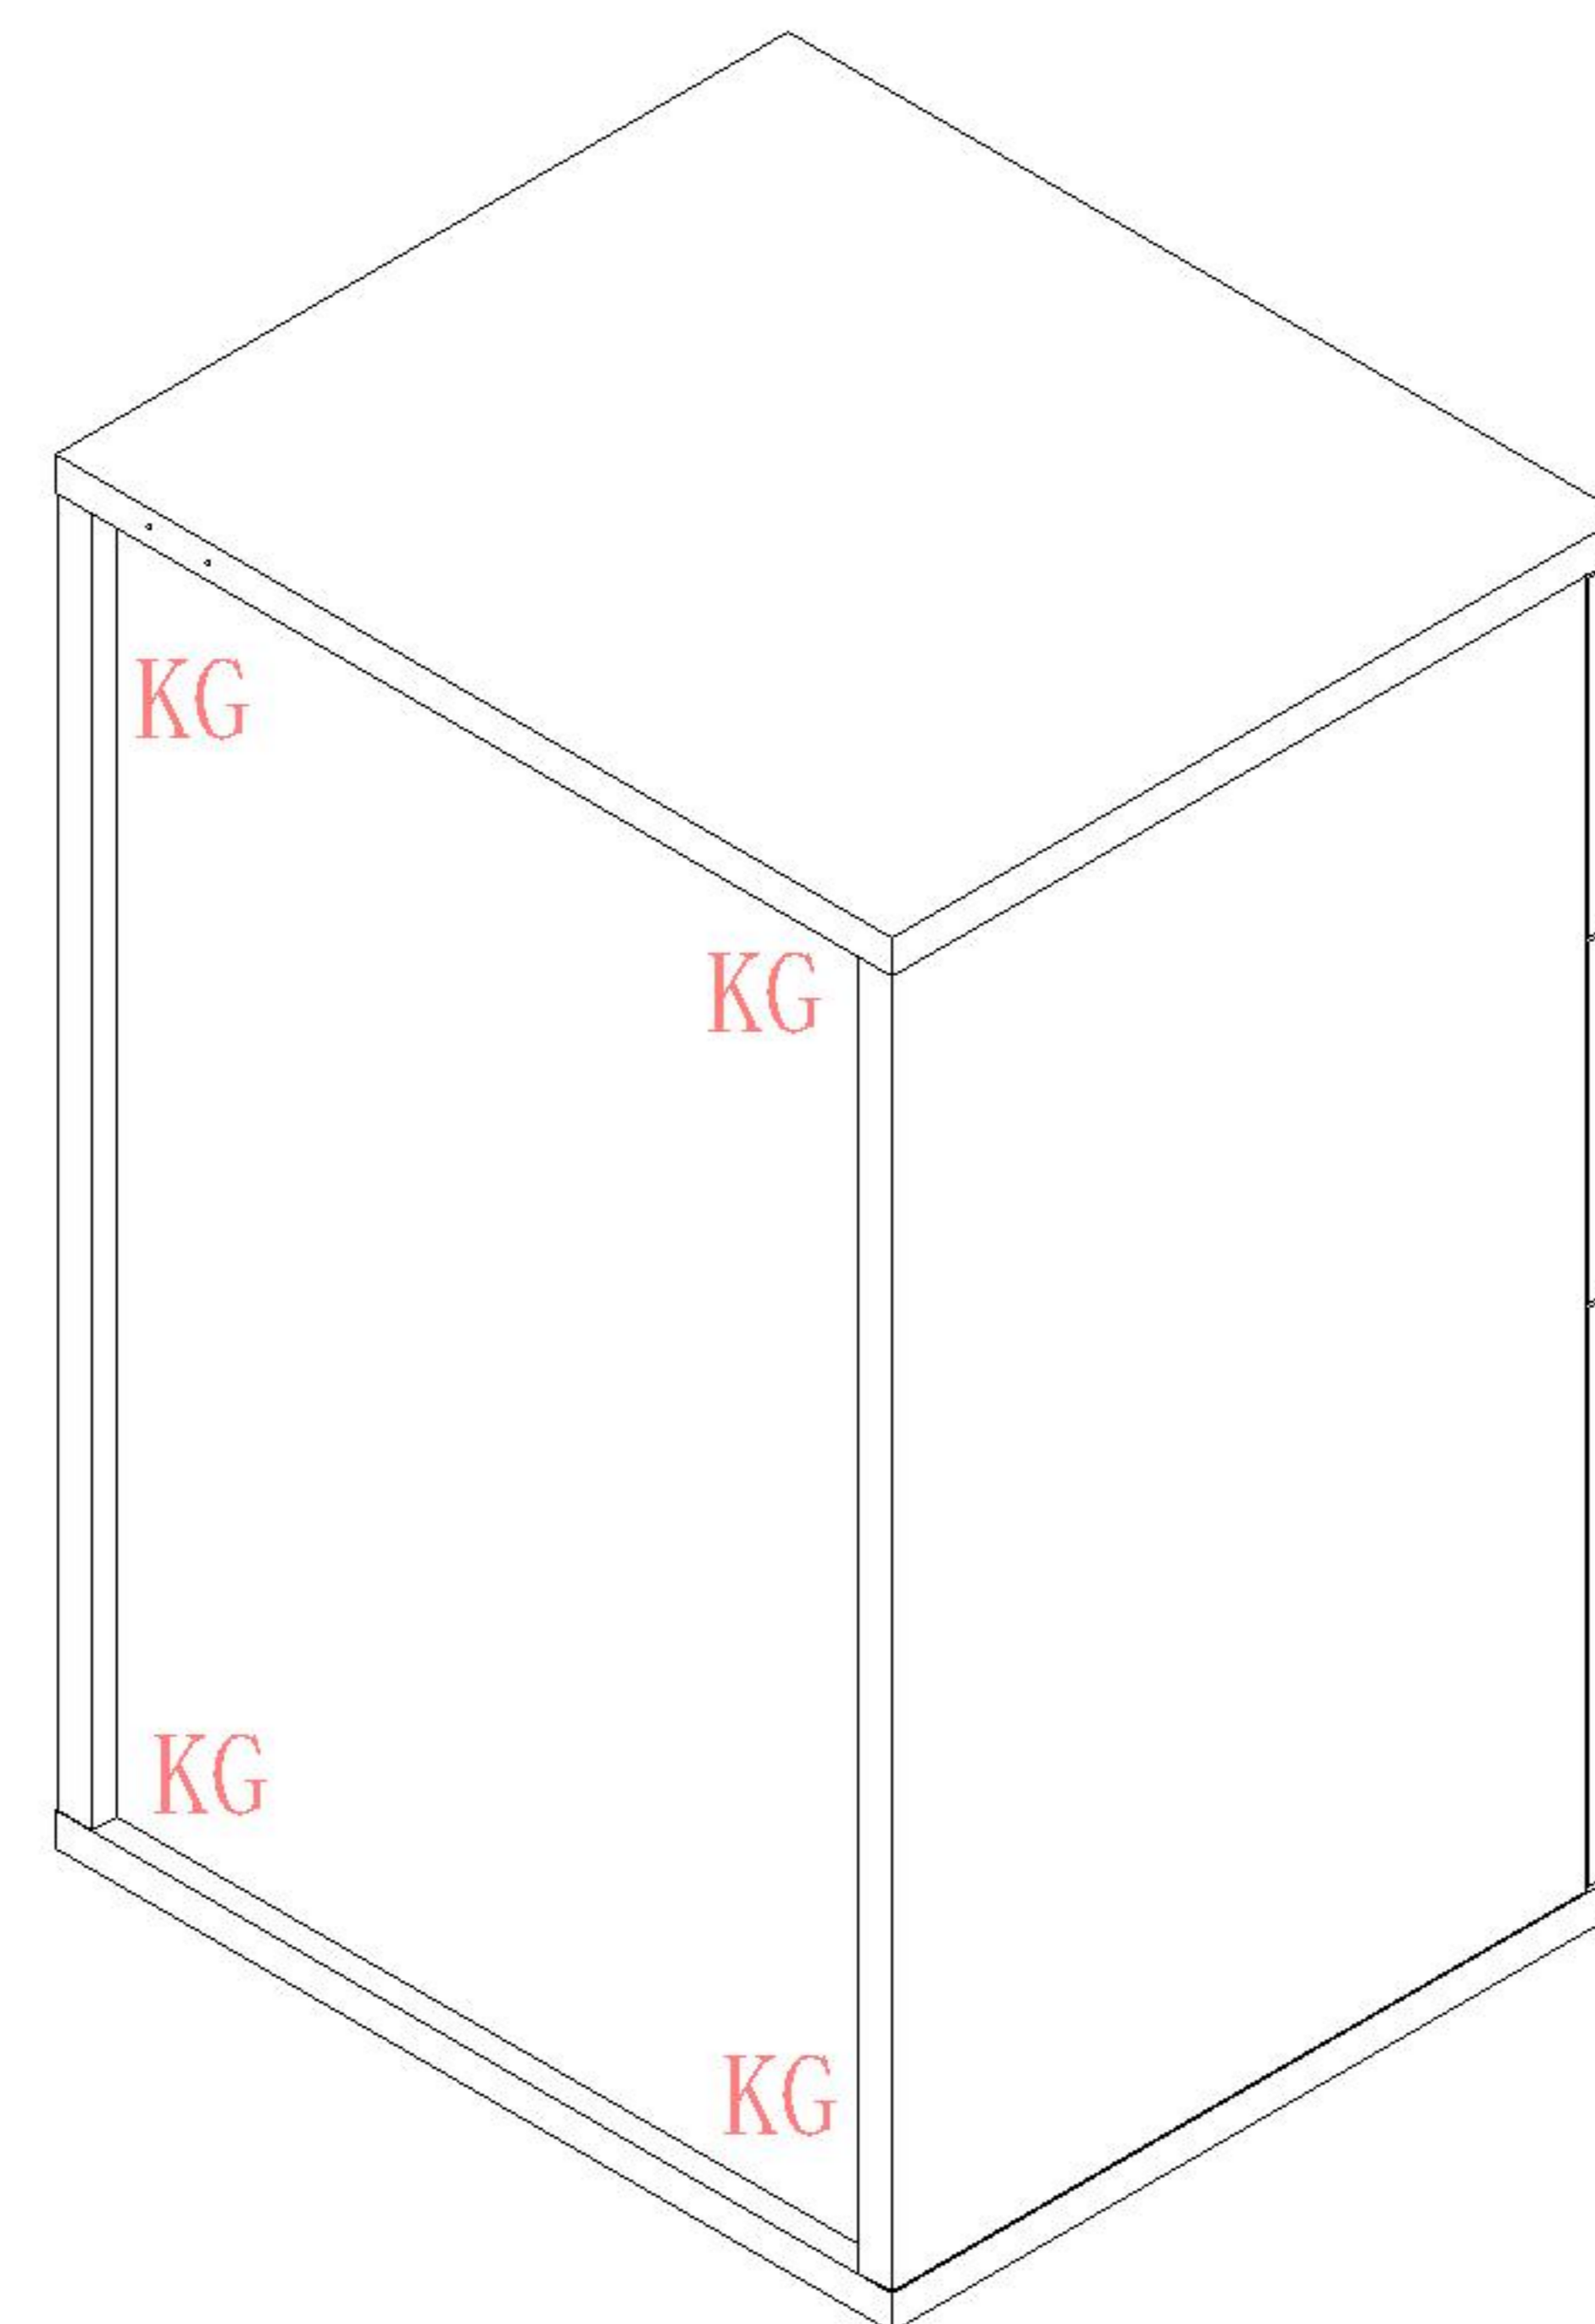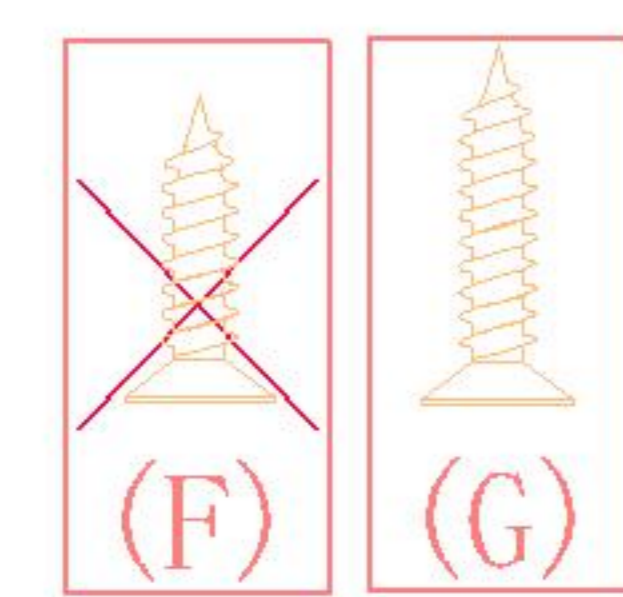


11


12

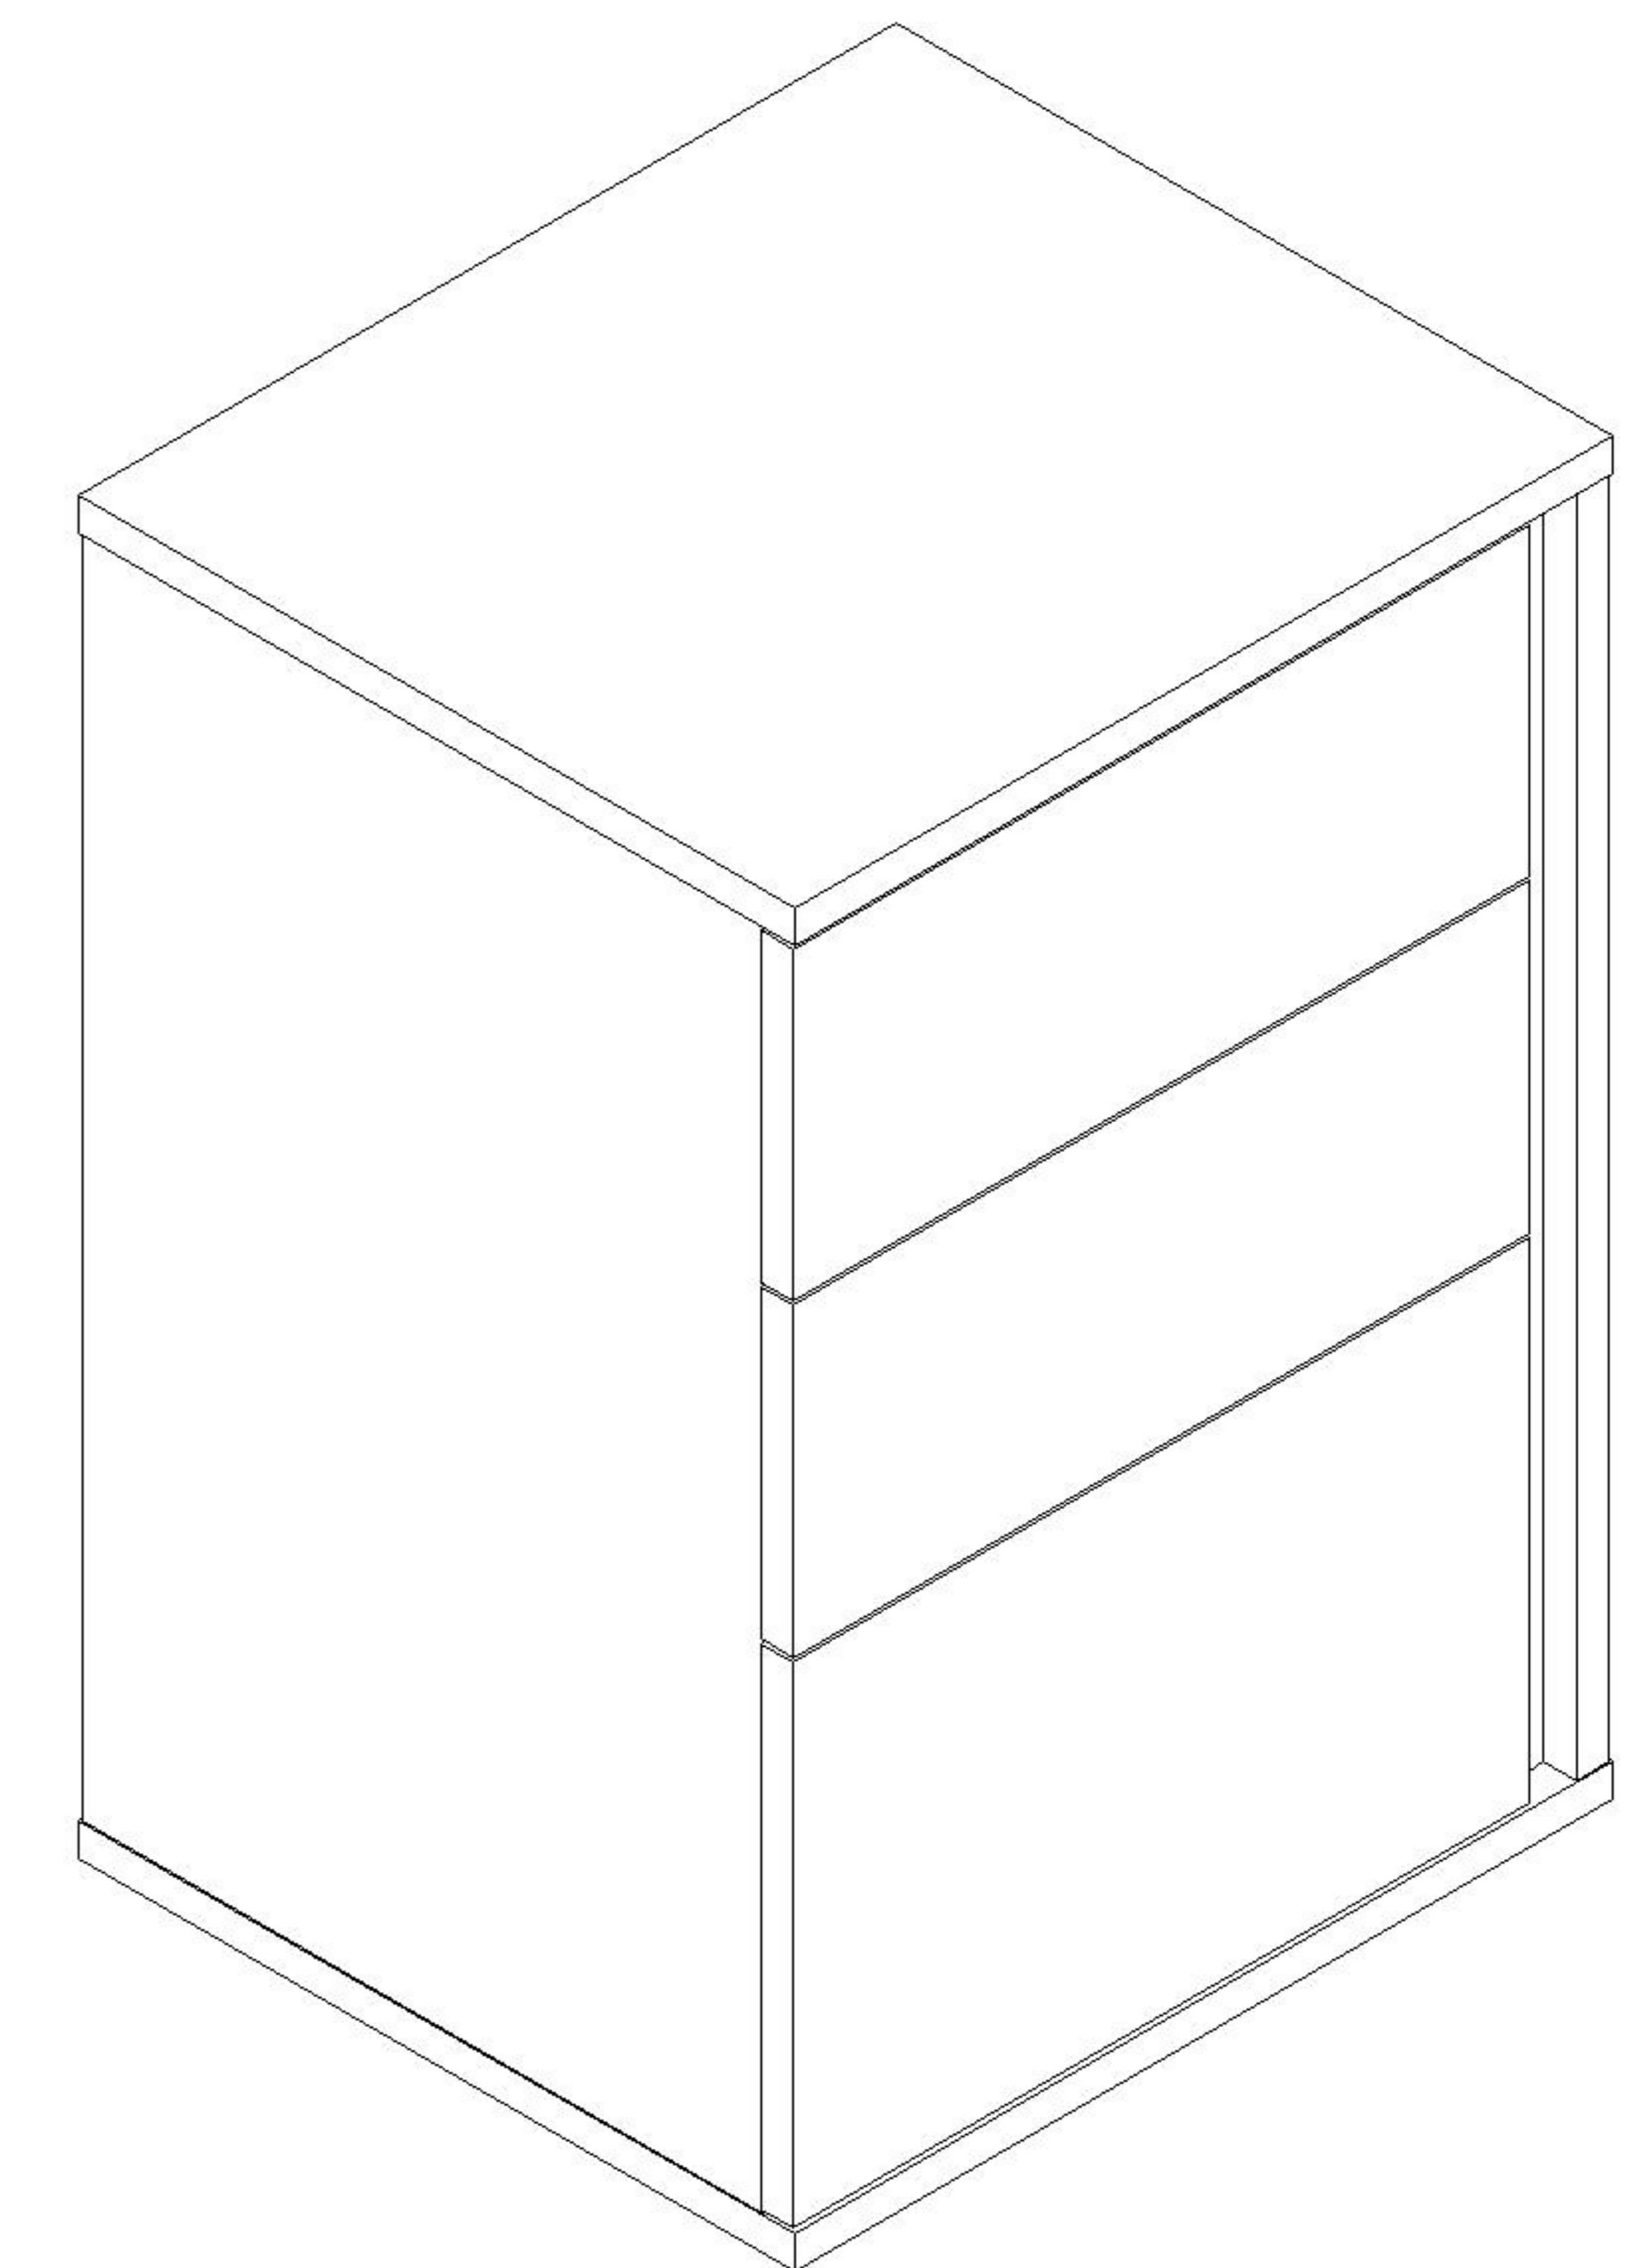

(0)*1

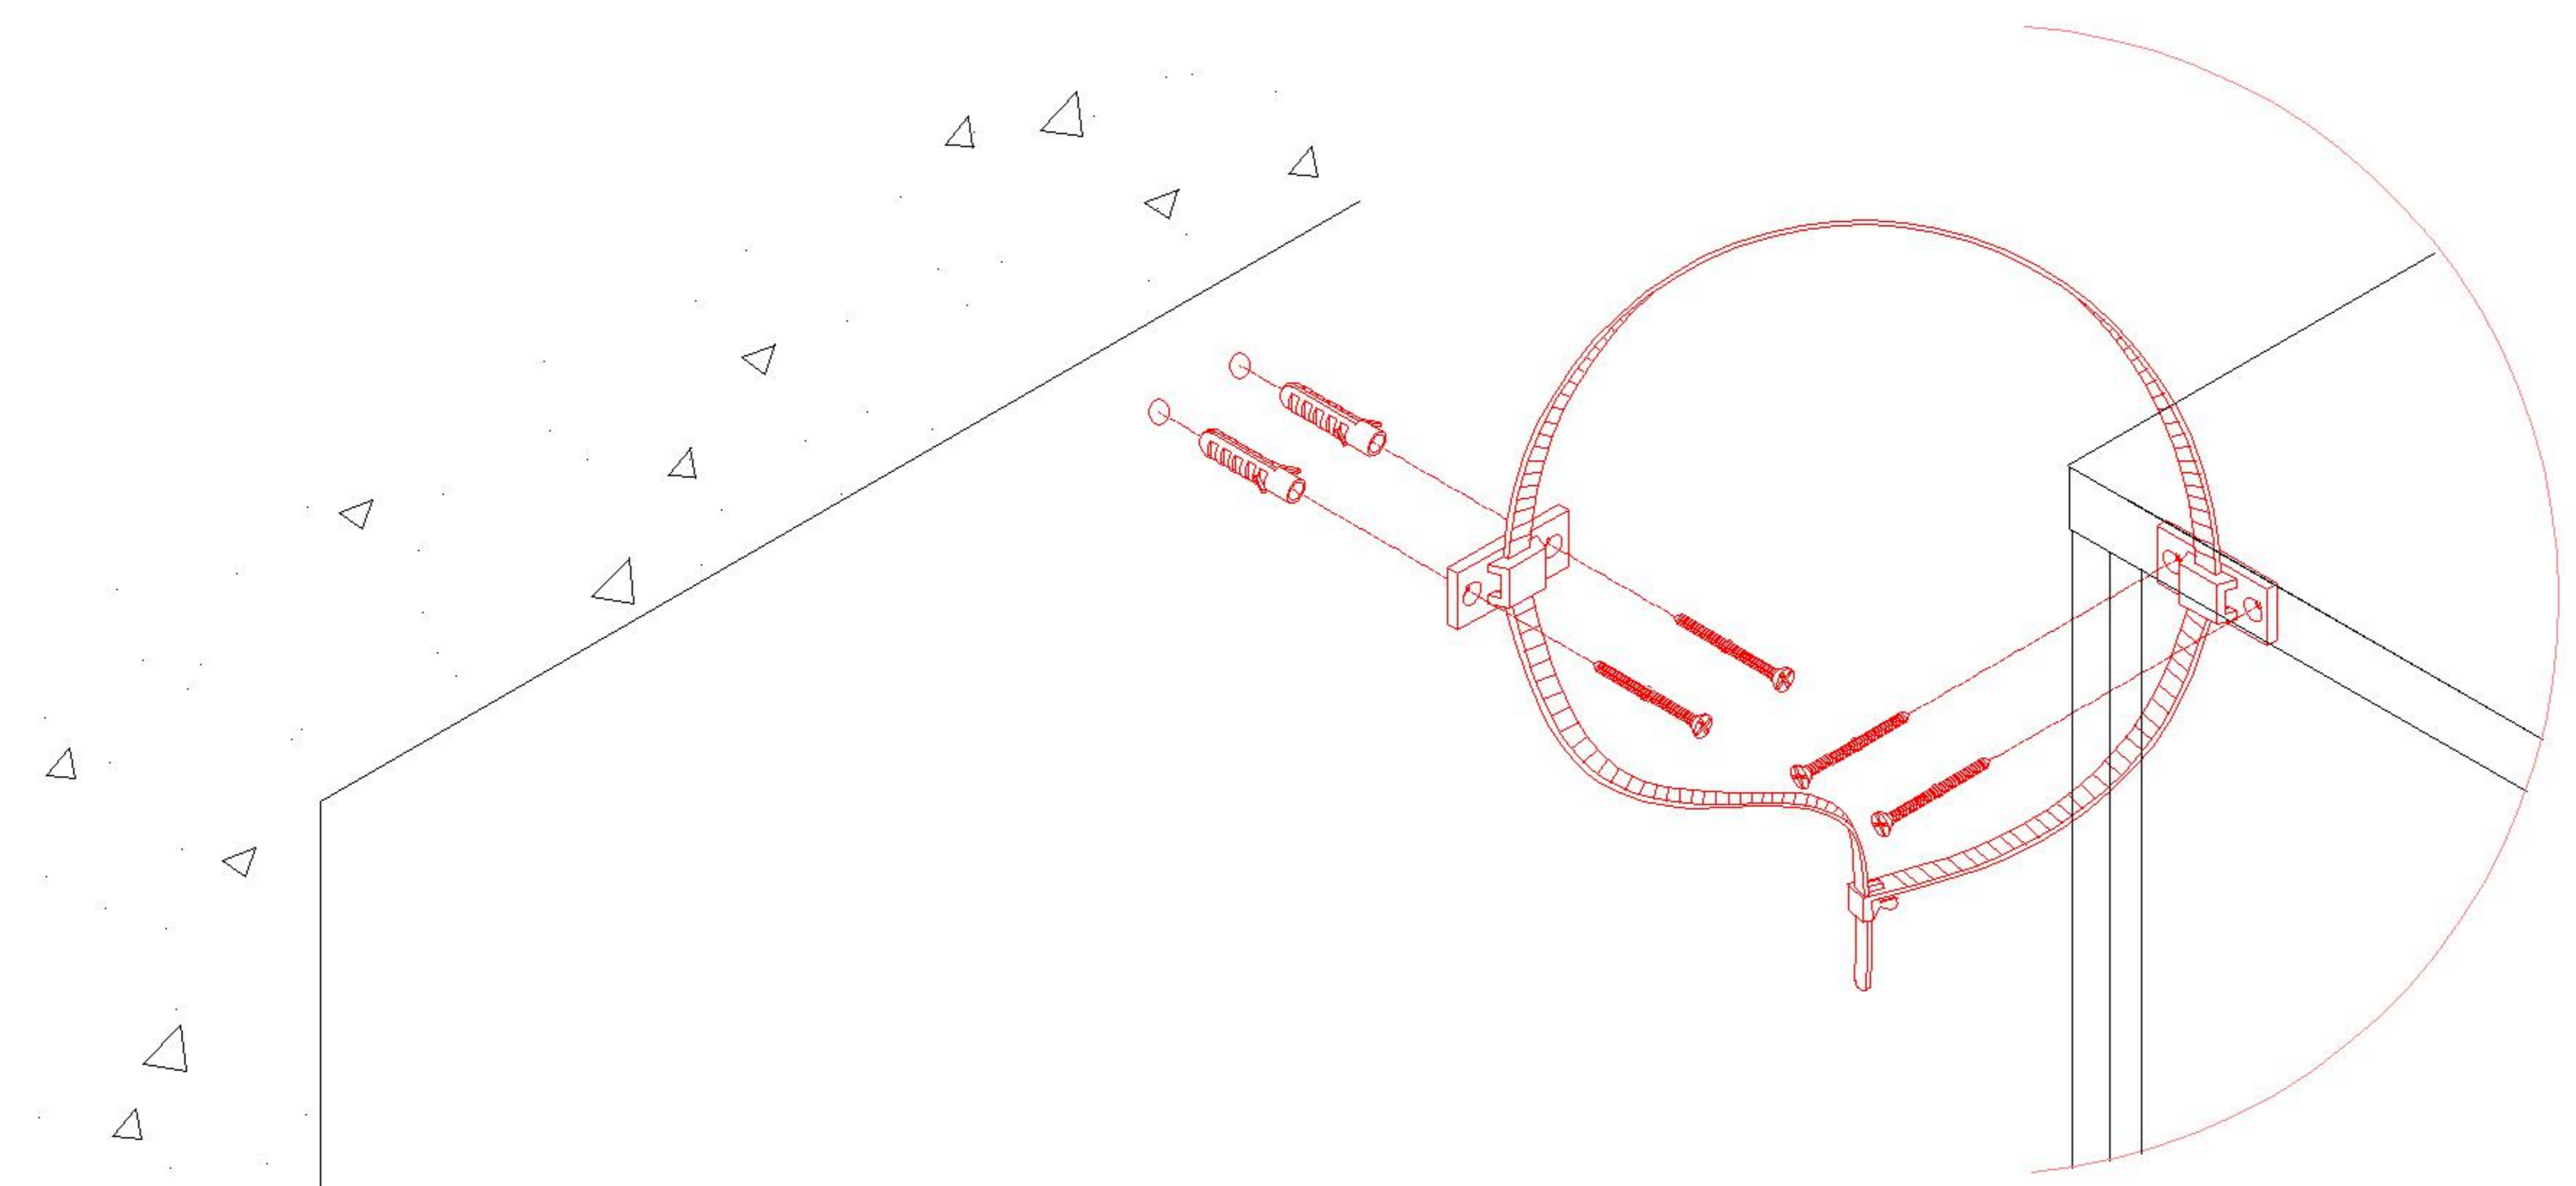

0处放大图
Enlarged drawing

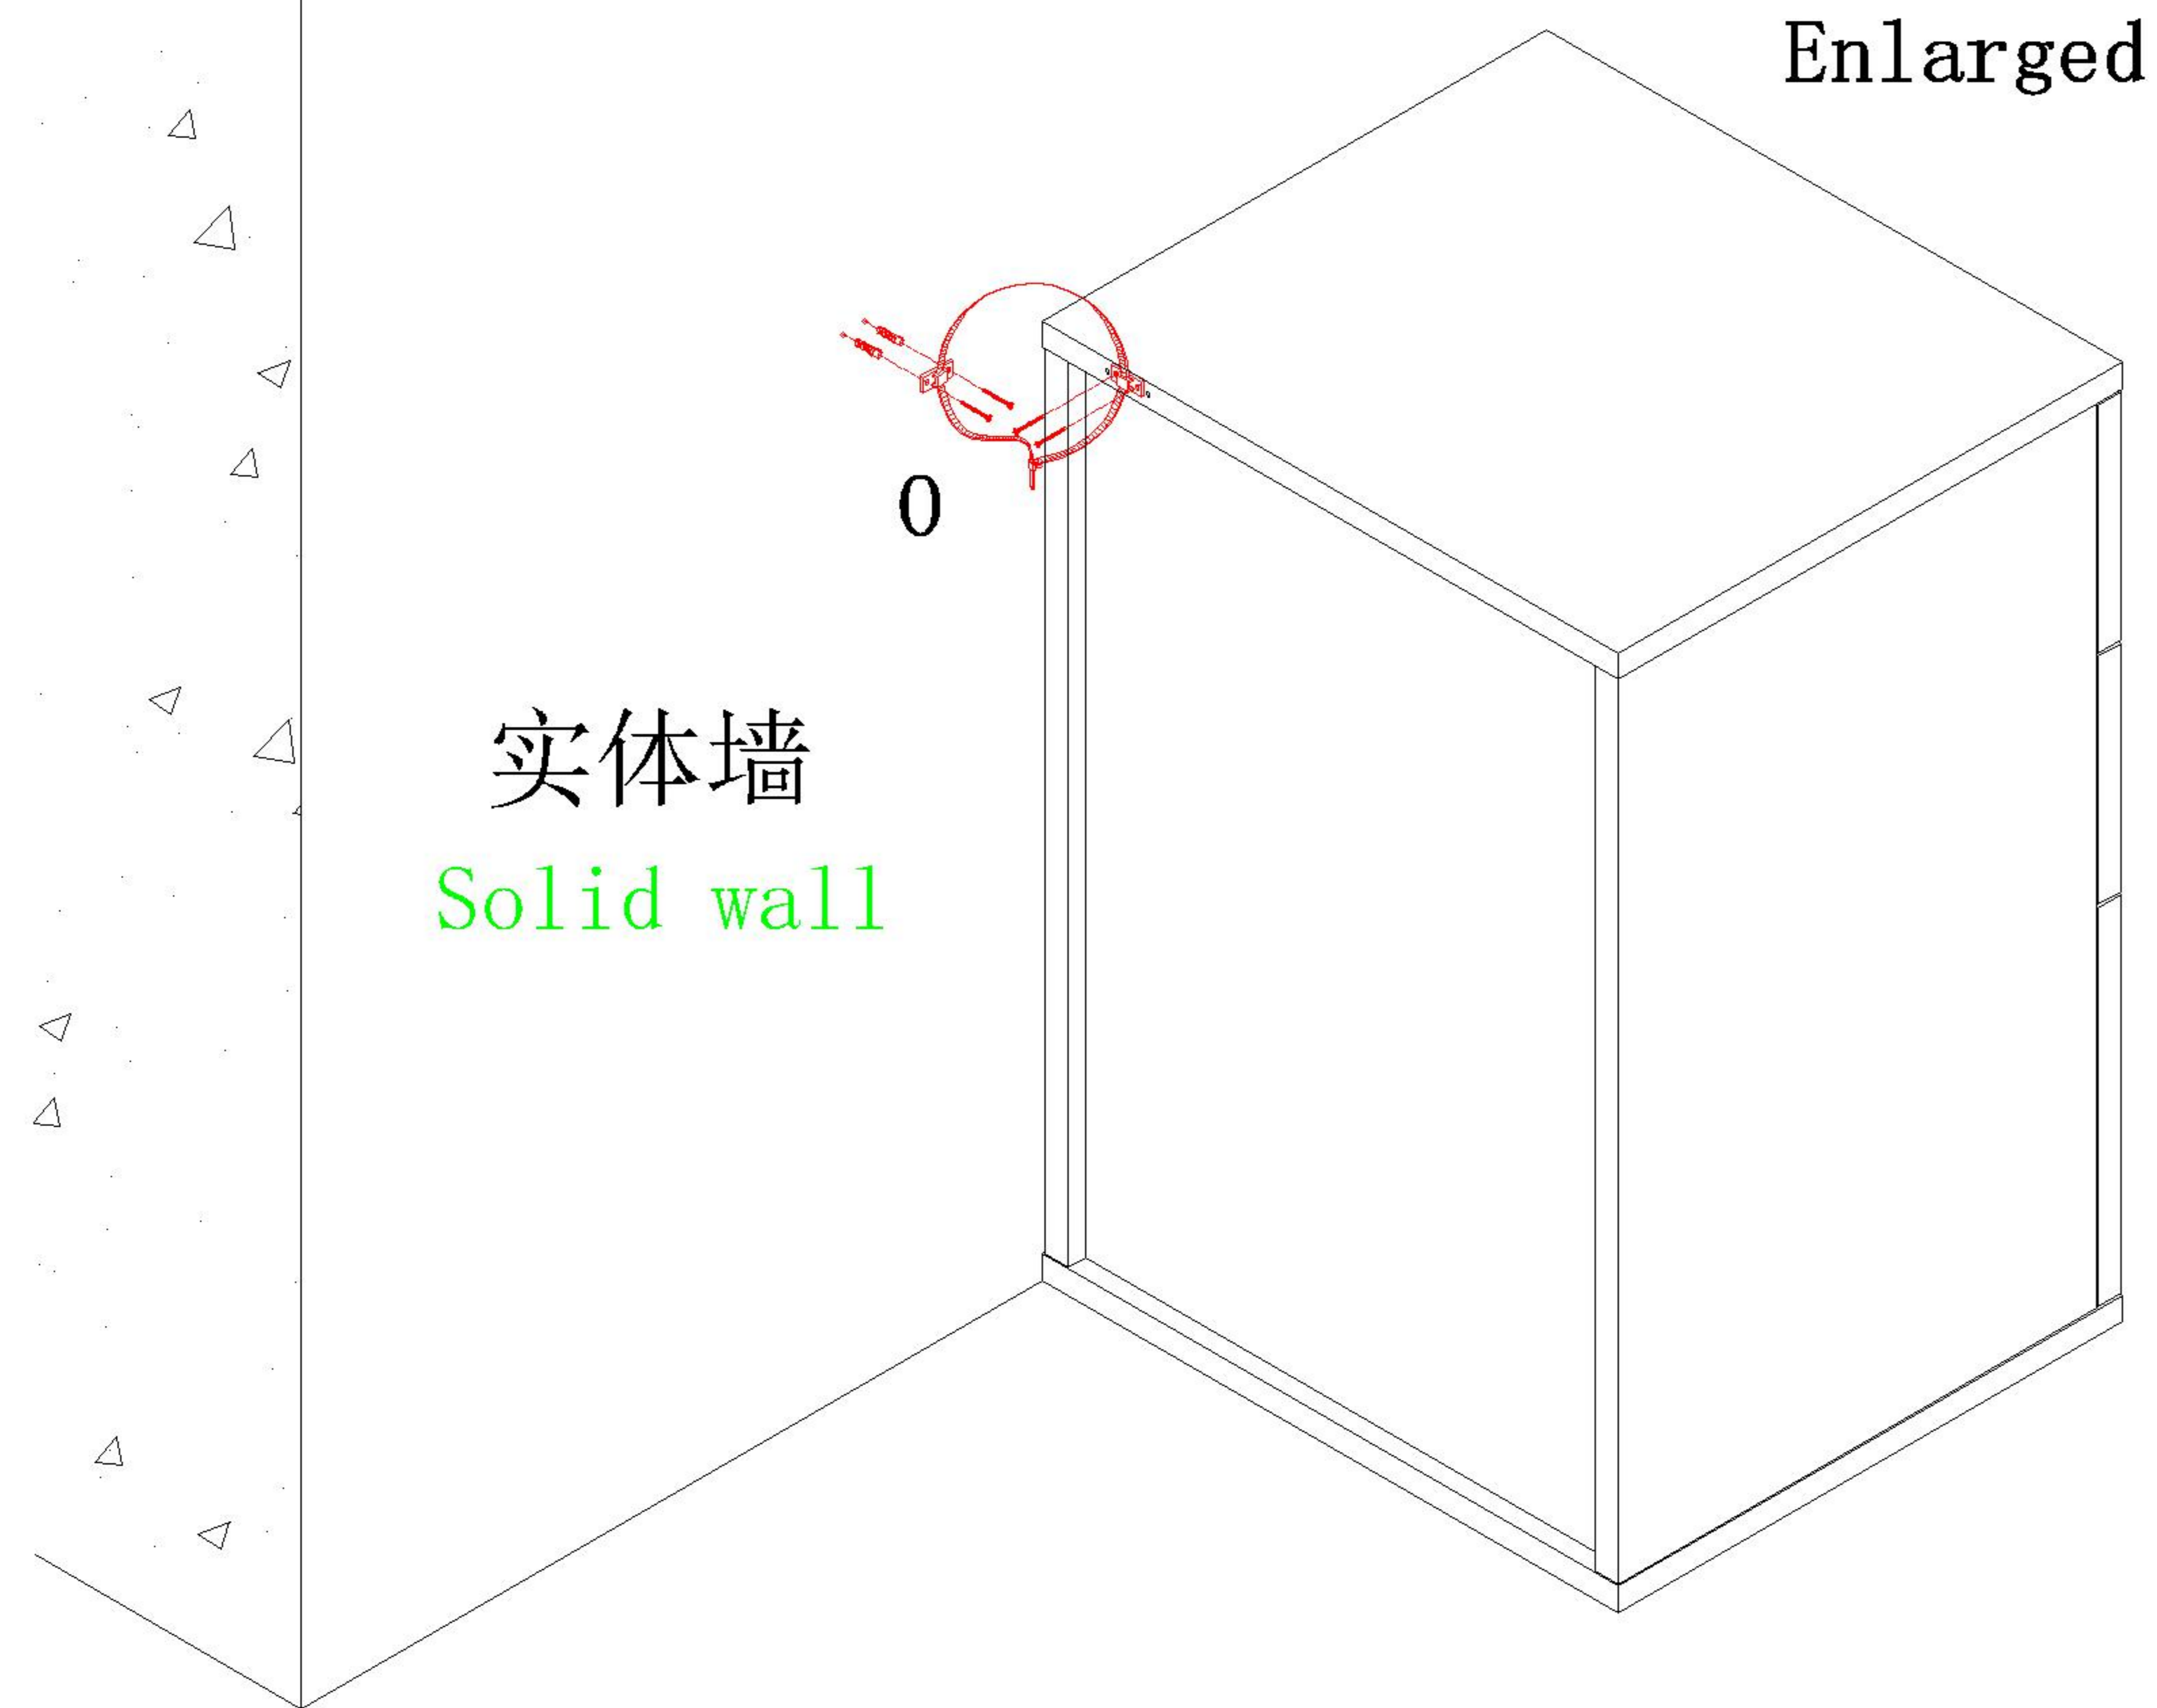

实体墙
Solid wall

